C702

14A005

Y17
Speaker, left rear
(18808)

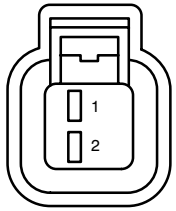

F02069

Pin	Circuit	Circuit function
1	827 (TN/WH)	Speaker, left rear (18808) +
2	801 (TN/YE)	Speaker, left rear (18808) –

C704

14A005

M64
Door lock actuator,
left rear (218A43)

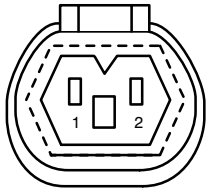

F02227

Pin	Circuit	Circuit function
1	118 (PK/OG)	Door unlock, output
2	117 (PK/BK)	Door lock, output

C703

14A005

M116
Power window mo-
tor, left rear (23394)



F02073

Pin	Circuit	Circuit function
1	884 (YE/BK)	Window motor feed, Down
2	885 (YE/LB)	Window motor feed, Up

C715

14A005

N237
Door ajar switch,
driver side rear
(14018)

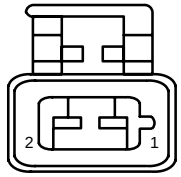

F02379

Pin	Circuit	Circuit function
1	363 (BK/LB)	Door ajar switch, left rear, signal
2	57 (BK)	Ground