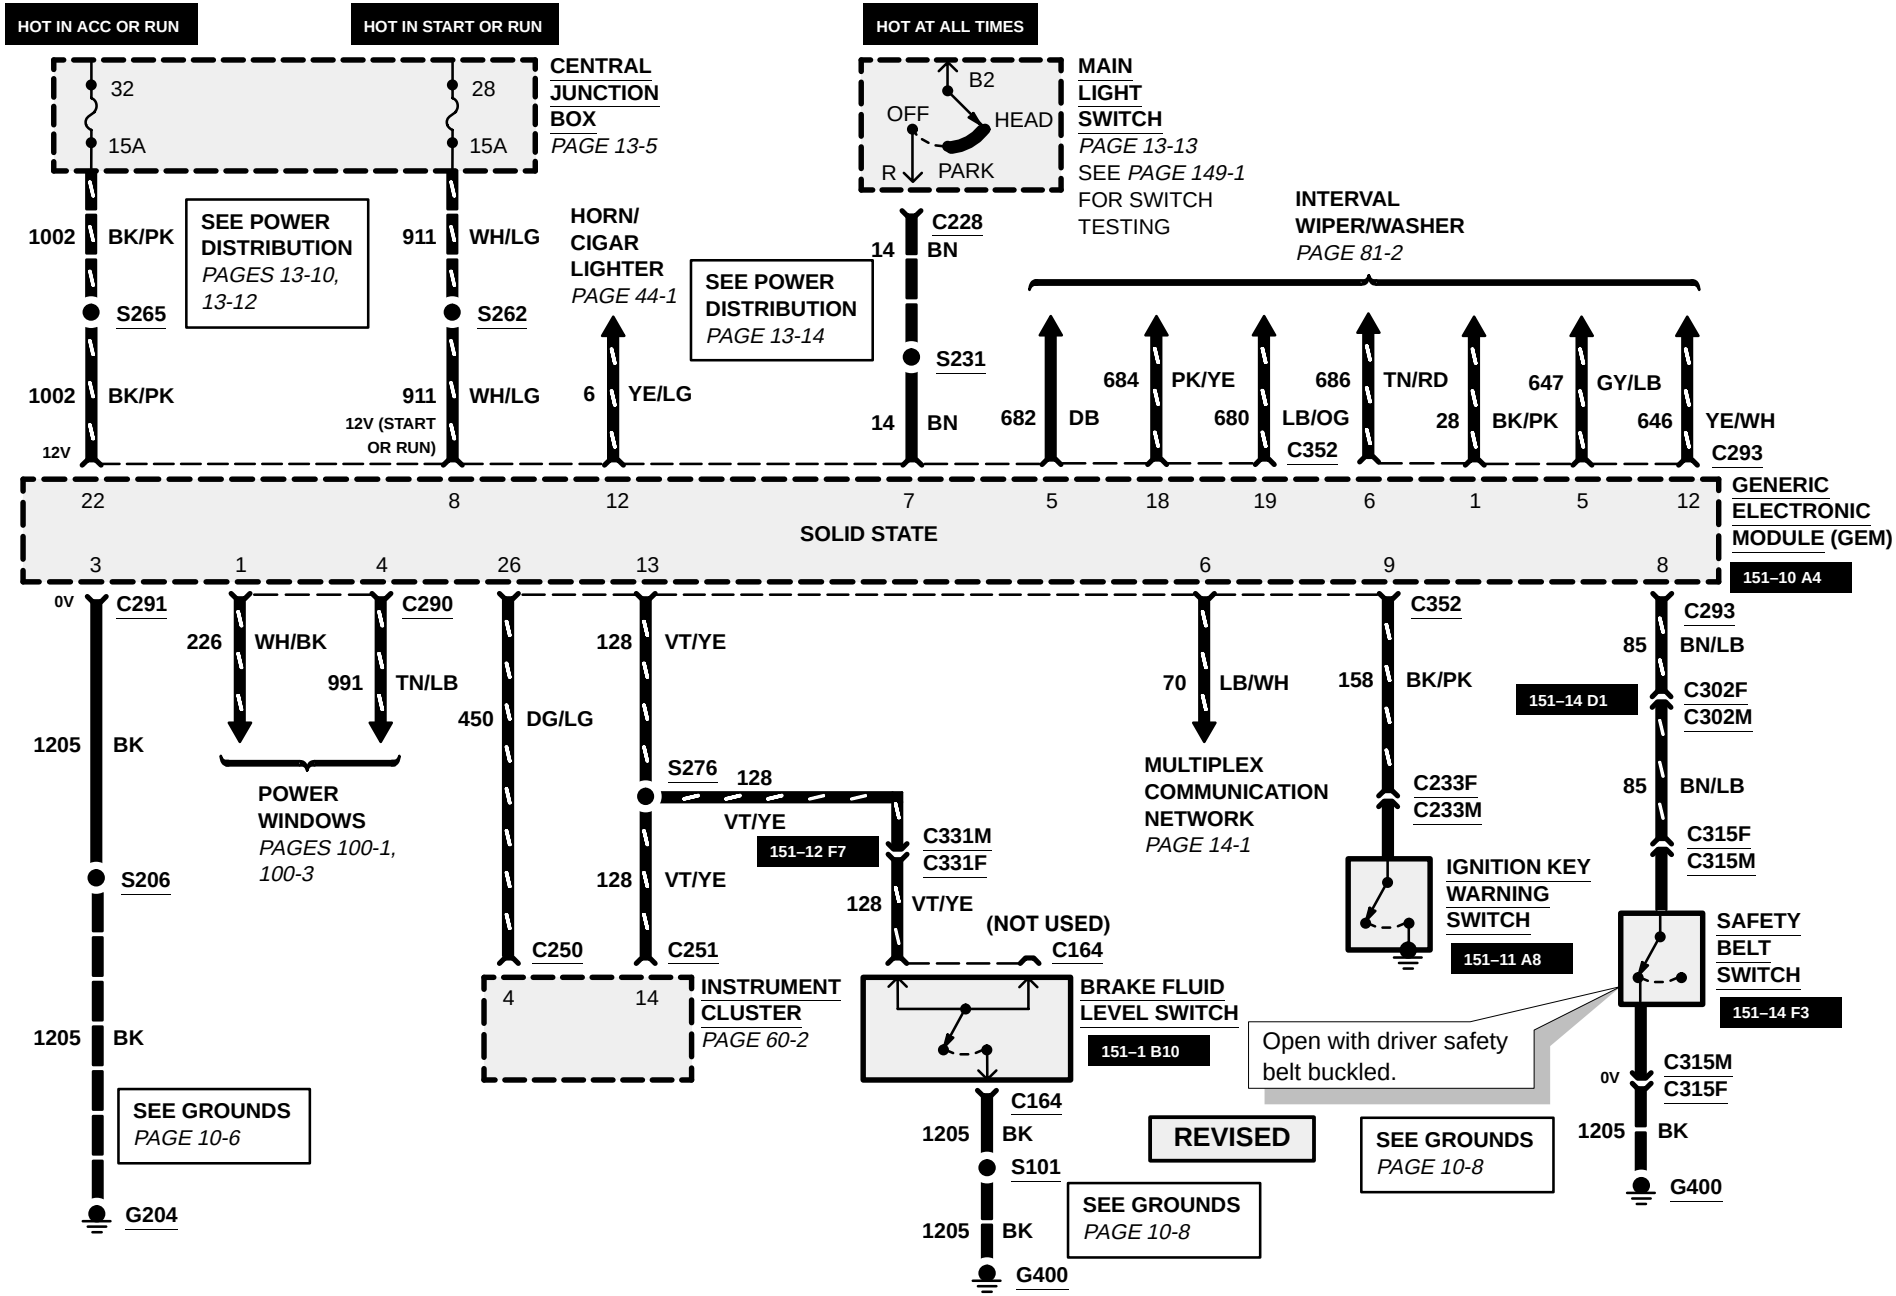
HOT IN ACC OR RUN
HOT IN START OR RUN
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGE 13-5
32
28
15A
15A
MAIN LIGHT SWITCH
PAGE 13-13
SEE PAGE 149-1 FOR SWITCH TESTING
B2
OFF
HEAD
R
PARK
INTERVAL WIPER/WASHER
PAGE 81-2
SEE POWER DISTRIBUTION
PAGES 13-10, 13-12
HORN/ CIGAR LIGHTER
PAGE 44-1
SEE POWER DISTRIBUTION
PAGE 13-14
1002 BK/PK
911 WH/LG
S265
S262
C228
14 BN
S231
1002 BK/PK
911 WH/LG
12V (START OR RUN)
6 YE/LG
14 BN
682 DB
684 PK/YE
680 LB/OG
C352
686 TN/RD
28 BK/PK
647 GY/LB
646 YE/WH
C293
12V
22
8
12
7
5
18
19
6
1
5
12
SOLID STATE
GENERIC ELECTRONIC MODULE (GEM)
151–10 A4
3
1
4
26
13
6
9
8
0V
C291
226 WH/BK
991 TN/LB
C290
450 DG/LG
128 VT/YE
70 LB/WH
158 BK/PK
C352
C293
85 BN/LB
151–14 D1
C302F
C302M
1205 BK
POWER WINDOWS
PAGES 100-1, 100-3
S276
128 VT/YE
151–12 F7
C331M
C331F
128 VT/YE
128 VT/YE
MULTIPLEX COMMUNICATION NETWORK
PAGE 14-1
C233F
C233M
85 BN/LB
C315F
C315M
IGNITION KEY WARNING SWITCH
151–11 A8
SAFETY BELT SWITCH
151–14 F3
S206
C250
C251
(NOT USED)
C164
4
14
INSTRUMENT CLUSTER
PAGE 60-2
BRAKE FLUID LEVEL SWITCH
151–1 B10
Open with driver safety belt buckled.
0V
C315M
C315F
1205 BK
C164
1205 BK
S101
1205 BK
G400
G400
G204
SEE GROUNDS
PAGE 10-6
REVISED
SEE GROUNDS
PAGE 10-8
SEE GROUNDS
PAGE 10-8