## C4014

**15K867**
**14A504**

Parking Aid Module
(PAM) (15K866)

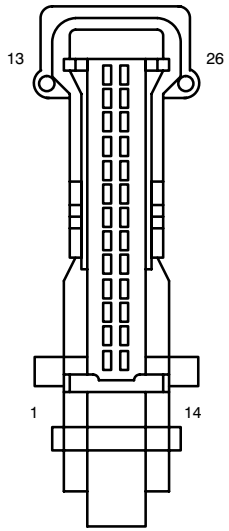

F26025

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 295 (LB/PK) | electronic cluster, Accessory, feed |
| 2 | – | not used |
| 3 | 57 (BK) | Ground |
| 4 | – | not used |
| 5 | 70 (LB/WH) | ISO Bus |
| 6 | – | not used |
| 7 | 1435 (DG/VT) | On/Off signal |
| 8 | – | not used |
| 9 | 140 (BK/PK) | Voltage supplied in reverse |
| 10 | 1442 (DG/WH) | Parking Aid Module (PAM) (15K866), to, Parking aid sensor, outer right (15K859), input |
| 11 | 1441 (WH/LG) | Parking Aid Module (PAM) (15K866), to, Parking aid sensor, inner right (15K859), input |
| 12 | – | not used |
| 13 | – | not used |
| 14 | 1437 (BK/PK) | Parking Aid Module (PAM) (15K866), to, Parking aid speaker – |

| Pin | Circuit | Circuit function |
|---|---|---|
| 15 | 1439 (BN/PK) | Parking Aid Module (PAM) (15K866), Sensor, Power |
| 16 | 1440 (DG/YE) | Parking Aid Module (PAM) (15K866), Sensor, return |
| 17 | 1438 (DG) | Parking Aid Module (PAM) (15K866), to, Parking aid speaker + |
| 18 | – | not used |
| 19 | 1436 (VT/OG) | On/Off signal, Light emitting diode (LED), control |
| 20 | – | not used |
| 21 | – | not used |
| 22 | – | not used |
| 23 | 1443 (WH/LB) | Parking Aid Module (PAM) (15K866), to, Parking aid sensor, inner left (15K859), input |
| 24 | 1444 (DB/YE) | Parking Aid Module (PAM) (15K866), to, Parking aid sensor, outer left (15K859), input |
| 25 | – | not used |
| 26 | – | not used |