C175a

14290

A147
Powertrain Control
Module (PCM)
(12A650)

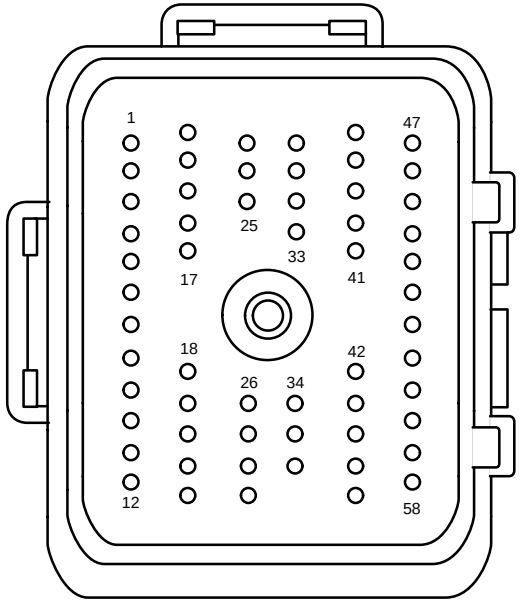

F58003

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	4-RE8 (GY)	SCP Bus, (+)
4	5-RE8 (BU)	SCP Bus, (–)
5	–	not used
6	91S-RL3 (BN/BU)	Evaporative emission (EVAP) canister vent valve (9F945), Ground, Switched
7	–	not used
8	–	not used
9	91S-FA79 (BN/BU)	A/C clutch relay, Ground, Switched
10	–	not used
11	–	not used
12	91S-RL25 (BN/RD)	EVAP canister purge valve, Ground, Switched
13	7-RE14 (YE/GN)	ISO Bus

Pin	Circuit	Circuit function
14	–	not used
15	–	not used
16	–	not used
17	9-RE8 (BN)	Sensor signal return (reference/ ground)
18	–	not used
19	91S-RN10 (BN/GN)	Air pump relay, Ground, Switched
20	7-RE8 (YE)	Reference, voltage
21	–	not used
22	–	not used
23	–	not used
24	31-RE8 (BK/YE)	Ground
25	31-RE21 (BK/RD)	Ground

Pin	Circuit	Circuit function
26	31-RE26 (BK/RD)	Ground
27	31-RE25 (BK/RD)	Ground
28	29S-RE21 (OG/GN)	Brake pressure switch (2B264), switched power
29	10-PG12 (GY/WH)	Speed control servo (9C735), input
30	–	not used
31	8-RJ22 (WH/BU)	Mass Air Flow (MAF) sensor (12B579), Reference, Power
32	15S-RE8 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), Switched
33	15S-RE21 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), Switched
34	30S-RE10 (RD/BU)	Air pump relay, Voltage supplied at all times (not overload protected), Switched
35	–	not used
36	8-PG21 (WH/GN)	Speed control servo (9C735), input
37	8-CE6 (WH)	Power steering pressure switch, Reference, voltage
38	9-RJ22 (BN/BU)	Mass Air Flow (MAF) sensor (12B579), Sensor signal return (reference/ground)
39	–	not used
40	29S-RE13 (OG)	Voltage supplied at all times (overload protected), Switched
41	8-TA21 (WH/GN)	Sensor signal

Pin	Circuit	Circuit function
42	8-FA88 (WH/VT)	A/C pressure transducer sensor, Sensor signal
43	91-RE27 (BN/YE)	Ground
44	29-RE8 (OG/YE)	Voltage supplied at all times (overload protected)
45	8-PG12 (WH/VT)	Speed control servo (9C735), input
46	10-PG21 (GY/OG)	Speed control servo (9C735), input
48	–	not used
49	8-TA67 (WH/VT)	Sensor signal
50	8-TA68 (WH/BK)	Sensor signal
51	8-RJ17 (WH/VT)	Intake Air Temperature (IAT) sensor (12A697), Reference, voltage
52	8-RJ13 (WH/VT)	Fuel tank pressure transducer sensor (9C968), Sensor signal
53	–	not used
54	–	not used
55	–	not used
56	31S-PG24 (BK/OG)	Speed control switch, Sensor signal return (reference/ground)
57	7-PG24 (YE/BU)	Speed control switch, Reference, voltage
58	8-RE32 (WH/VT)	Rear Electronic Module (REM), Sensor signal