## C361 (BK)

**14A699**

Lumbar adjust switch, left front (14B691)

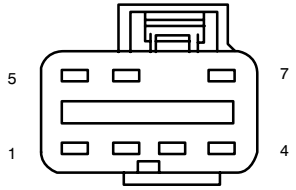


F07103

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1094 (PK) | Left Front seat lumbar compressor motor, In |
| 2 | 517 (BK/WH) | Voltage supplied at all times (overload protected) |
| 3 | 1094 (PK) | Left Front seat lumbar compressor motor, Out |
| 4 | – | not used |
| 5 | – | not used |
| 6 | – | not used |
| 7 | 1097 (BN) | Front seat lumbar compressor motor, Out |

## C364

**14A699**

Seat cushion heater, left front

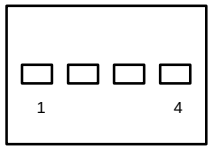


F04301

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1065 (WH/LB) | heater, return |
| 2 | 1061 (BN/LB) | Temperature, return |
| 3 | 1060 (BK/LB) | Temperature, signal |
| 4 | 1064 (YE/LB) | heater, feed |

## C366 (BK)

**14A699**

Driver seat lumbar compressor motor (65500)

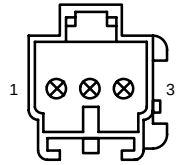


F03062

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1094 (PK) | Left Front seat lumbar compressor motor, In |
| 2 | 1097 (BN) | Left Front seat lumbar compressor motor, Out |
| 3 | 57 (BK) | Ground |

## C367

**14716**

Side air bag module, left

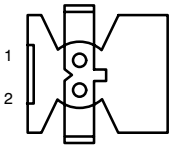


F02611

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1258 (RD) | Side air bag module, left, feed |
| 2 | 1257 (WH/LB) | Side air bag module, left, return |

## C368 (GY)

**14A699**

Driver seat backrest motor




F02130

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 918 (GY) | Seat regulator feed, Driver seat backrest motor, Up |
| 2 | 919 (GY/BK) | Seat regulator feed, Driver seat backrest motor, Down |