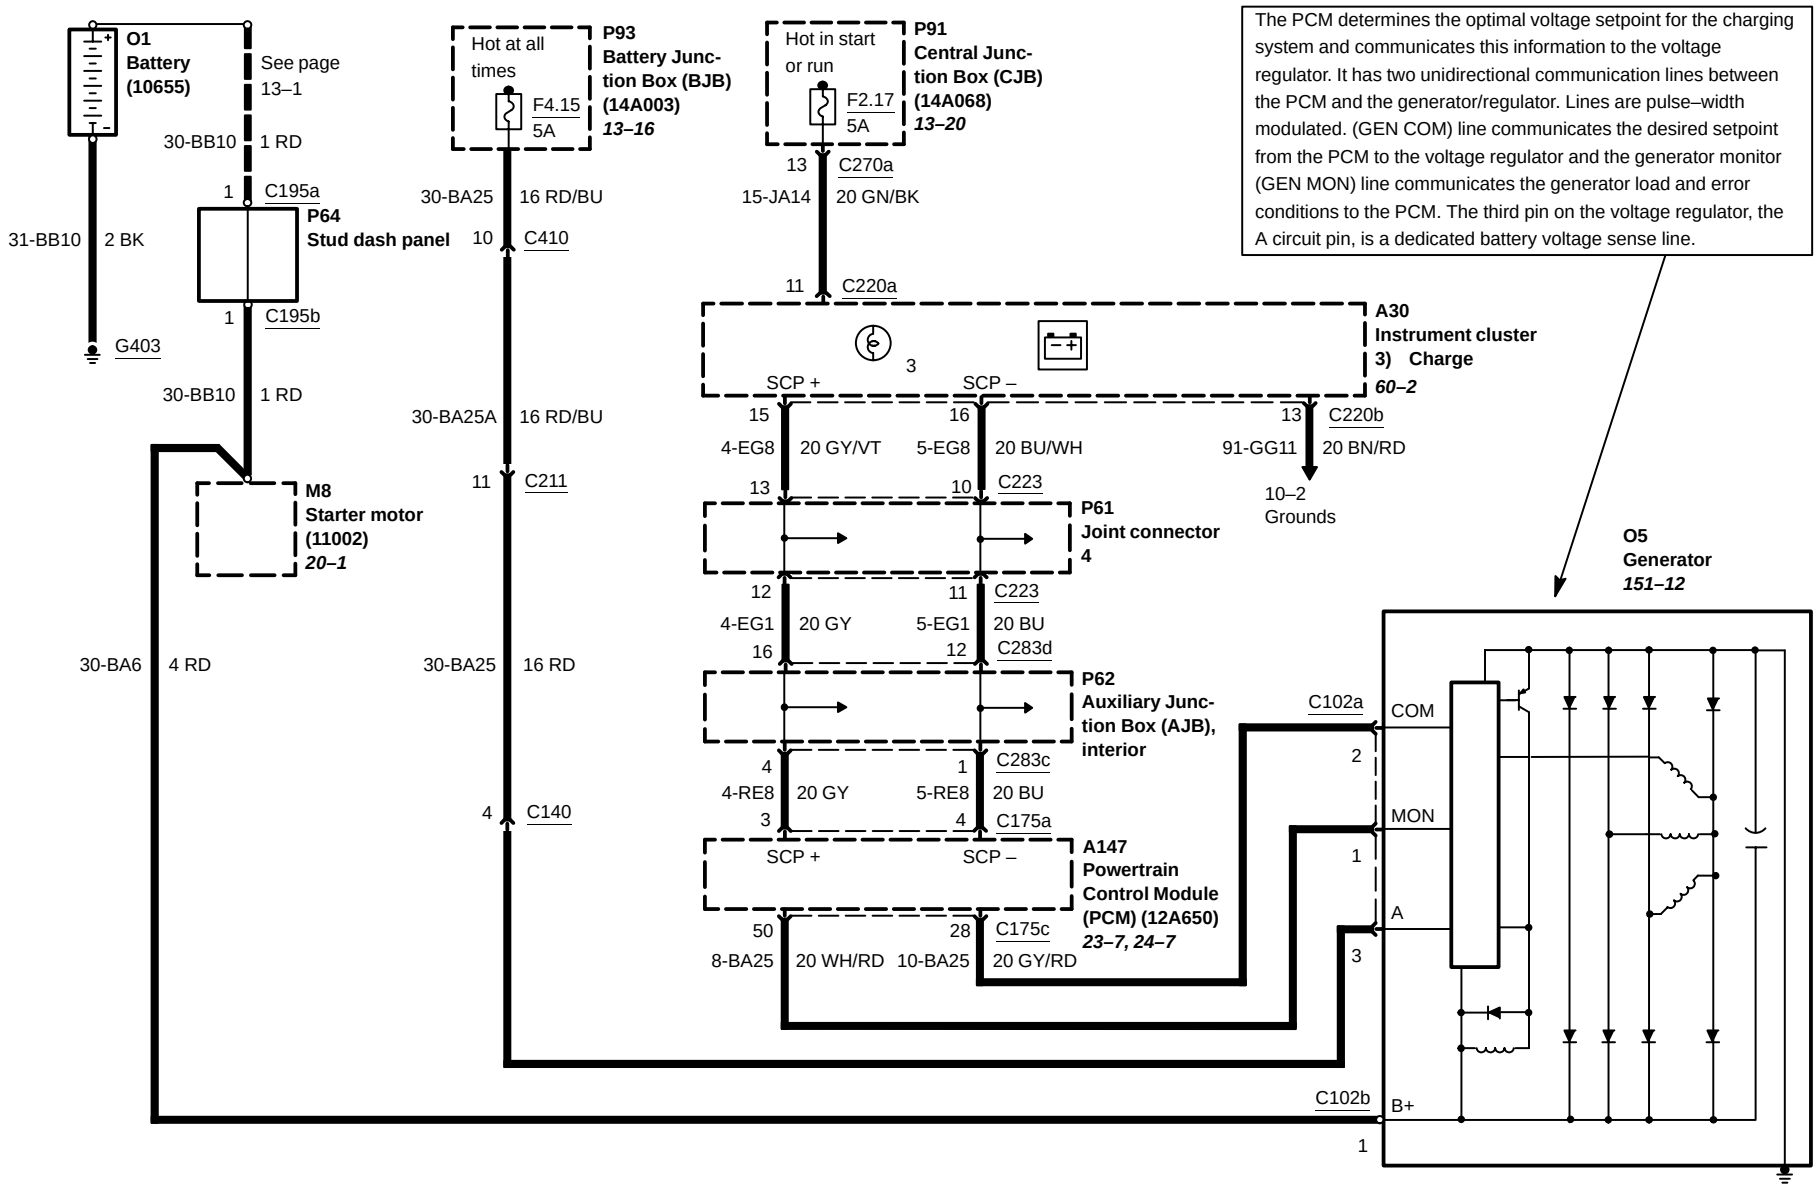
The PCM determines the optimal voltage setpoint for the charging system and communicates this information to the voltage regulator. It has two unidirectional communication lines between the PCM and the generator/regulator. Lines are pulse–width modulated. (GEN COM) line communicates the desired setpoint from the PCM to the voltage regulator and the generator monitor (GEN MON) line communicates the generator load and error conditions to the PCM. The third pin on the voltage regulator, the A circuit pin, is a dedicated battery voltage sense line.
O1
Battery
(10655)
See page 13–1
30-BB10 1 RD
1 C195a
31-BB10 2 BK
P64
Stud dash panel
1 C195b
G403
30-BB10 1 RD
M8
Starter motor
(11002)
20–1
30-BA6 4 RD
Hot at all times
F4.15
5A
P93
Battery Junction Box (BJB)
(14A003)
13–16
30-BA25 16 RD/BU
10 C410
30-BA25A 16 RD/BU
11 C211
30-BA25 16 RD
4 C140
Hot in start or run
F2.17
5A
P91
Central Junction Box (CJB)
(14A068)
13–20
13 C270a
15-JA14 20 GN/BK
11 C220a
A30
Instrument cluster
3) Charge
60–2
3
SCP + SCP –
15 16 13 C220b
4-EG8 20 GY/VT 5-EG8 20 BU/WH 91-GG11 20 BN/RD
10–2
Grounds
13 10 C223
P61
Joint connector
4
12 11 C223
4-EG1 20 GY 5-EG1 20 BU
16 12 C283d
P62
Auxiliary Junction Box (AJB), interior
4 1 C283c
4-RE8 20 GY 5-RE8 20 BU
3 4 C175a
SCP + SCP –
A147
Powertrain Control Module (PCM) (12A650)
23–7, 24–7
50 28 C175c
8-BA25 20 WH/RD 10-BA25 20 GY/RD
O5
Generator
151–12
C102a
COM
2
MON
1
A
3
C102b
B+
1