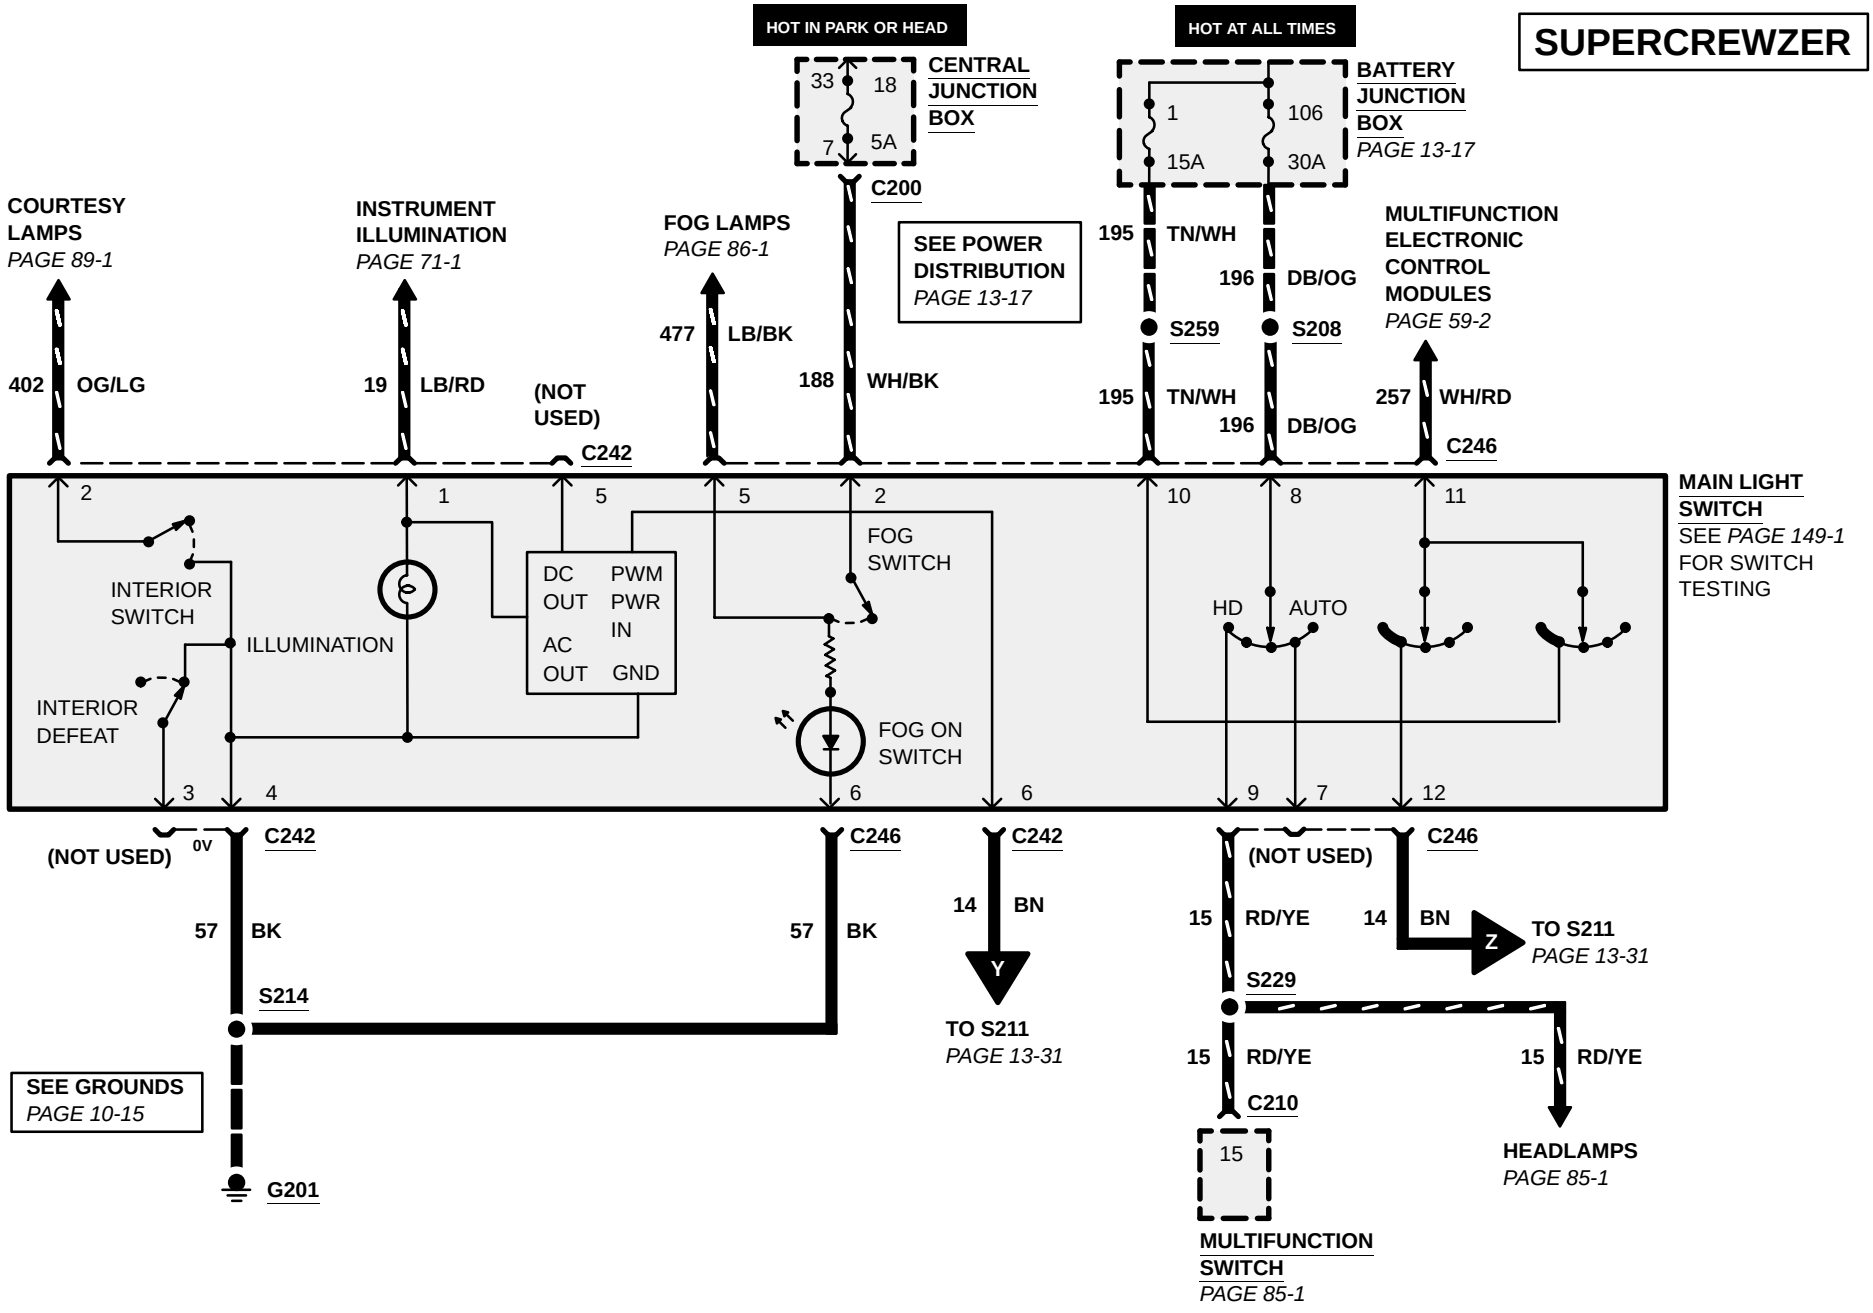
SUPERCREWZER
HOT IN PARK OR HEAD
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
33
18
7
5A
C200
BATTERY JUNCTION BOX
PAGE 13-17
1
106
15A
30A
SEE POWER DISTRIBUTION
PAGE 13-17
COURTESY LAMPS
PAGE 89-1
INSTRUMENT ILLUMINATION
PAGE 71-1
FOG LAMPS
PAGE 86-1
MULTIFUNCTION ELECTRONIC CONTROL MODULES
PAGE 59-2
402 OG/LG
19 LB/RD
(NOT USED)
C242
477 LB/BK
188 WH/BK
195 TN/WH
196 DB/OG
S259
S208
195 TN/WH
196 DB/OG
257 WH/RD
C246
MAIN LIGHT SWITCH
SEE PAGE 149-1
FOR SWITCH TESTING
INTERIOR SWITCH
ILLUMINATION
INTERIOR DEFEAT
DC OUT
PWM PWR IN
AC OUT
GND
FOG SWITCH
FOG ON SWITCH
HD
AUTO
(NOT USED)
0V
C242
57 BK
S214
SEE GROUNDS
PAGE 10-15
G201
C246
57 BK
C242
14 BN
Y
TO S211
PAGE 13-31
(NOT USED)
C246
15 RD/YE
14 BN
Z
TO S211
PAGE 13-31
S229
15 RD/YE
C210
15
MULTIFUNCTION SWITCH
PAGE 85-1
15 RD/YE
HEADLAMPS
PAGE 85-1