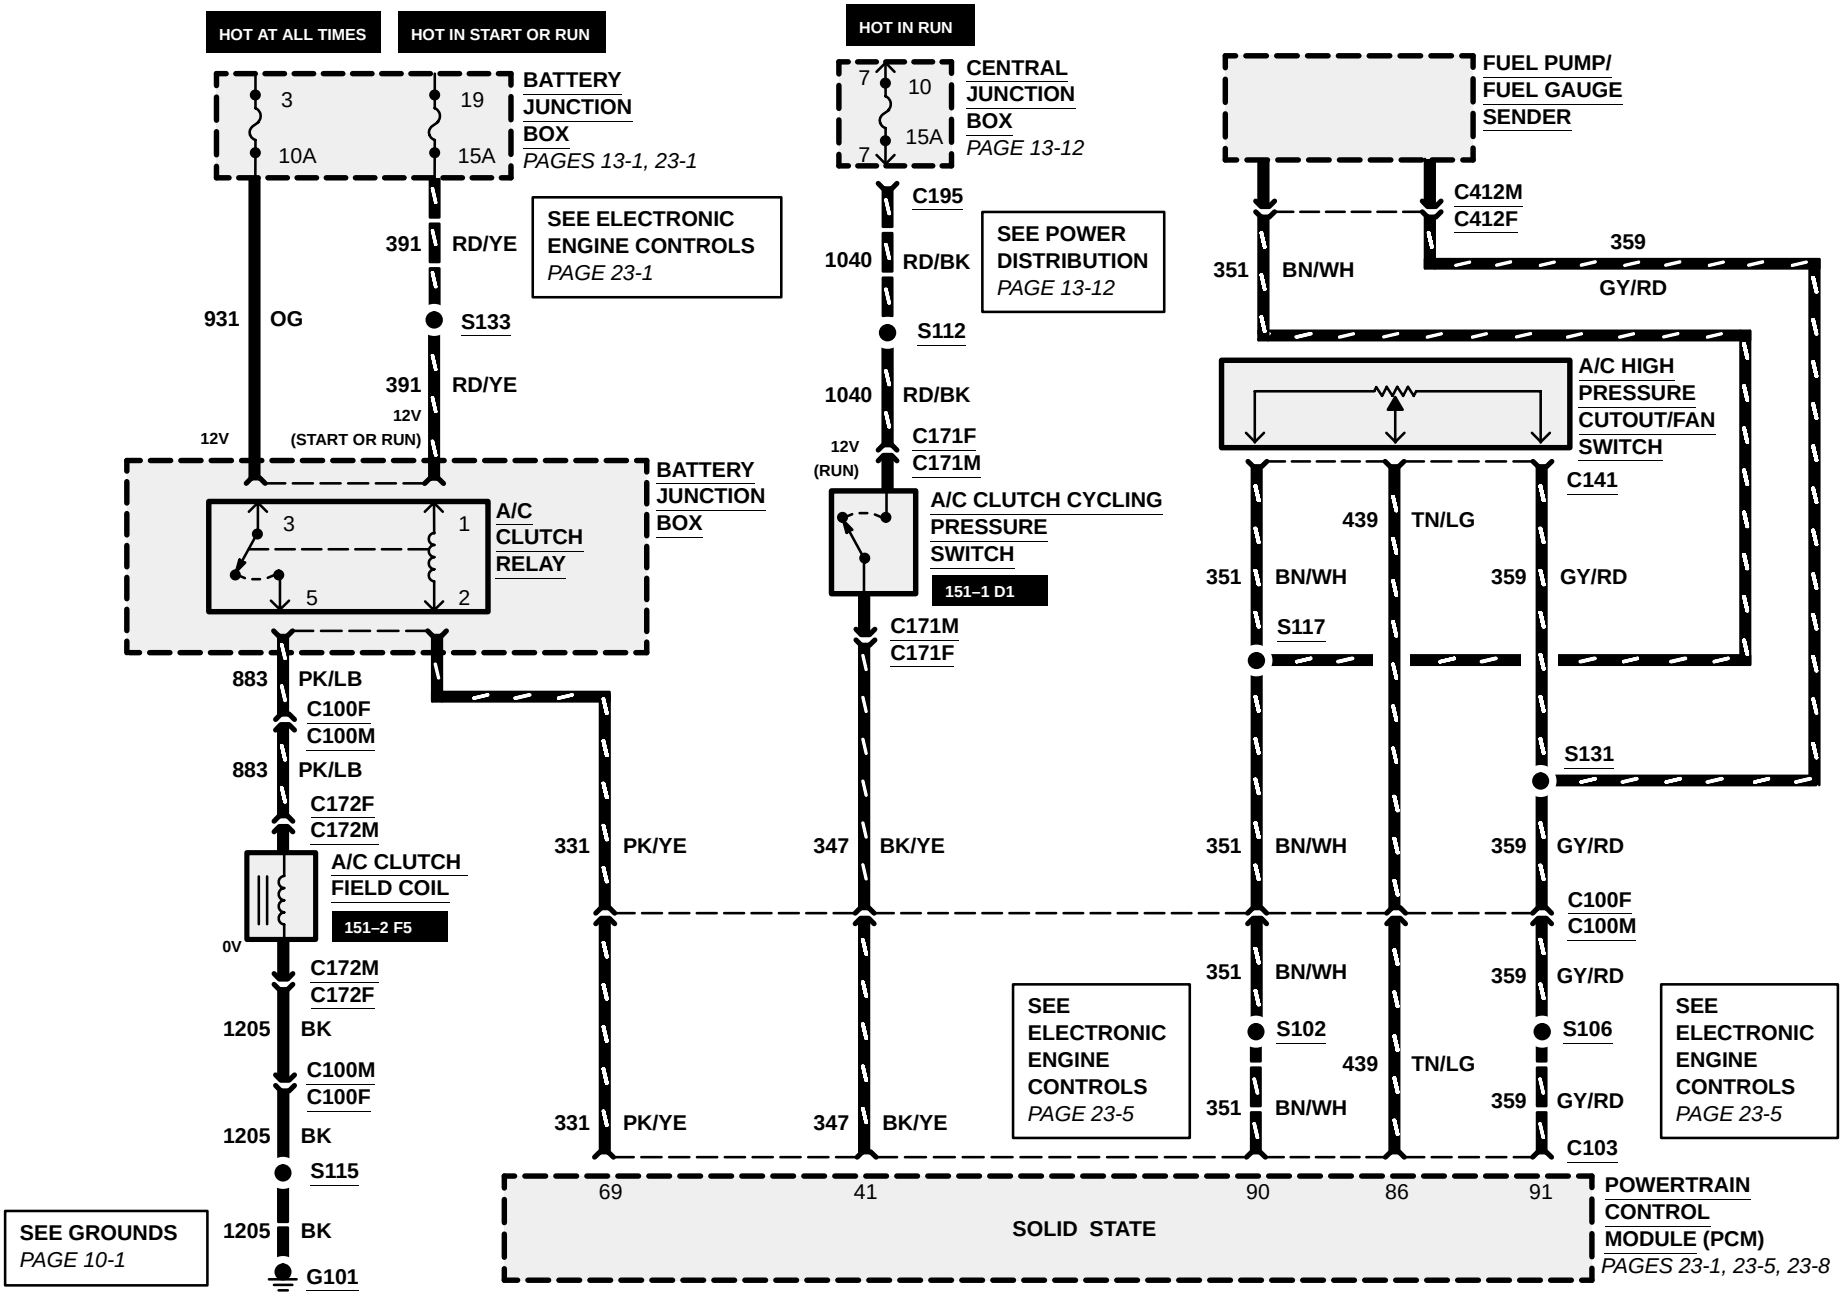
HOT AT ALL TIMES
HOT IN START OR RUN
HOT IN RUN
BATTERY JUNCTION BOX
PAGES 13-1, 23-1
3
19
10A
15A
CENTRAL JUNCTION BOX
PAGE 13-12
7
10
15A
7
FUEL PUMP/ FUEL GAUGE SENDER
C412M
C412F
SEE ELECTRONIC ENGINE CONTROLS
PAGE 23-1
391 RD/YE
C195
1040 RD/BK
SEE POWER DISTRIBUTION
PAGE 13-12
931 OG
S133
S112
359
351 BN/WH
GY/RD
391 RD/YE
1040 RD/BK
12V (START OR RUN)
12V
12V (RUN)
C171F
C171M
A/C HIGH PRESSURE CUTOUT/FAN SWITCH
C141
BATTERY JUNCTION BOX
3
1
A/C CLUTCH RELAY
5
2
A/C CLUTCH CYCLING PRESSURE SWITCH
151–1 D1
439 TN/LG
351 BN/WH
359 GY/RD
S117
C171M
C171F
883 PK/LB
C100F
C100M
883 PK/LB
S131
C172F
C172M
331 PK/YE
347 BK/YE
351 BN/WH
359 GY/RD
A/C CLUTCH FIELD COIL
151–2 F5
C100F
C100M
0V
C172M
C172F
1205 BK
351 BN/WH
359 GY/RD
SEE ELECTRONIC ENGINE CONTROLS
PAGE 23-5
S102
S106
439 TN/LG
C100M
C100F
1205 BK
331 PK/YE
347 BK/YE
351 BN/WH
359 GY/RD
SEE ELECTRONIC ENGINE CONTROLS
PAGE 23-5
S115
C103
SEE GROUNDS
PAGE 10-1
1205 BK
69
41
90
86
91
POWERTRAIN CONTROL MODULE (PCM)
PAGES 23-1, 23-5, 23-8
SOLID STATE
G101