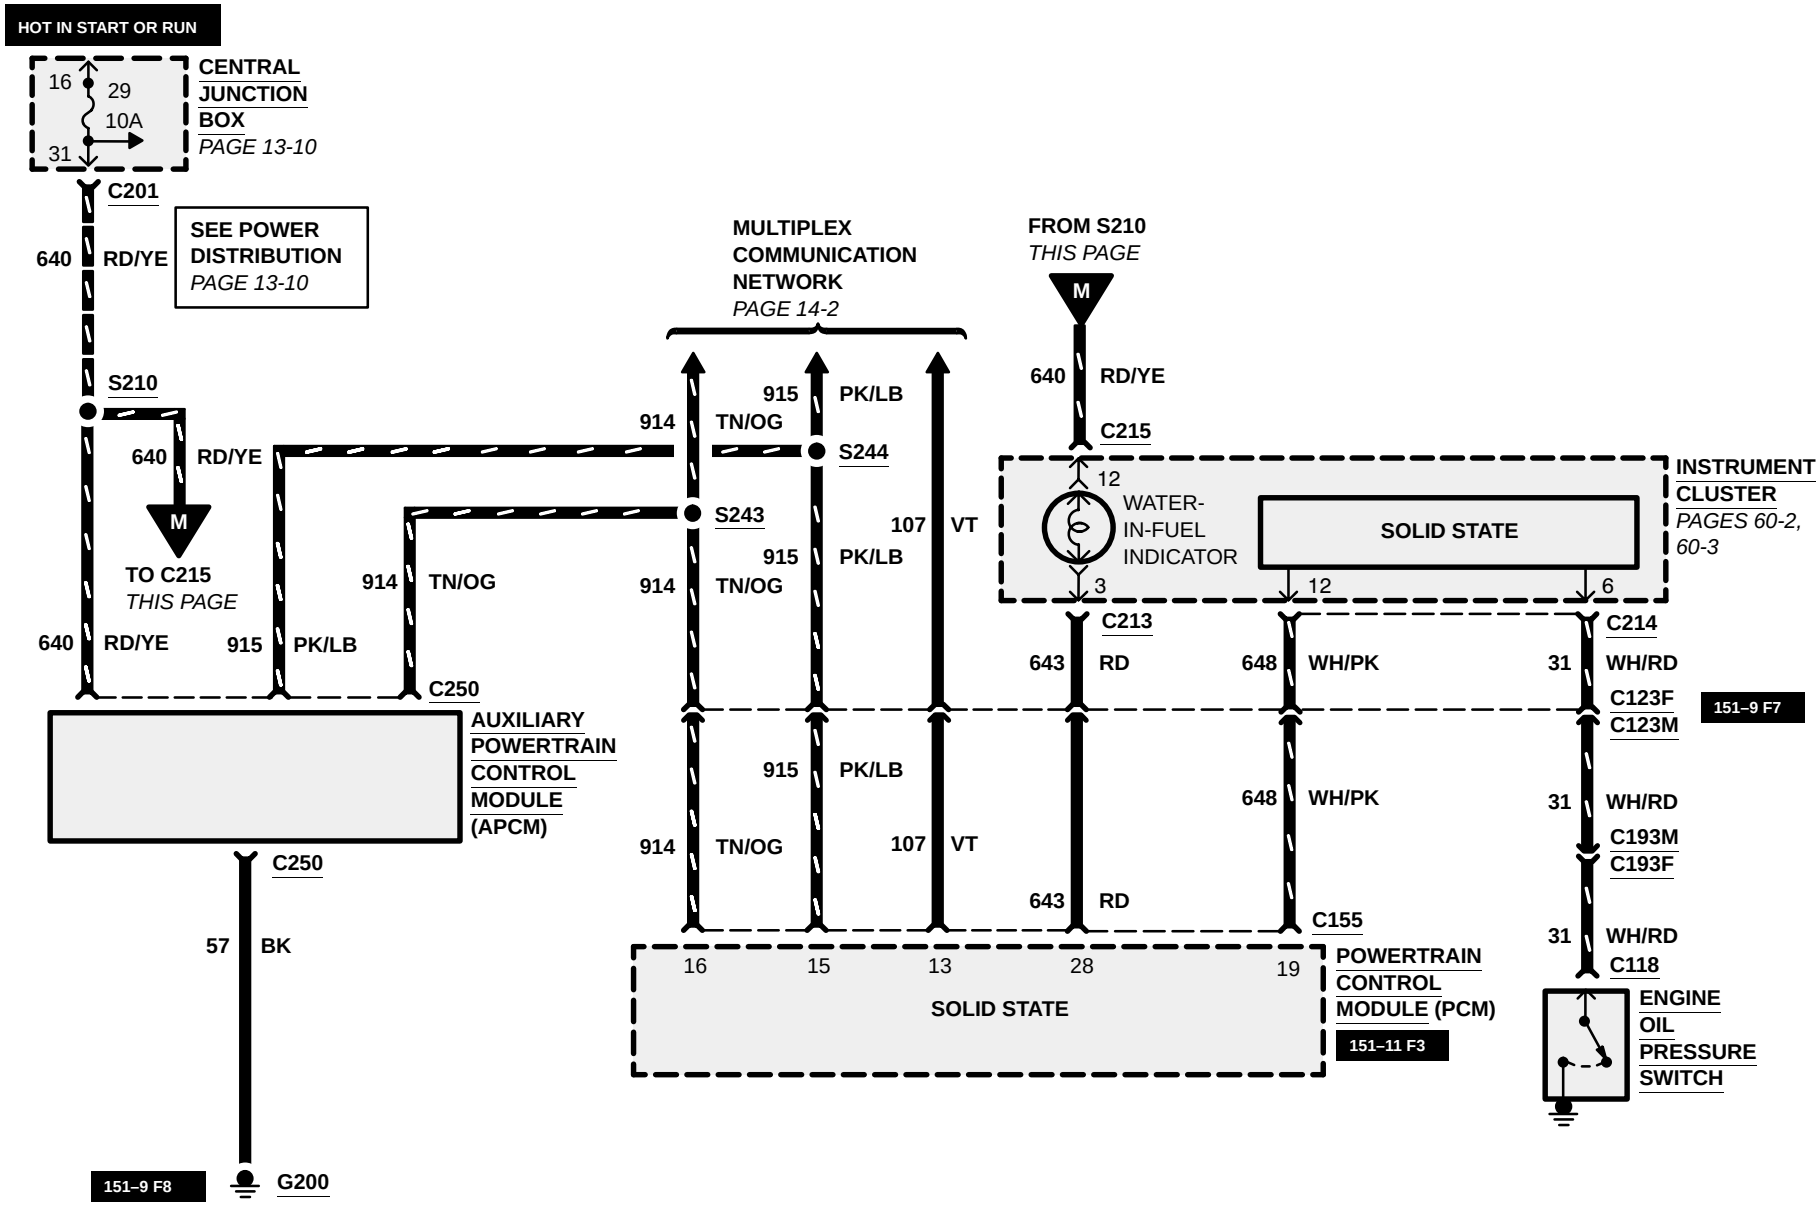
HOT IN START OR RUN
CENTRAL JUNCTION BOX
PAGE 13-10
16
29
10A
31
C201
640 RD/YE
SEE POWER DISTRIBUTION
PAGE 13-10
S210
640 RD/YE
M
TO C215
THIS PAGE
640 RD/YE
915 PK/LB
914 TN/OG
C250
AUXILIARY POWERTRAIN CONTROL MODULE (APCM)
C250
57 BK
151–9 F8
G200
MULTIPLEX COMMUNICATION NETWORK
PAGE 14-2
914 TN/OG
915 PK/LB
S244
S243
914 TN/OG
915 PK/LB
107 VT
914 TN/OG
915 PK/LB
107 VT
FROM S210
THIS PAGE
M
640 RD/YE
C215
12
WATER-IN-FUEL INDICATOR
SOLID STATE
3
12
6
INSTRUMENT CLUSTER
PAGES 60-2, 60-3
C213
643 RD
648 WH/PK
C214
31 WH/RD
C123F
C123M
151–9 F7
648 WH/PK
643 RD
C155
31 WH/RD
C193M
C193F
31 WH/RD
C118
16
15
13
28
19
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 F3
ENGINE OIL PRESSURE SWITCH