C605 (GN)

14630

Door lock switch, passenger side (14028)

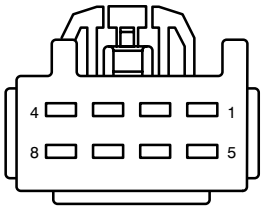

F08183

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	1088 (PK/WH)	Door unlock, input
4	57 (BK)	Ground
5	170 (RD/LB)	Accessory delay relay, switched power, output
6	–	not used
7	–	not used
8	–	not used

C608 (GY)

14630

Power window motor, passenger side front (23394)

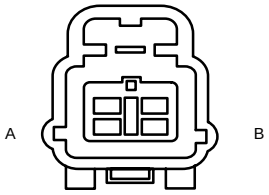

F02595

Pin	Circuit	Circuit function
A	334 (RD/YE)	Window motor, feed, Up
B	333 (YE/RD)	Window motor, feed, Down

C609 (BK)

14630

Door lock unit, passenger side front (5421812)

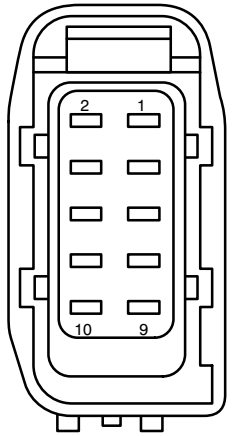

F10089

Pin	Circuit	Circuit function
1	–	not used
2	117 (PK/BK)	Door lock, output
3	–	not used
4	–	not used
5	1297 (YE/RD)	Passenger front door lock switch, Door unlock, input
6	57 (BK)	Ground
7	1296 (OG/BK)	Passenger front door lock switch, Door lock, input
8	867 (DB)	Door ajar switch, passenger side front (14018)
9	–	not used
10	118 (PK/OG)	Door unlock, output

C612 (BK)

14630

Speaker, right front (18808)

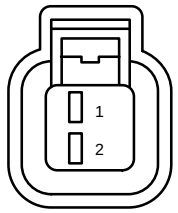

F02069

* with tweeter
** without tweeter

Pin	Circuit	Circuit function
1	*187 (DB/OG)	Tweeter, right front, to, Speaker, right front (18808) +
	**805 (WH/LG)	Speaker, right front (18808) +
2	*189 (TN/LB)	Tweeter, right front, to, Speaker, right front (18808) –
	**811 (DG/OG)	Speaker, right front (18808) –