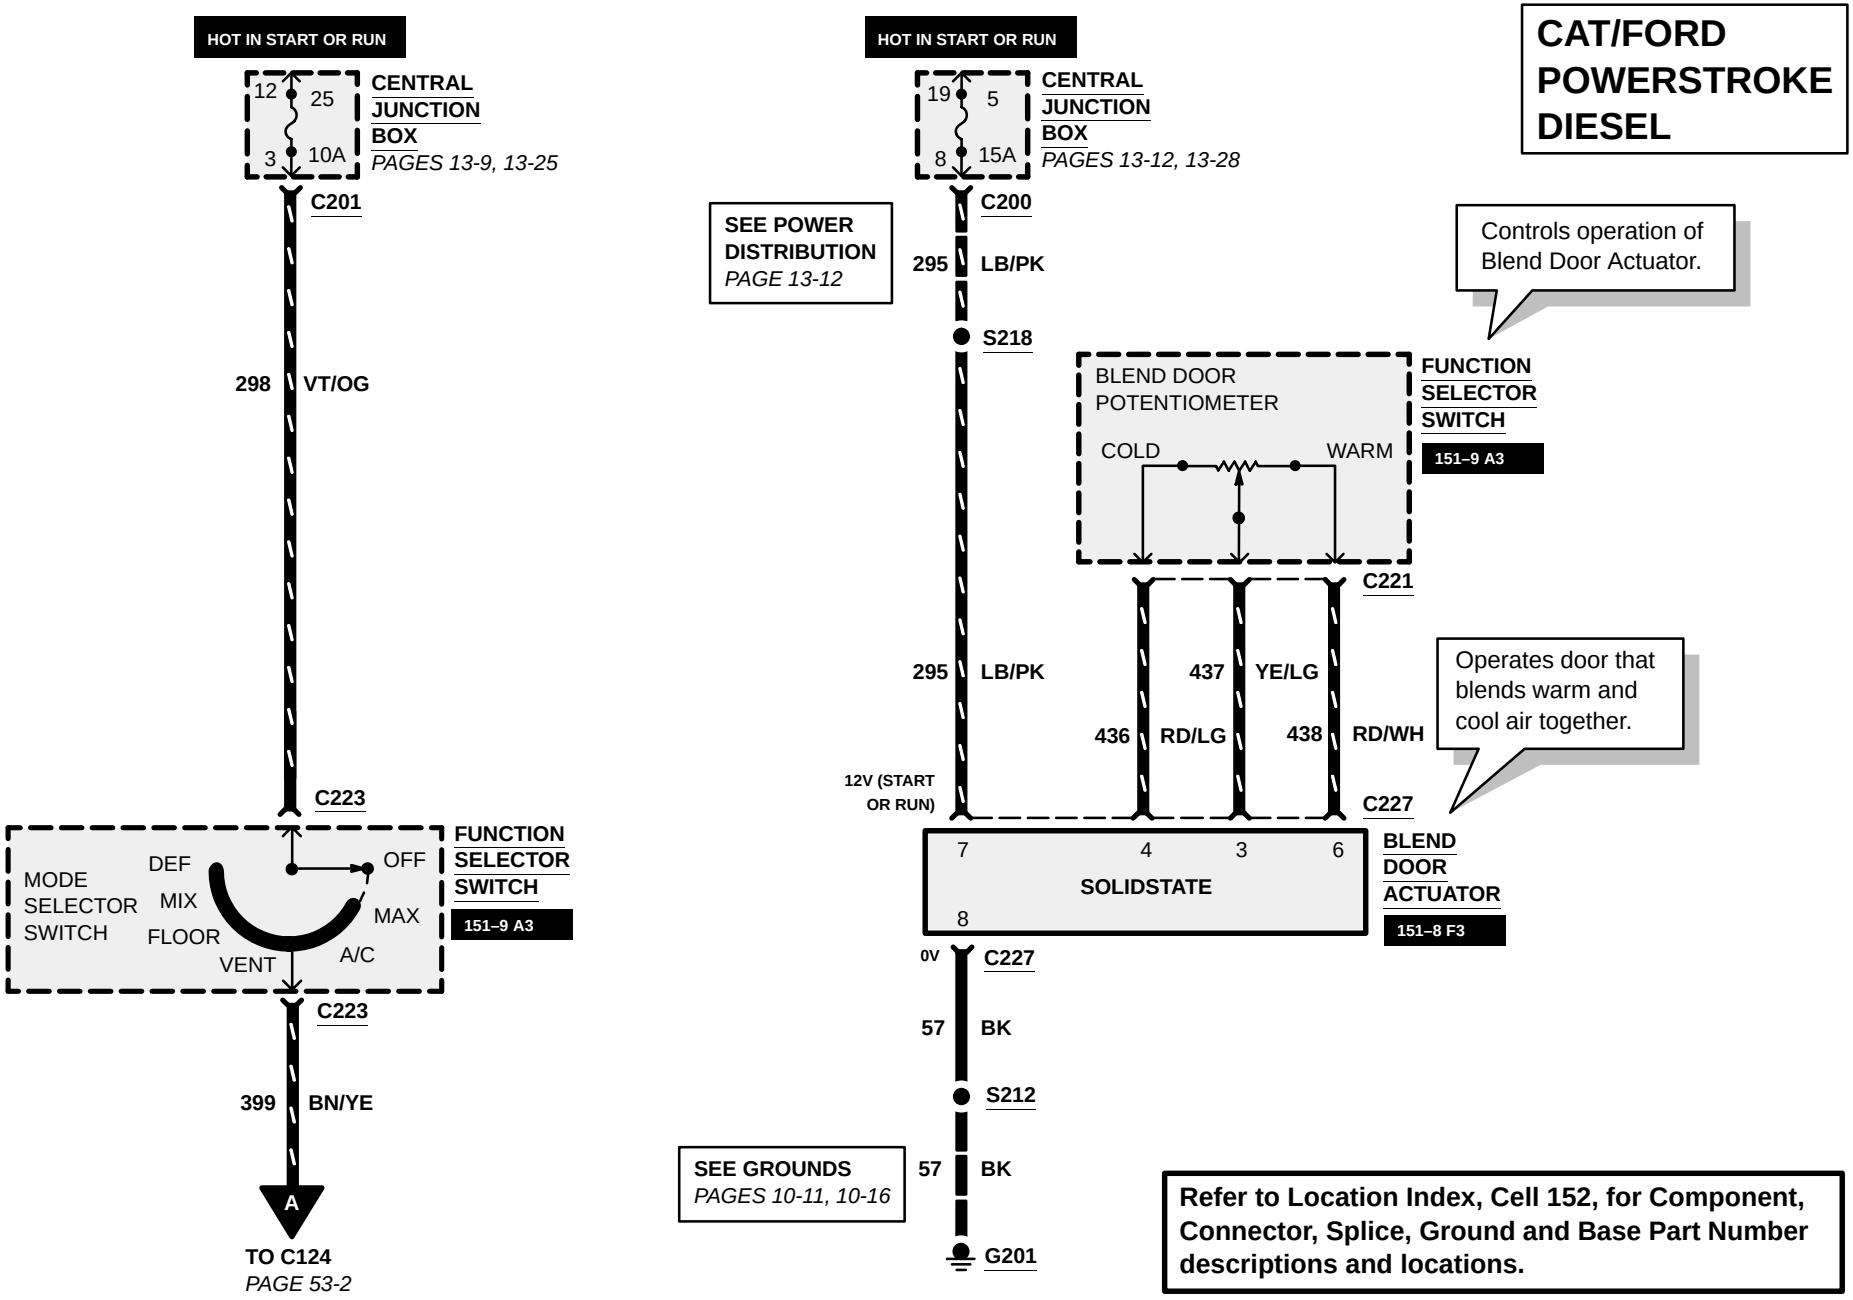
HOT IN START OR RUN
12
25
3
10A
CENTRAL JUNCTION BOX
PAGES 13-9, 13-25
C201
298
VT/OG
C223
MODE SELECTOR SWITCH
DEF
MIX
FLOOR
VENT
A/C
MAX
OFF
FUNCTION SELECTOR SWITCH
151–9 A3
C223
399
BN/YE
A
TO C124
PAGE 53-2
HOT IN START OR RUN
19
5
8
15A
CENTRAL JUNCTION BOX
PAGES 13-12, 13-28
C200
SEE POWER DISTRIBUTION
PAGE 13-12
295
LB/PK
S218
BLEND DOOR POTENTIOMETER
COLD
WARM
FUNCTION SELECTOR SWITCH
151–9 A3
Controls operation of Blend Door Actuator.
C221
295
LB/PK
437
YE/LG
436
RD/LG
438
RD/WH
Operates door that blends warm and cool air together.
12V (START OR RUN)
C227
7
4
3
6
SOLIDSTATE
8
BLEND DOOR ACTUATOR
151–8 F3
0V
C227
57
BK
S212
SEE GROUNDS
PAGES 10-11, 10-16
57
BK
G201
CAT/FORD POWERSTROKE DIESEL
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.