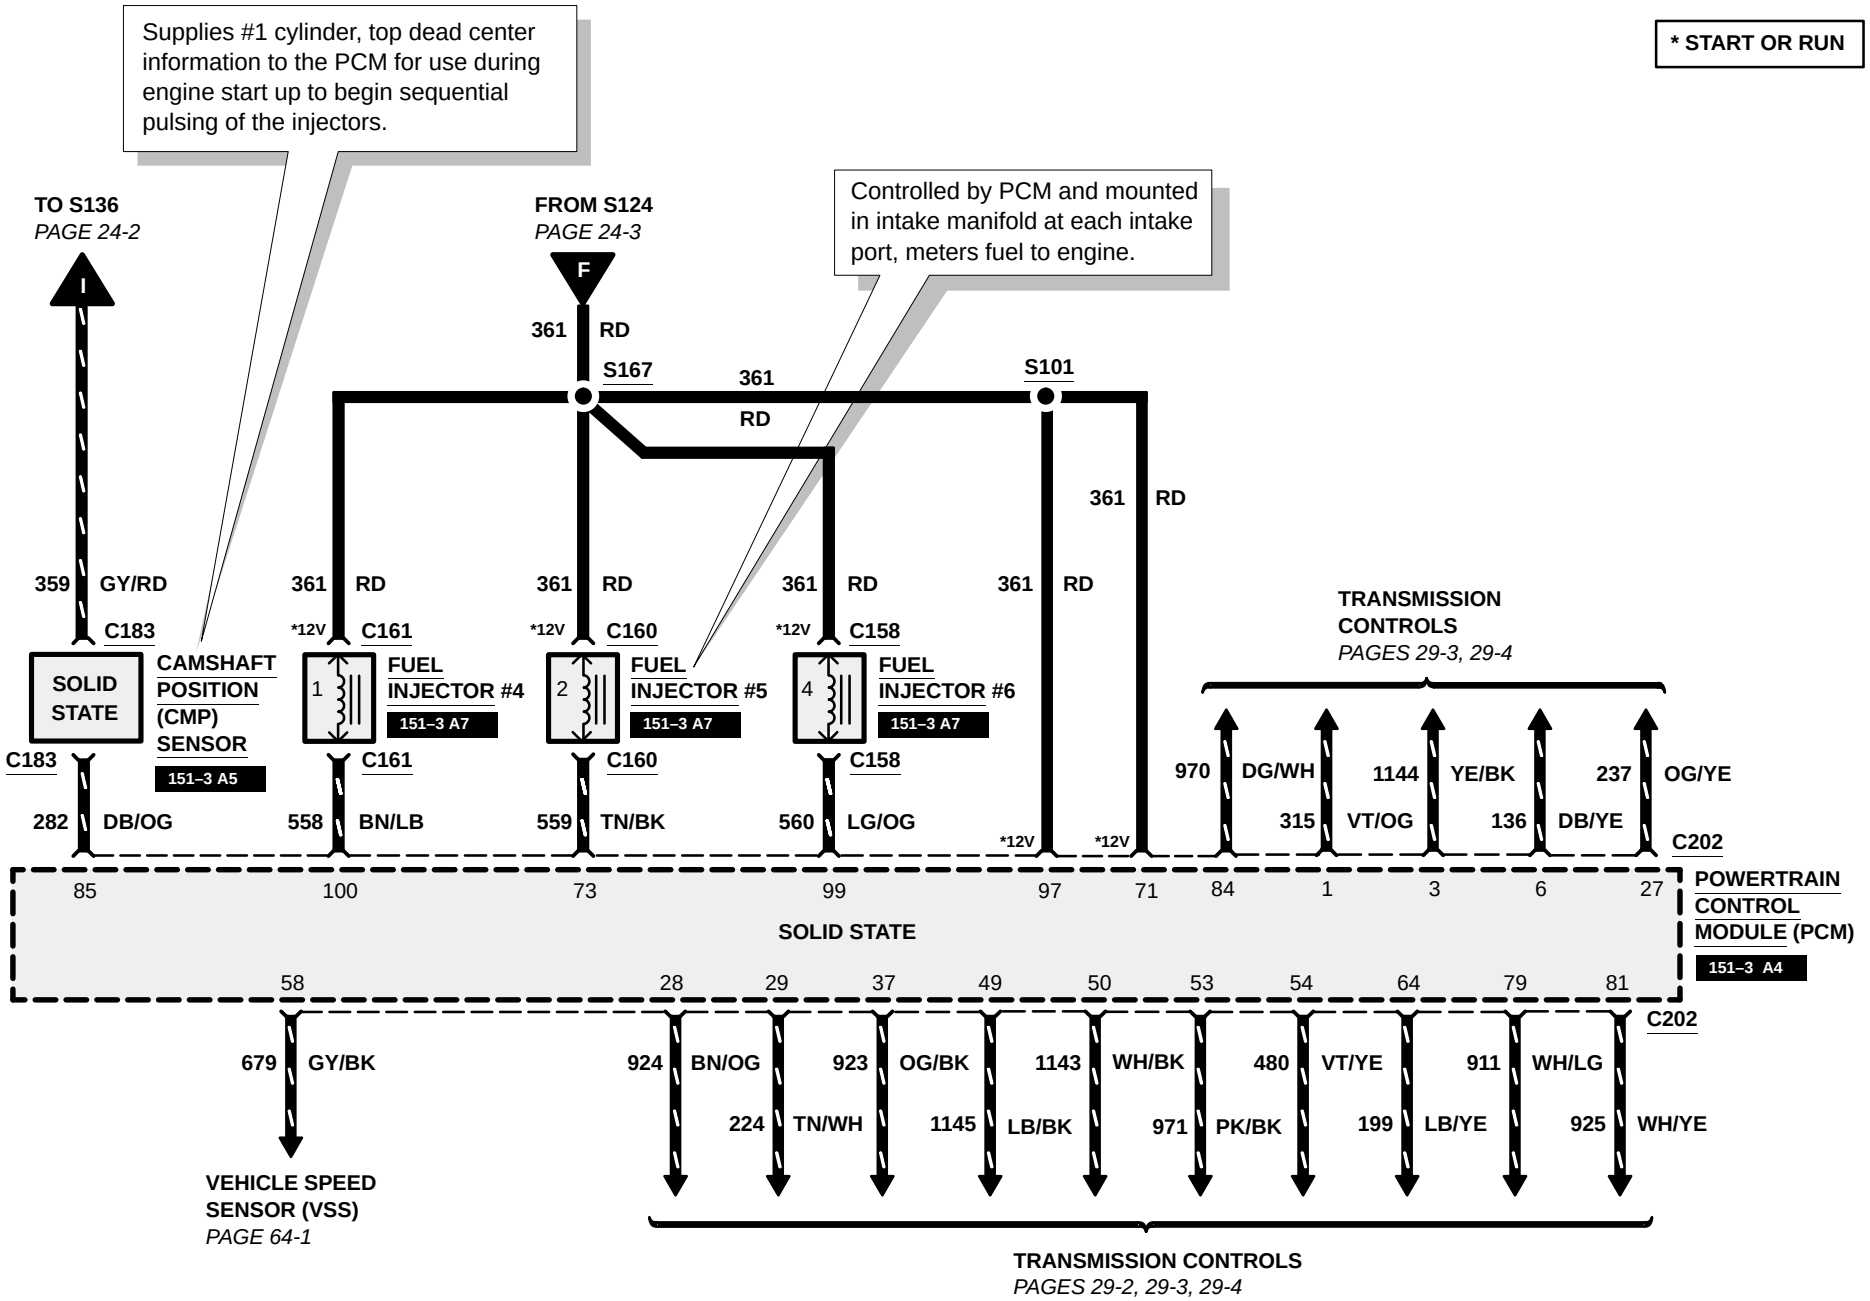
Supplies #1 cylinder, top dead center information to the PCM for use during engine start up to begin sequential pulsing of the injectors.
Controlled by PCM and mounted in intake manifold at each intake port, meters fuel to engine.
* START OR RUN
TO S136
PAGE 24-2
FROM S124
PAGE 24-3
I
F
361 RD
S167
361 RD
S101
361 RD
359 GY/RD
C183
SOLID STATE
CAMSHAFT POSITION (CMP) SENSOR
151–3 A5
361 RD
*12V
C161
1
FUEL INJECTOR #4
151–3 A7
361 RD
*12V
C160
2
FUEL INJECTOR #5
151–3 A7
361 RD
*12V
C158
4
FUEL INJECTOR #6
151–3 A7
361 RD
361 RD
TRANSMISSION CONTROLS
PAGES 29-3, 29-4
970 DG/WH
1144 YE/BK
237 OG/YE
315 VT/OG
136 DB/YE
C202
C183
282 DB/OG
C161
558 BN/LB
C160
559 TN/BK
C158
560 LG/OG
*12V
*12V
85
100
73
99
97
71
84
1
3
6
27
POWERTRAIN CONTROL MODULE (PCM)
151–3 A4
SOLID STATE
58
28
29
37
49
50
53
54
64
79
81
C202
679 GY/BK
924 BN/OG
224 TN/WH
923 OG/BK
1145 LB/BK
1143 WH/BK
971 PK/BK
480 VT/YE
199 LB/YE
911 WH/LG
925 WH/YE
VEHICLE SPEED SENSOR (VSS)
PAGE 64-1
TRANSMISSION CONTROLS
PAGES 29-2, 29-3, 29-4