C220a

14401

A30
Instrument cluster

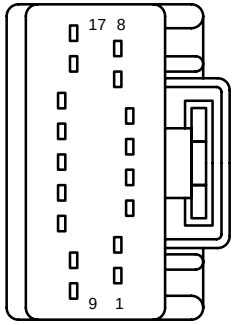

F17006

Pin	Circuit	Circuit function
1	640 (RD/YE)	Voltage supplied in Start (overload protected)
	3049 (BK/LG)	Voltage supplied at all times (overload protected)
2	703 (WH/OG)	Compass data +
	1203 (BK/LB)	Ground
3	702 (WH/BK)	Compass data –
	81 (RD/LG)	Washer fluid level switch
4	–	not used
	1009 (OG/YE)	Rear window defrost relay, control
5	1203 (BK/LB)	Ground
	1004 (LB/RD)	Accessory delay relay, control, Interior lamps
6	31 (WH/RD)	Engine oil pressure indicator, control
	1005 (VT/OG)	Battery saver relay, control
7	233 (DB/YE)	Ambient air temperature sensor (19E702), feed
	489 (PK/BK)	Voltage supplied in Start and Run (overload protected)
8	1003 (GY/YE)	Voltage supplied in Start and Run (overload protected)
	1411 (GY/OG)	Message center switch to Instrument cluster
9	–	not used

Pin	Circuit	Circuit function
10	–	not used
	1420 (YE/LB)	Instrument cluster, to, Interior lamps
11	977 (VT/WH)	Brake indicator, control
	1034 (BK/WH)	Main light switch (11654) to Instrument cluster
12	512 (TN/LG)	Brake indicator, control
	1404 (YE)	Main light switch (11654) to Instrument cluster
13	29 (YE/WH)	Fuel pump/fuel gauge sender
	1390 (DB)	Air bag, tone driver
14	715 (LG)	Message center switch to Instrument cluster
	162 (LG/RD)	Parking brake switch (15A851)
15	704 (DG/LG)	Message center switch to Instrument cluster
	688 (GY/LB)	Rear window defrost, input
16	1203 (BK/LB)	Ground
	1392 (LG/OG)	Turn lamps, feed, right front
17	729 (RD/WH)	Voltage supplied at all times (overload protected)
	–	not used