-70

C525 (GY)

14014

F10091

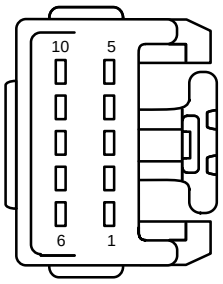

A26
Moonroof unit

Pin	Circuit	Circuit Function
1	29-AG12 (OG/BK)	Voltage supplied at all times (overload protected)
2	8-AG12 (WH/GN)	Sensor signal
3	–	not used
4	–	not used
5	–	not used
6	8-GB8 (WH/BU)	Sensor signal
7	15-AG12A (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
8	31S-AG27 (BK/WH)	Ground, switched
	31S-AG7 (BK/BU)	Ground, switched
9	31S-AG7 (BK/BU)	Ground, switched
	31S-AG27 (BK/WH)	Ground, switched
10	31S-AG12 (BK)	Ground, switched

C538

18B604

M69
Recirculation air actuator

F04166

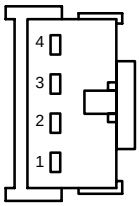

Pin	Circuit	Circuit Function
1	91S-FA90 (BK/GN)	Ground, switched
2	32-FA76 (WH/BU)	Switched between: Battery voltage, Ground or Open
	33-FA76 (YE/BU)	Switched between: Battery voltage, Ground or Open
3	91-FA76 (BK/OG)	Ground
4	32-FA76 (WH/BU)	Switched between: Battery voltage, Ground or Open
	33-FA76 (YE/BU)	Switched between: Battery voltage, Ground or Open

C555

14K733

F06029

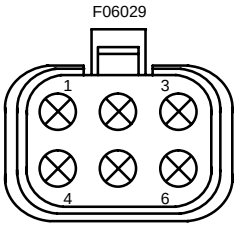

Pin	Circuit	Circuit Function
1	30-CF6 (RD)	Voltage supplied at all times (not overload protected)
2	15-CF6 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
3	8-EE6 (WH)	Sensor signal
4	–	not used
5	30-CF13 (RD)	Voltage supplied at all times (not overload protected)
6	–	not used