C177 (BN)

14290

Forward crash sensor

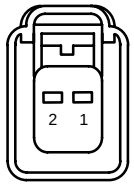

F02152

Pin	Circuit	Circuit function
1	617 (PK/OG)	Air bag crash sensor #1, feed
2	618 (VT/LG)	Air bag crash sensor #1, monitor

C180 (BK)

12B637

Camshaft position sensor (6B288)

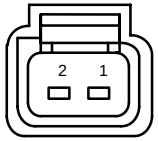

F02331

Pin	Circuit	Circuit function
1	359 (GY/RD)	signal, return
2	282 (DB/OG)	Camshaft position sensor (6B288), input

C181 (BK)

9D930

Fuel injector 1



F02058

Pin	Circuit	Circuit function
1	555 (TN)	Fuel injector 1, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C182 (BK)

9D930

Fuel injector 2



F02058

Pin	Circuit	Circuit function
1	556 (WH)	Fuel injector 2, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C183 (BK)

9D930

Fuel injector 3



F02058

Pin	Circuit	Circuit function
1	557 (BN/YE)	Fuel injector 3, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C184 (BK)

9D930

Fuel injector 4



F02058

Pin	Circuit	Circuit function
1	558 (BN/LB)	Fuel injector 4, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)