C296

19D887

B217
Evaporator discharge air temperature sensor

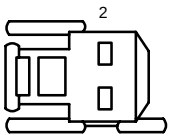

F02047

Pin	Circuit	Circuit Function
1	8-FA44 (WH/RD)	Sensor signal
2	9-FA44 (BN/RD)	Sensor signal return (reference/ ground)

C297

19D887

A97
Heater blower control module

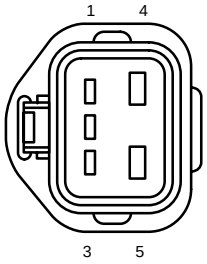

F05089

Pin	Circuit	Circuit Function
1	8-FA45 (WH/BU)	Sensor signal
2	9-FA45 (BN/BU)	Sensor signal return (reference/ ground)
3	10-FA45 (GY/VT)	Signal 2 (Y–direction, reverse, downward)
4	31S-FA18 (BK/RD)	Ground, Switched
5	31-FA45 (BK)	Ground

C300

13K702

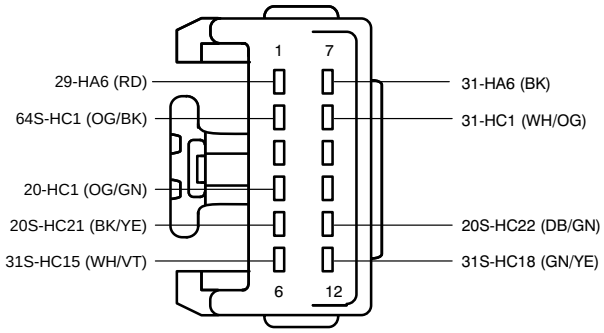

F12075

14A005

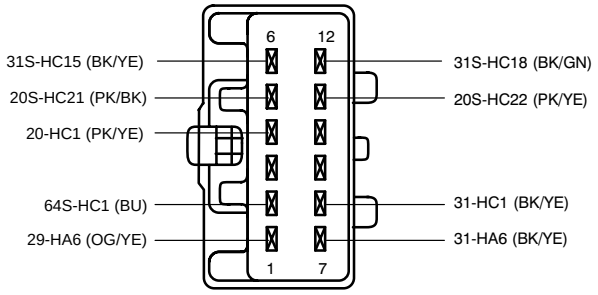

F12083

C301

14A005

A151
Antenna


F01012

Pin	Circuit	Circuit Function
1	15S-HB19 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), Switched