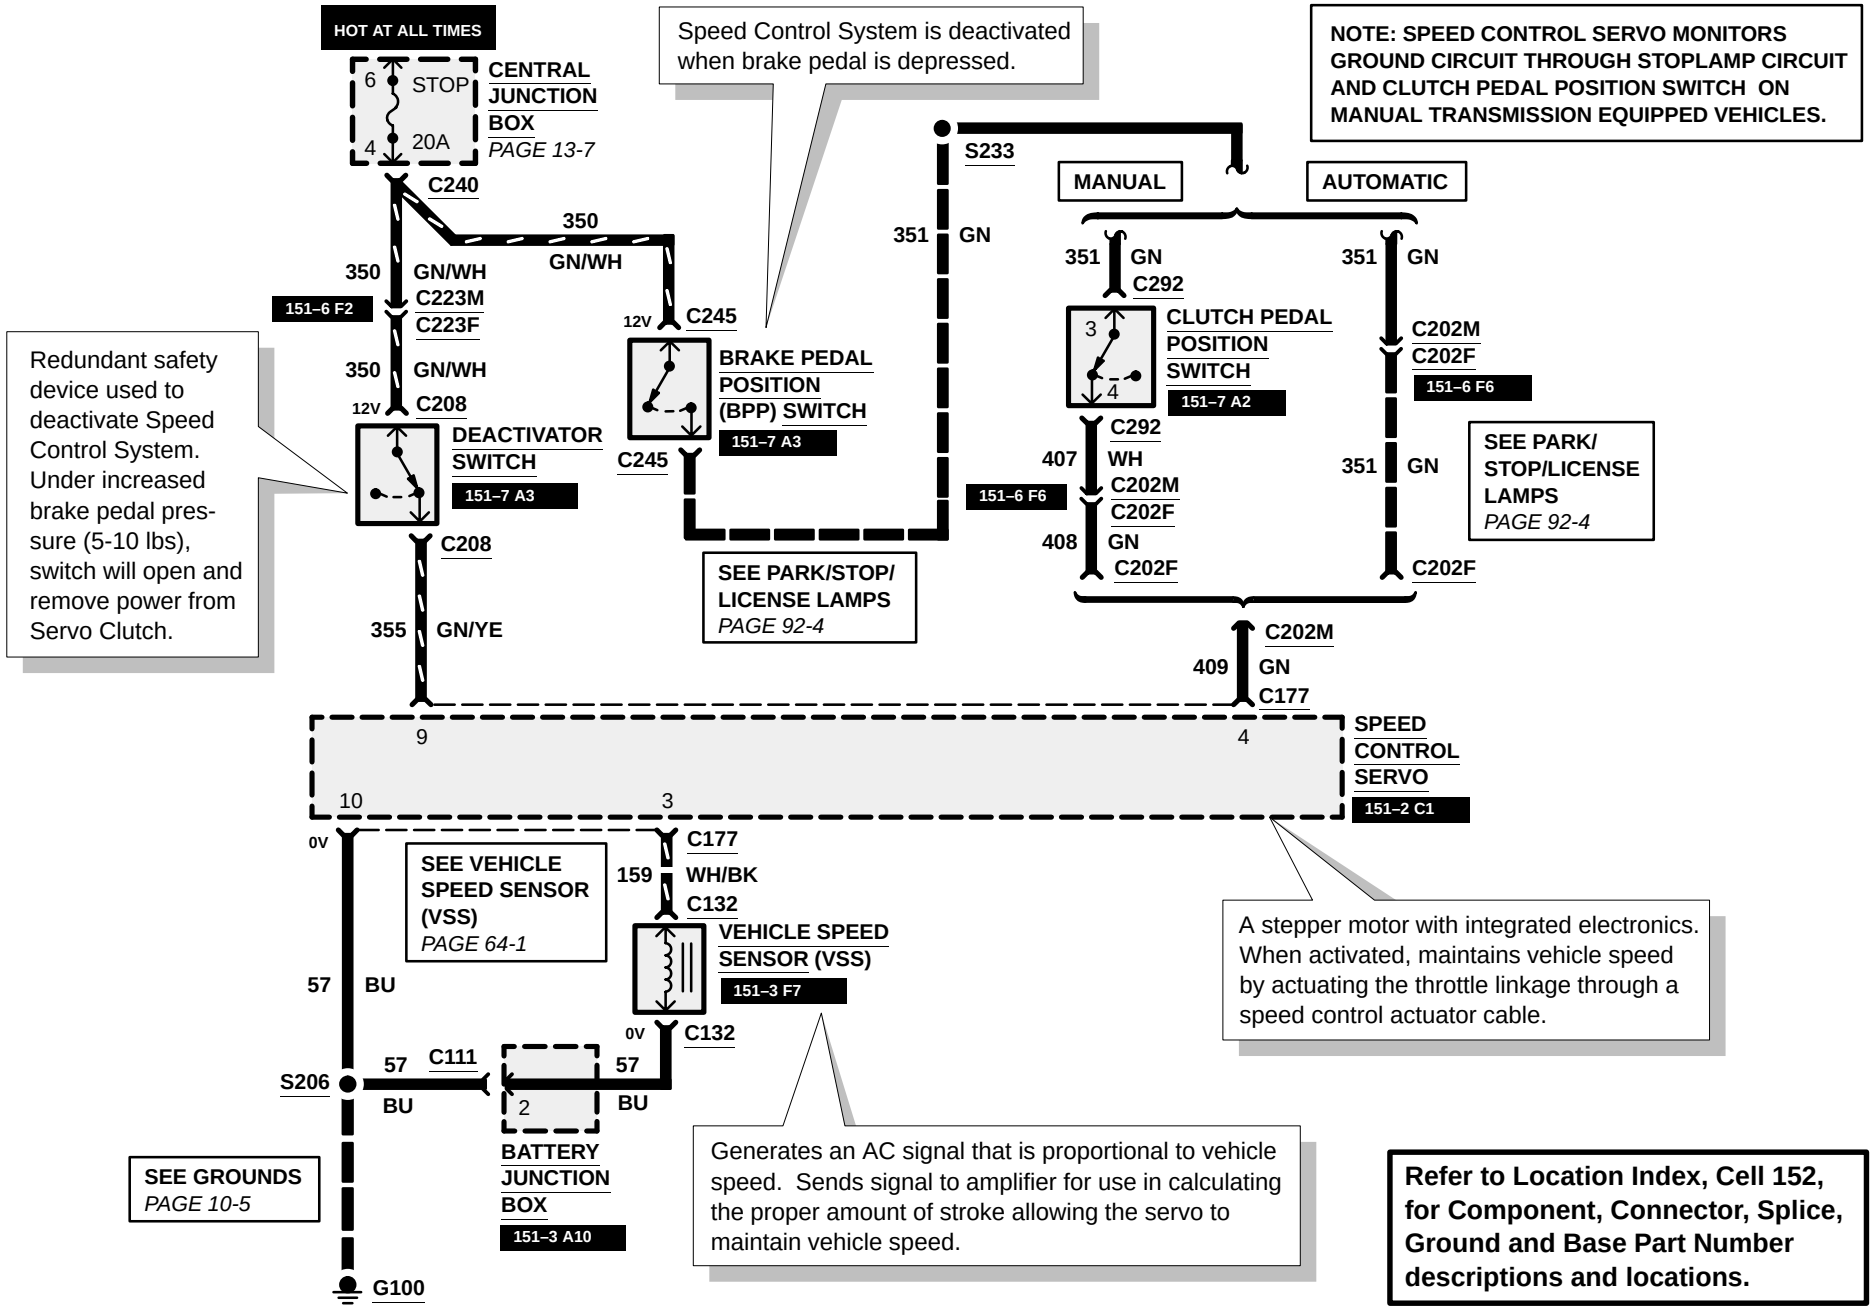
HOT AT ALL TIMES
6
STOP
4
20A
CENTRAL JUNCTION BOX
PAGE 13-7
C240
350
GN/WH
350
GN/WH
C223M
151–6 F2
C223F
350
GN/WH
12V
C208
DEACTIVATOR SWITCH
151–7 A3
C208
355
GN/YE
12V
C245
BRAKE PEDAL POSITION (BPP) SWITCH
151–7 A3
C245
Speed Control System is deactivated when brake pedal is depressed.
SEE PARK/STOP/ LICENSE LAMPS
PAGE 92-4
Redundant safety device used to deactivate Speed Control System. Under increased brake pedal pressure (5-10 lbs), switch will open and remove power from Servo Clutch.
S233
351
GN
MANUAL
AUTOMATIC
351
GN
C292
3
4
CLUTCH PEDAL POSITION SWITCH
151–7 A2
C292
407
WH
C202M
C202F
408
GN
C202F
151–6 F6
351
GN
C202M
C202F
151–6 F6
351
GN
SEE PARK/ STOP/LICENSE LAMPS
PAGE 92-4
C202F
C202M
409
GN
C177
9
4
SPEED CONTROL SERVO
151–2 C1
10
3
0V
C177
159
WH/BK
C132
VEHICLE SPEED SENSOR (VSS)
151–3 F7
SEE VEHICLE SPEED SENSOR (VSS)
PAGE 64-1
57
BU
0V
C132
S206
57
BU
C111
57
BU
2
BATTERY JUNCTION BOX
151–3 A10
SEE GROUNDS
PAGE 10-5
G100
A stepper motor with integrated electronics. When activated, maintains vehicle speed by actuating the throttle linkage through a speed control actuator cable.
Generates an AC signal that is proportional to vehicle speed. Sends signal to amplifier for use in calculating the proper amount of stroke allowing the servo to maintain vehicle speed.
NOTE: SPEED CONTROL SERVO MONITORS GROUND CIRCUIT THROUGH STOPLAMP CIRCUIT AND CLUTCH PEDAL POSITION SWITCH ON MANUAL TRANSMISSION EQUIPPED VEHICLES.
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.