C427

14401

B119
Side air bag sensor, left



F02058

Pin	Circuit	Circuit Function
1	15S-JA39 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
	9-JA39 (BN)	Sensor signal return (reference/ground)
2	91-JA39 (BK/YE)	Ground
	8-JH39 (WH)	Sensor signal

C428

14014

B118
Side air bag sensor, right



F02058

Pin	Circuit	Circuit Function
1	15S-JA40 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), switched
	9-JA40 (BN/WH)	Sensor signal return (reference/ground)
2	91-JA40 (BK/WH)	Ground
	8-JA40 (WH/VT)	Sensor signal

C430 (GY)

14405

E105
Reversing lamp, left

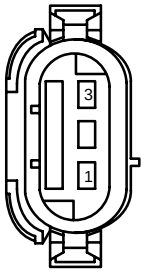

F03099

Pin	Circuit	Circuit Function
1	31-LG9 (BK)	Ground
2	–	not used
3	15S-LG9A (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched

C431 (GY)

14405

E109
Reversing lamp, right

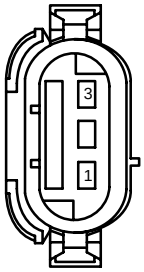

F03099

Pin	Circuit	Circuit Function
1	31-LG16 (BK)	Ground
2	–	not used
3	15S-LG16 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched