C771

9H589

Y108
Injector 1

ZETEC–VCT

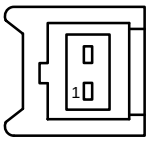

F02012

Pin	Circuit	Circuit Function
1	15-RL10 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
2	91S-RL10 (BK/WH)	Ground, switched

C773

9H589

Y110
Injector 3

ZETEC–VCT

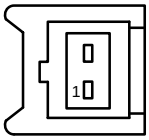

F02012

Pin	Circuit	Circuit Function
1	15-RL12 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
2	91S-RL12 (BK/BU)	Ground, switched

C771

9H589

Y108
Injector 1

DURATEC–VE



F02058

Pin	Circuit	Circuit Function
1	91S-RL10 (BK/WH)	Ground, switched
2	15-RL10 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)

C773

9H589

Y110
Injector 3

DURATEC–VE



F02058

Pin	Circuit	Circuit Function
1	91S-RL12 (BK/BU)	Ground, switched
2	15-RL12 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)

C772

9H589

Y109
Injector 2

ZETEC–VCT

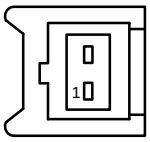

F02012

Pin	Circuit	Circuit Function
1	15-RL11 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
2	91S-RL11 (GN/YE)	Ground, switched

C774

9H589

Y111
Injector 4

ZETEC–VCT

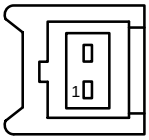

F02012

Pin	Circuit	Circuit Function
1	15-RL13 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)
2	91S-RL13 (BK/OG)	Ground, switched

C772

9H589

Y109
Injector 2

DURATEC–VE



F02058

Pin	Circuit	Circuit Function
1	91S-RL11 (BK/YE)	Ground, switched
2	15-RL11 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)

C774

9H589

Y111
Injector 4

DURATEC–VE



F02058

Pin	Circuit	Circuit Function
1	91S-RL13 (BK/OG)	Ground, switched
2	15-RL13 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)