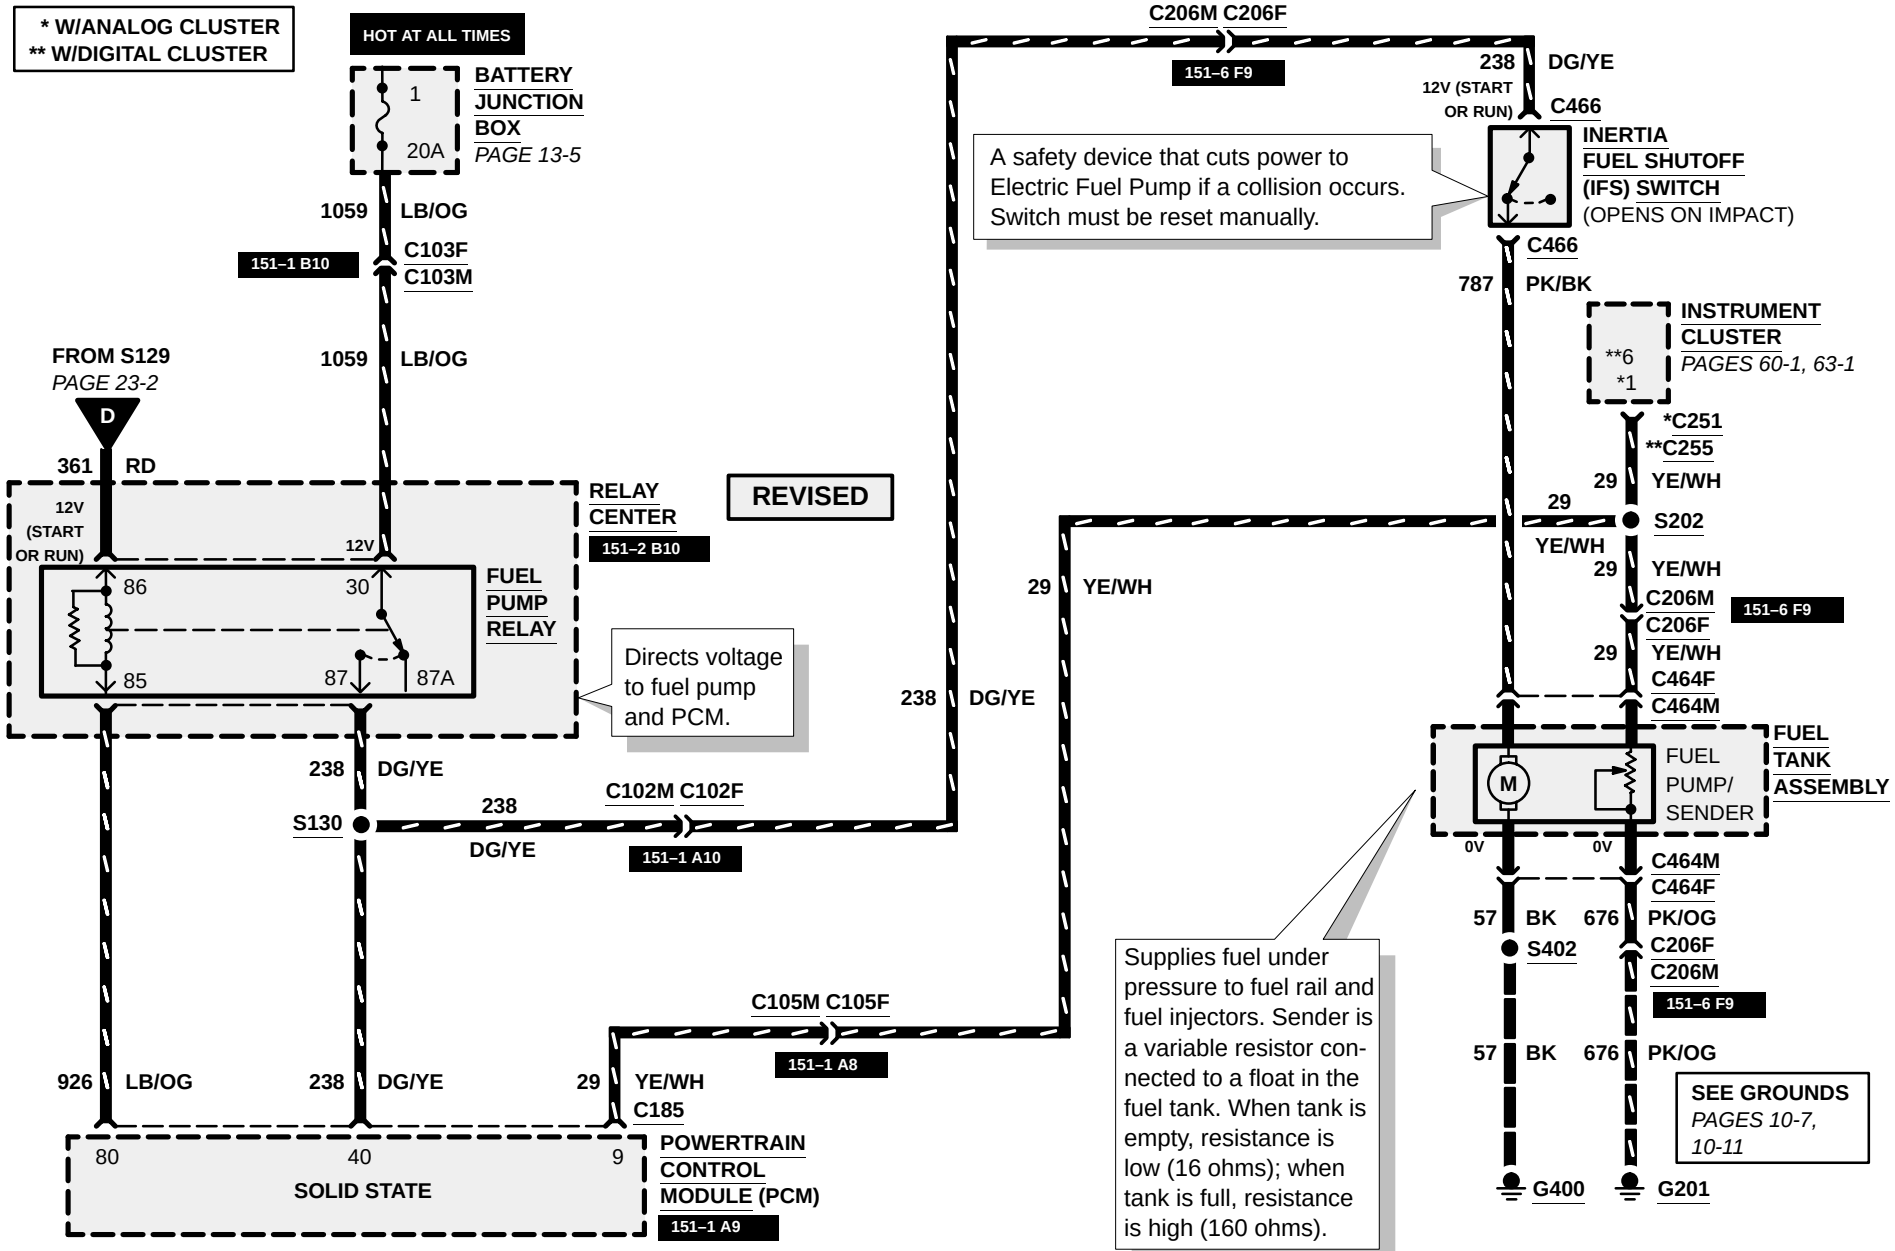
* W/ANALOG CLUSTER
** W/DIGITAL CLUSTER
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-5
1
20A
1059 LB/OG
151–1 B10
C103F
C103M
1059 LB/OG
FROM S129
PAGE 23-2
D
361 RD
12V (START OR RUN)
12V
RELAY CENTER
151–2 B10
REVISED
86
30
85
87
87A
FUEL PUMP RELAY
Directs voltage to fuel pump and PCM.
238 DG/YE
238 DG/YE
S130
238
DG/YE
C102M C102F
151–1 A10
C206M C206F
151–6 F9
238 DG/YE
12V (START OR RUN)
C466
INERTIA FUEL SHUTOFF (IFS) SWITCH
(OPENS ON IMPACT)
A safety device that cuts power to Electric Fuel Pump if a collision occurs. Switch must be reset manually.
C466
787 PK/BK
INSTRUMENT CLUSTER
PAGES 60-1, 63-1
**6
*1
*C251
**C255
29 YE/WH
29
S202
YE/WH
29 YE/WH
C206M
C206F
151–6 F9
29 YE/WH
C464F
C464M
29 YE/WH
C464M
C464F
FUEL TANK ASSEMBLY
FUEL PUMP/ SENDER
M
0V
0V
57 BK
S402
676 PK/OG
C206F
C206M
151–6 F9
57 BK
676 PK/OG
SEE GROUNDS
PAGES 10-7, 10-11
G400
G201
Supplies fuel under pressure to fuel rail and fuel injectors. Sender is a variable resistor connected to a float in the fuel tank. When tank is empty, resistance is low (16 ohms); when tank is full, resistance is high (160 ohms).
C105M C105F
151–1 A8
926 LB/OG
238 DG/YE
29 YE/WH
C185
80
40
9
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–1 A9