131-5 PARKING AID

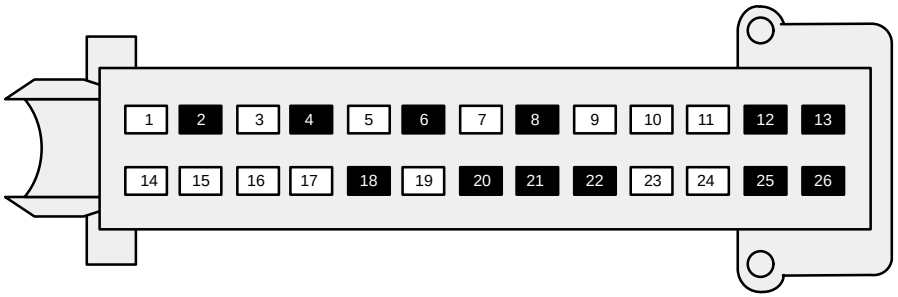

C421

PARKING AID MODULE (PAM)

PIN	CIRCUIT	CIRCUIT FUNCTION
1	295 (LB/PK)	Power Feed (Hot in Run)
2	–	NOT USED
3	57 (BK)	Ground
4	–	NOT USED
5	70 (LB/WH)	ISO 9141
6	–	NOT USED
7	1435 (DG/VT)	On/Off Switch
8	–	NOT USED
9	140 (BK/PK)	Reverse Input
10	1442 (DG/WH)	Left Center Sensor Input
11	1441 (WH/LG)	Left Rear Sensor Input
12	–	NOT USED
13	–	NOT USED
14	1437 (BK/PK)	Rear Sounder (+)
15	1439 (BN/PK)	Sensor Power
16	1440 (DG/YE)	Sensor Ground
17	1438 (DG)	Rear Sounder (–)
18	–	NOT USED
19	1436 (VT/OG)	Status LED
20	–	NOT USED
21	–	NOT USED
22	–	NOT USED
23	1443 (WH/LB)	Right Center Sensor Input
24	1444 (DB/YE)	Right Rear Sensor Input
25	–	NOT USED
26	–	NOT USED

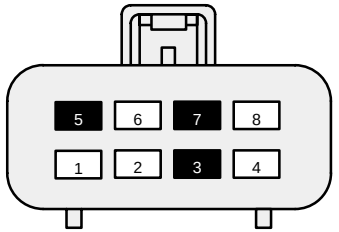

C263

PARKING AID DISABLE SWITCH

PIN	CIRCUIT	CIRCUIT FUNCTION
1	676 (PK/OG)	Ground
2	1435 (DG/VT)	On/Off Switch
3	–	NOT USED
4	57 (BK)	Ground
5	–	NOT USED
6	1436 (VT/OG)	Status LED
7	–	NOT USED
8	19 (LB/RD)	Switch Illumination

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C242a	13-39