65-3 WARNING INDICATORS

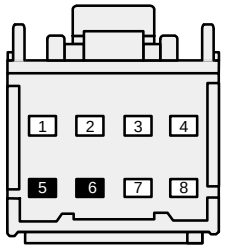

C2004F

WARNING LAMPS MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	608 (BK/YE)	Air Bag Indicator
2	603 (DG)	Anti-Lock Brake Indicator
3	977 (VT/WH)	Brake Warning Switch
4	383 (RD/WH)	Hazard Warning Indicator Output
5	–	NOT USED
6	–	NOT USED
7	57 (BK)	Ground
8	640 (RD/YE)	Power (Hot in Start or Run)

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C162	42-3
C261	46-5
C292	13-19
C2026	58-4