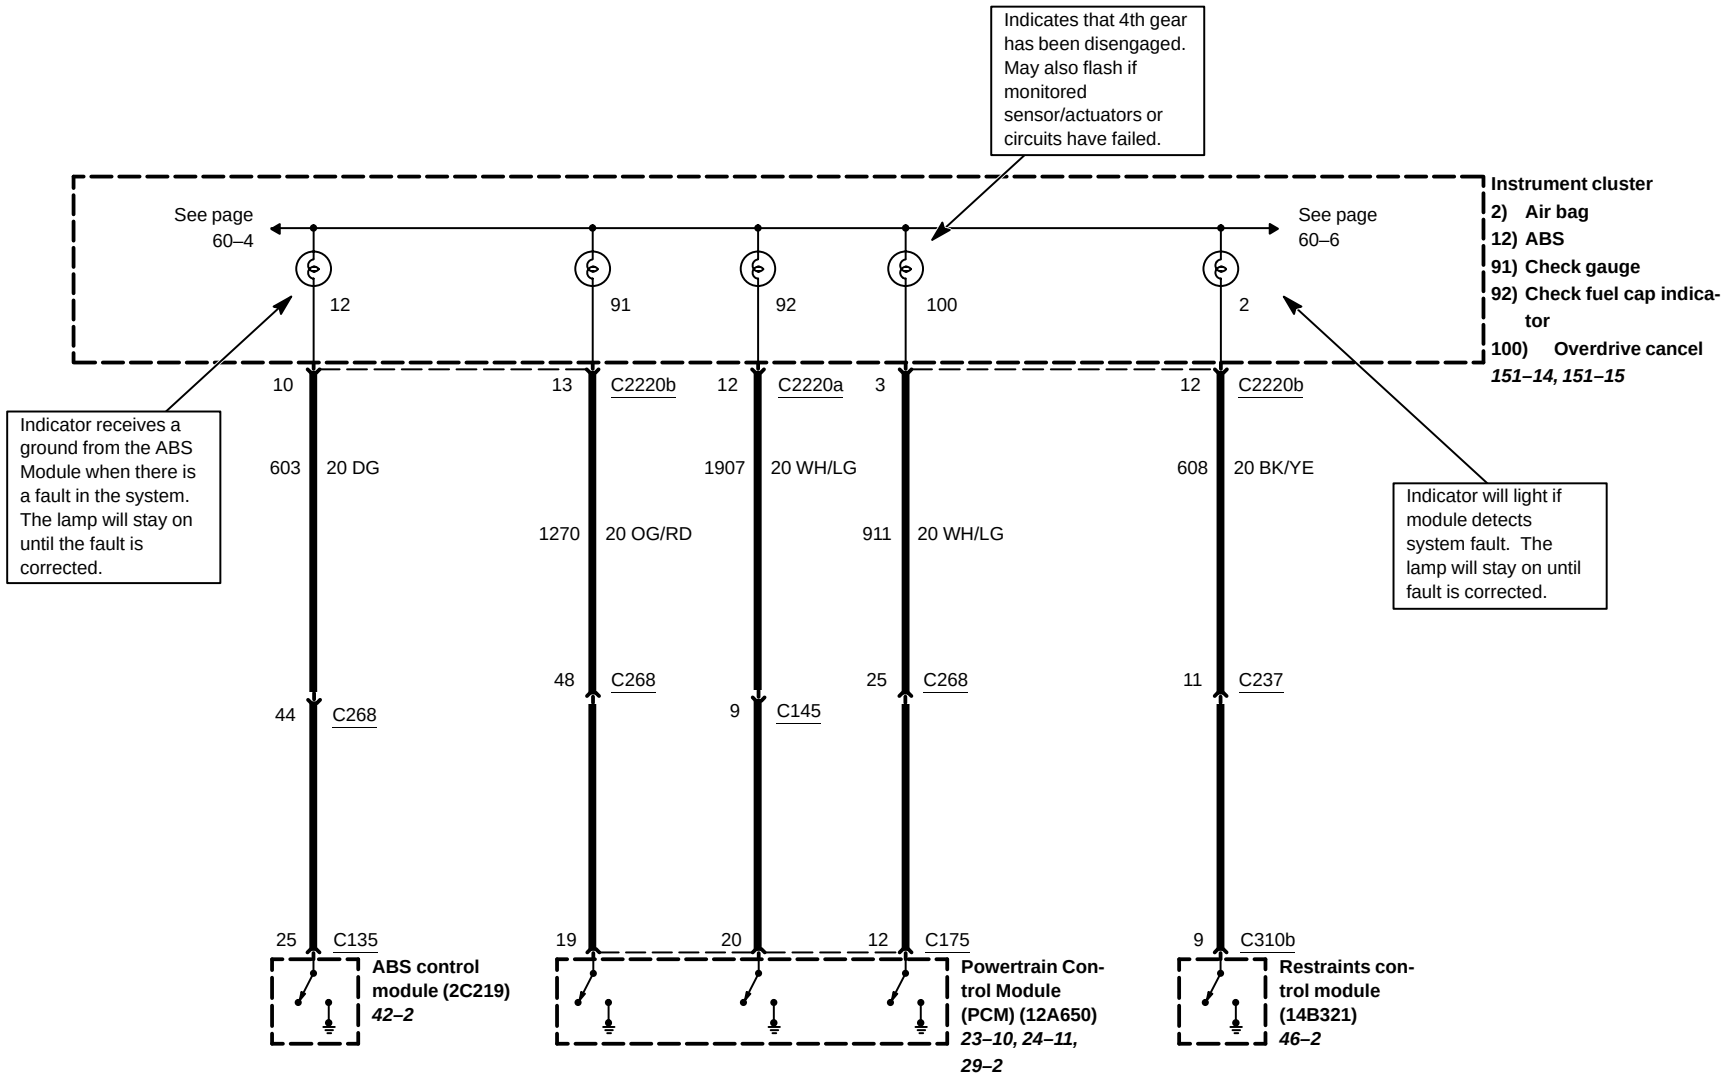
Indicates that 4th gear has been disengaged. May also flash if monitored sensor/actuators or circuits have failed.
See page 60–4
See page 60–6
Instrument cluster
2) Air bag
12) ABS
91) Check gauge
92) Check fuel cap indicator
100) Overdrive cancel
151–14, 151–15
12
91
92
100
2
Indicator receives a ground from the ABS Module when there is a fault in the system. The lamp will stay on until the fault is corrected.
Indicator will light if module detects system fault. The lamp will stay on until fault is corrected.
10
13 C2220b
12 C2220a
3
12 C2220b
603 20 DG
1907 20 WH/LG
608 20 BK/YE
1270 20 OG/RD
911 20 WH/LG
48 C268
25 C268
11 C237
44 C268
9 C145
25 C135
19
20
12 C175
9 C310b
ABS control module (2C219)
42–2
Powertrain Control Module (PCM) (12A650)
23–10, 24–11, 29–2
Restraints control module (14B321)
46–2