## C270b (GY)

**14401**

P91
Central Junction
Box (CJB) (14A068)

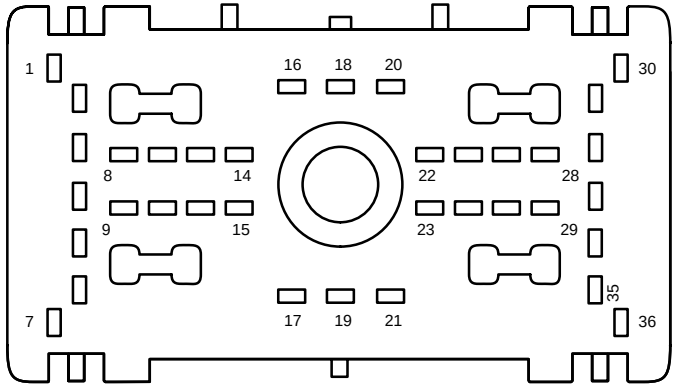


F36001

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1 (DB) | Horn relay, control |
| 2 | 44 (LB) | Turn signal flasher, to turn signal switch |
| 3 | – | not used |
| 4 | 275 (YE) | Blower motor relay, control |
| 5 | – | not used |
| 6 | 1002 (BK/PK) | Voltage in Run or Accessory (overload protected) |
| 7 | – | not used |
| 8 | – | not used |
| 9 | – | not used |
| 10 | – | not used |
| 11 | 59 (DG/VT) | Fused rear window defrost relay, switched power |
| 12 | – | not used |
| 13 | – | not used |
| 14 | 1044 (WH/YE) | Voltage supplied in Start and Run (overload protected) |
| 15 | 385 (WH/RD) | Voltage supplied at all times (overload protected) |
| 16 | 371 (PK/WH) | Blower motor relay, switched output |
| 17 | 297 (BK/LG) | Voltage in Run or Accessory (overload protected) |
| 18 | – | not used |
| 19 | 40 (LB/WH) | Voltage supplied at all times (overload protected) |

| Pin | Circuit | Circuit function |
|---|---|---|
| 20 | 687 (GY/YE) | Voltage in Run (overload protected) |
| 21 | 16 (RD/LG) | Voltage supplied in Start and Run (overload protected) |
| 22 | – | not used |
| 23 | 640 (RD/YE) | Voltage supplied in Start and Run (overload protected) |
| 24 | 705 (LG/OG) | Battery saver relay, switched power |
| 25 | 1087 (OG) | Voltage in Run (overload protected) |
| 26 | 1047 (LG/RD) | Voltage supplied at all times (overload protected) |
| 27 | – | not used |
| 28 | 383 (RD/WH) | Emergency warning flasher, feed |
| 29 | 298 (VT/OG) | Voltage in Run (overload protected) |
| 30 | – | not used |
| 31 | 14 (BN) | Power, Exterior lamps |
| 32 | 15 (RD/YE) | Low beam, Ground |
| 33 | 32 (RD/LB) | Voltage supplied in Start (overload protected) |
| 34 | 1039 (BK/YE) | Voltage in Run (overload protected) |
| 35 | 109 (VT/WH) | Voltage supplied at all times (overload protected) |
| 36 | – | not used |