C441 (WH)

14K024

N104
Wiper/washer
switch



F11002

Pin	Circuit	Circuit function
1	32-KA10 (WH/GN)	Switched between: Battery voltage, Ground or Open
2	32-KA11 (WH/BK)	Switched between: Battery voltage, Ground or Open
3	–	not used
4	32-KA19 (WH/BK)	Switched between: Battery voltage, Ground or Open
5	8-KA19 (WH/BK)	Sensor signal
6	8-KA18 (WH)	Sensor signal
7	32-KA28 (WH/RD)	Switched between: Battery voltage, Ground or Open
8	15-KA19 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)
9	33-KA6 (YE/BK)	Switched between: Battery voltage, Ground or Open
10	31-KA19 (BK)	Ground
11	32-KA34 (WH/BK)	Switched between: Battery voltage, Ground or Open

C442

14K024

N312
Trip computer
switch

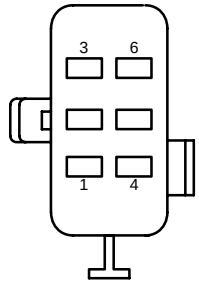

F06065

Pin	Circuit	Circuit function
1	8-GG7 (WH/BU)	Sensor signal
2	8-GG8 (WH/GN)	Sensor signal
3	8-GG10 (WH/VT)	Sensor signal
4	64S-LK40 (BU/RD)	Variable D.C. voltage (not overload protected), Switched
5	8-GG9 (WH/BK)	Sensor signal
6	91-GH9 (BK/OG)	Ground