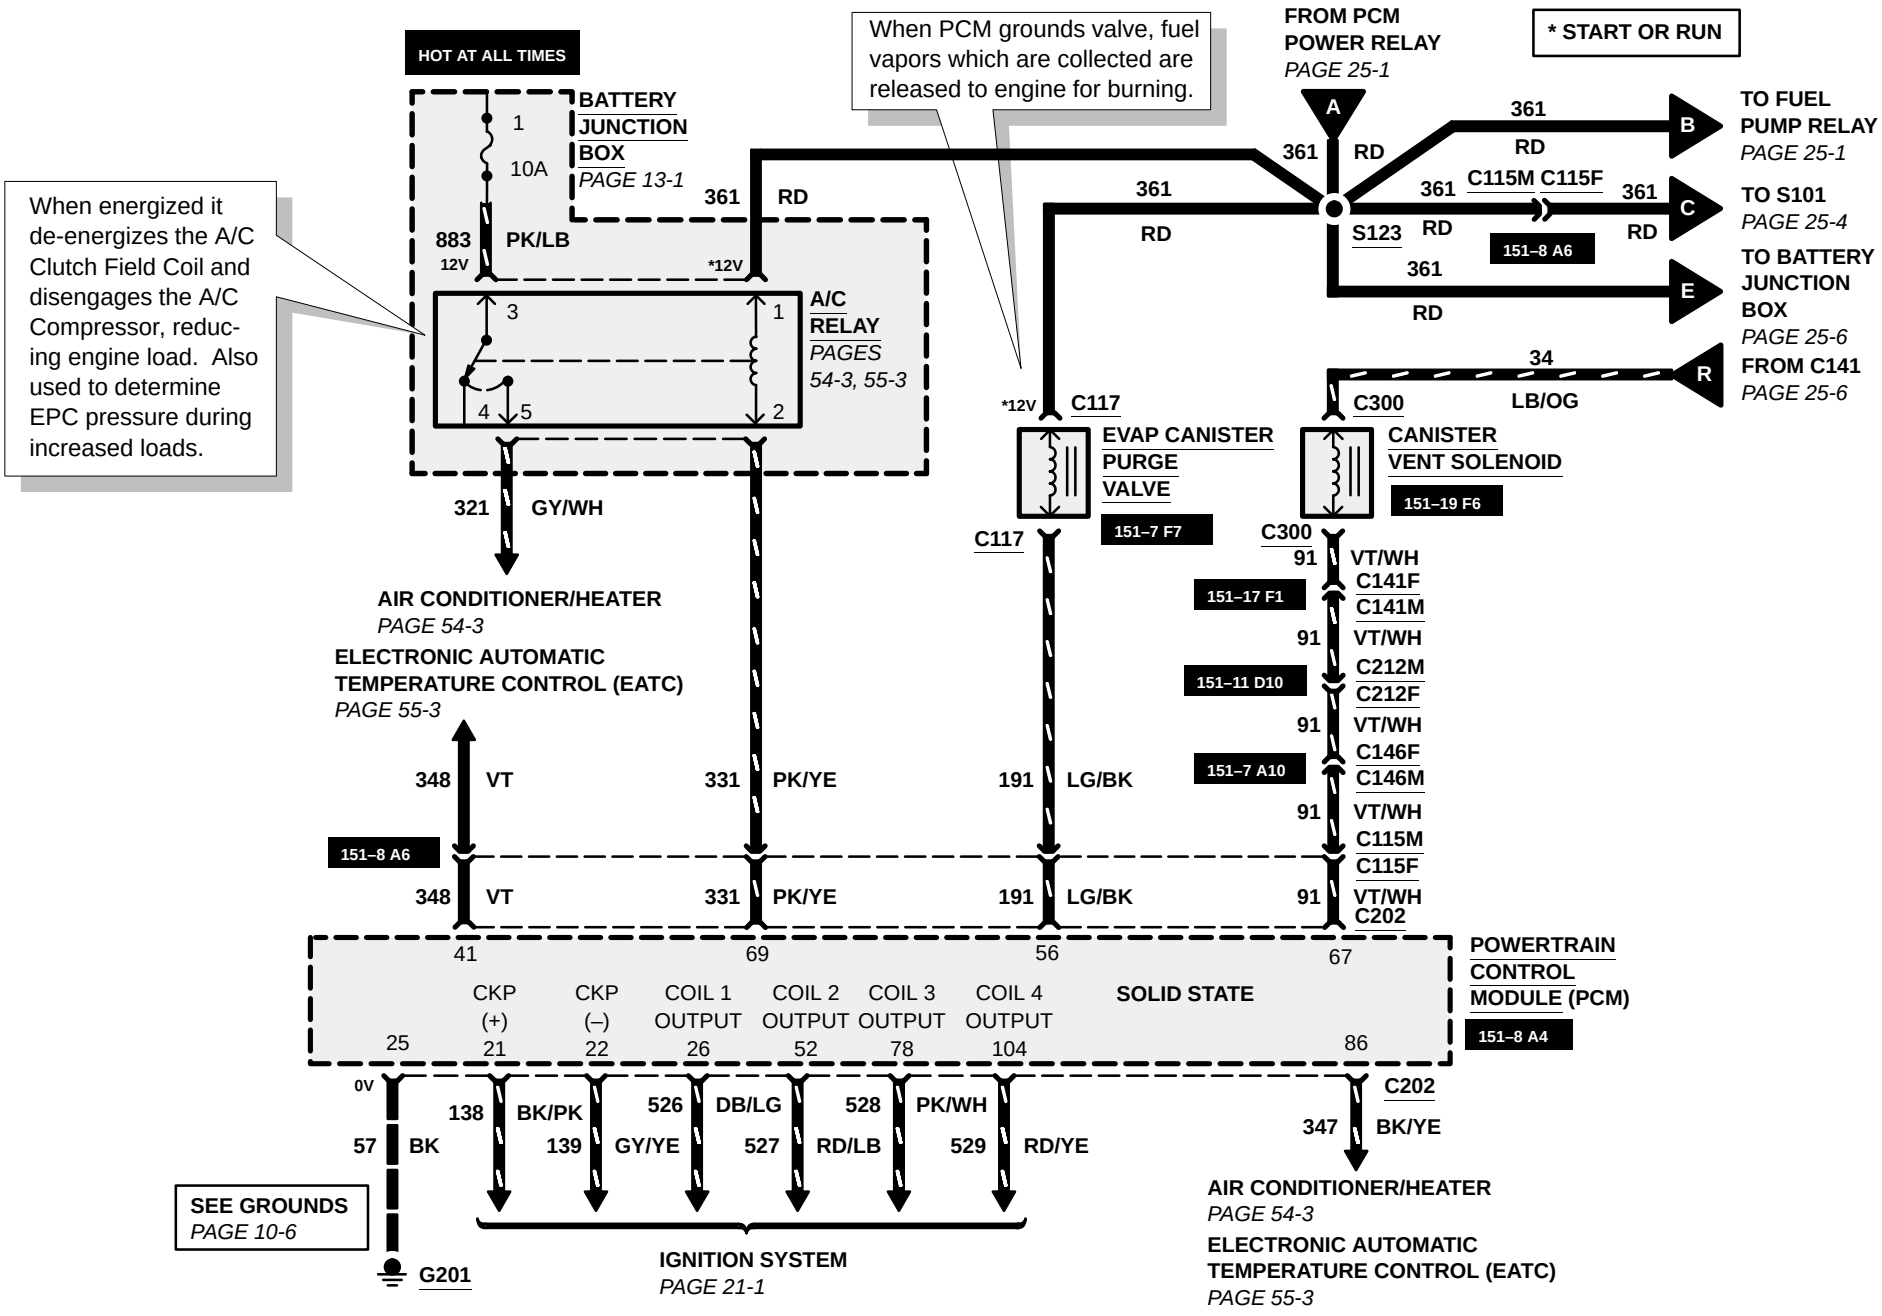
When energized it de-energizes the A/C Clutch Field Coil and disengages the A/C Compressor, reducing engine load. Also used to determine EPC pressure during increased loads.
When PCM grounds valve, fuel vapors which are collected are released to engine for burning.
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-1
10A
883 PK/LB
12V
*12V
361 RD
A/C RELAY
PAGES 54-3, 55-3
321 GY/WH
AIR CONDITIONER/HEATER
PAGE 54-3
ELECTRONIC AUTOMATIC TEMPERATURE CONTROL (EATC)
PAGE 55-3
FROM PCM POWER RELAY
PAGE 25-1
* START OR RUN
TO FUEL PUMP RELAY
PAGE 25-1
TO S101
PAGE 25-4
TO BATTERY JUNCTION BOX
PAGE 25-6
FROM C141
PAGE 25-6
C115M C115F
151–8 A6
S123
C117
EVAP CANISTER PURGE VALVE
151–7 F7
C300
CANISTER VENT SOLENOID
151–19 F6
34 LB/OG
91 VT/WH
C141F C141M
151–17 F1
C212M C212F
151–11 D10
C146F C146M
151–7 A10
C115M C115F
C202
348 VT
331 PK/YE
191 LG/BK
POWERTRAIN CONTROL MODULE (PCM)
151–8 A4
CKP (+)
CKP (–)
COIL 1 OUTPUT
COIL 2 OUTPUT
COIL 3 OUTPUT
COIL 4 OUTPUT
SOLID STATE
138 BK/PK
139 GY/YE
526 DB/LG
527 RD/LB
528 PK/WH
529 RD/YE
347 BK/YE
0V
57 BK
G201
SEE GROUNDS
PAGE 10-6
IGNITION SYSTEM
PAGE 21-1
AIR CONDITIONER/HEATER
PAGE 54-3
ELECTRONIC AUTOMATIC TEMPERATURE CONTROL (EATC)
PAGE 55-3