C178

12B637

Exhaust Pressure Transducer (EPT) sensor

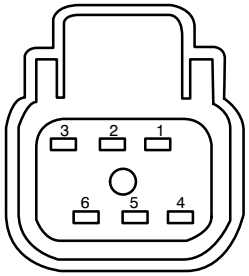

F06297

Pin	Circuit	Circuit function
1	91S-RL7 (BN/GN)	Ground
2	7-RJ7 (YE/BU)	Voltage DC supplied at all times (sensor)
3	8-RJ20 (WH/GN)	Sensor signal
4	15S-RL7 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), memory
5	8-RJ7 (WH/BU)	Sensor signal
6	9-RJ7 (BN/BU)	Sensor signal return (reference/ground)

C181

12B637

Fuel injector 1 (9F593)

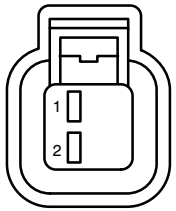

F02069

Pin	Circuit	Circuit function
1	91S-RL10 (BN/WH)	Ground, Switched
2	15S-RL10 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), Switched

C182

9D930/12B637

Fuel injector 2 (9F593)

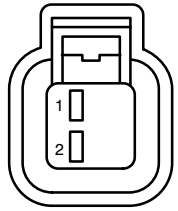

F02069

Pin	Circuit	Circuit function
1	91S-RL11 (BN)	Ground, Switched
2	15S-RL11 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), Switched

C183

12B637

Fuel injector 3 (9F593)

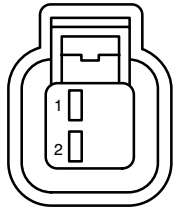

F02069

Pin	Circuit	Circuit function
1	91S-RL12 (BN/RD)	Ground, Switched
2	15S-RL12 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), Switched

C184

12B637

Fuel injector 4 (9F593)

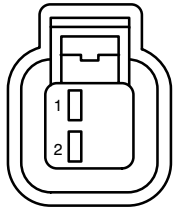

F02069

Pin	Circuit	Circuit function
1	91S-RL13 (BN/BU)	Ground, Switched
2	15S-RL13 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), Switched