### COMPONENT TESTING PROCEDURE

| Connect battery pos. and neg. to terminals: | Check continuity from terminals: | Continuity will be: |
|---|---|---|
| 85 and 86 | 30 to 87 and 30 to 87A | From 30 to 87 only |
| – | 85 to all others | To 86 only |
| – | 30 to all others | To 87A only |

### TERMINALS

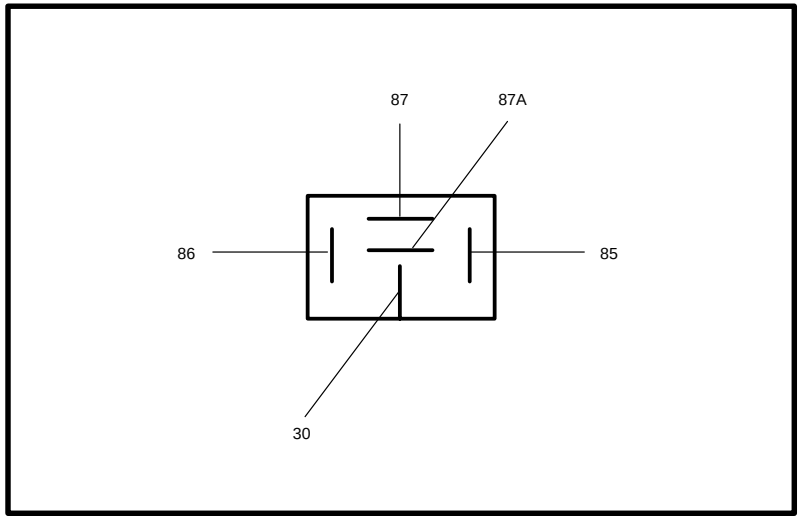

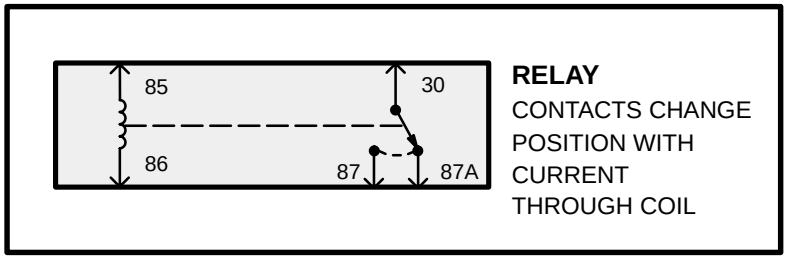
### SCHEMATIC