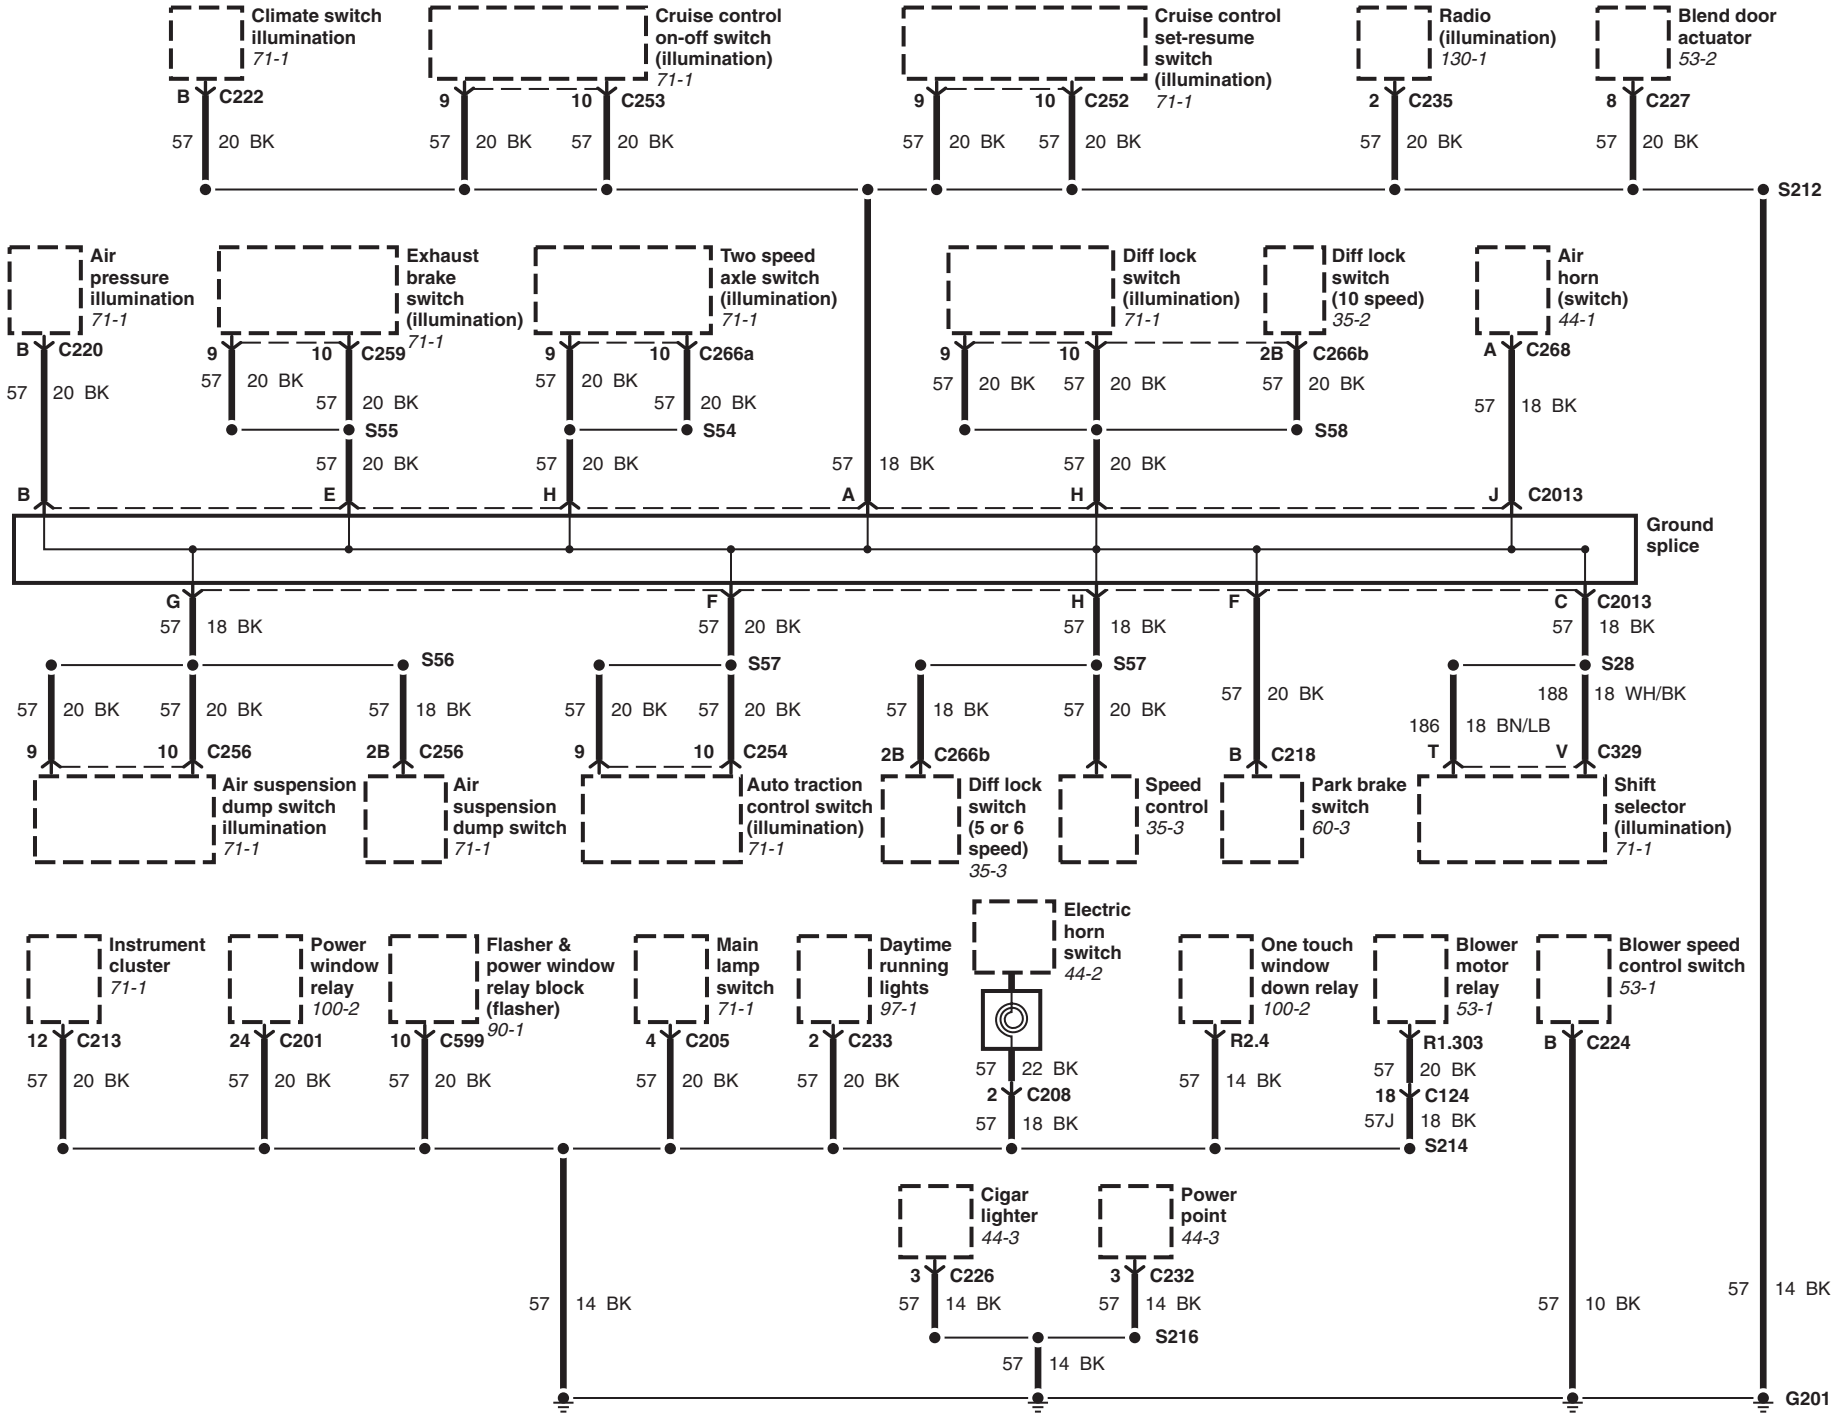
Climate switch illumination 71-1
B C222
57 20 BK
Cruise control on-off switch (illumination) 71-1
9 C253
10 C253
57 20 BK
57 20 BK
Cruise control set-resume switch (illumination) 71-1
9 C252
10 C252
57 20 BK
57 20 BK
Radio (illumination) 130-1
2 C235
57 20 BK
Blend door actuator 53-2
8 C227
57 20 BK
S212
Air pressure illumination 71-1
B C220
57 20 BK
Exhaust brake switch (illumination) 71-1
9 C259
10 C259
57 20 BK
57 20 BK
S55
Two speed axle switch (illumination) 71-1
9 C266a
10 C266a
57 20 BK
57 20 BK
S54
Diff lock switch (illumination) 71-1
9
10
57 20 BK
57 20 BK
Diff lock switch (10 speed) 35-2
2B C266b
57 20 BK
S58
Air horn (switch) 44-1
A C268
57 18 BK
J C2013
57 18 BK
57 20 BK
57 18 BK
57 20 BK
B
E
H
A
H
Ground splice
G
57 18 BK
F
57 20 BK
H
57 18 BK
F
C C2013
57 18 BK
S56
57 20 BK
57 20 BK
9 C256
10 C256
57 18 BK
2B C256
Air suspension dump switch illumination 71-1
Air suspension dump switch 71-1
S57
57 20 BK
57 20 BK
9 C254
10 C254
Auto traction control switch (illumination) 71-1
S57
57 18 BK
57 20 BK
2B C266b
Diff lock switch (5 or 6 speed) 35-3
Speed control 35-3
57 20 BK
B C218
Park brake switch 60-3
S28
188 18 WH/BK
186 18 BN/LB
T
V C329
Shift selector (illumination) 71-1
Instrument cluster 71-1
12 C213
57 20 BK
Power window relay 100-2
24 C201
57 20 BK
Flasher & power window relay block (flasher) 90-1
10 C599
57 20 BK
Main lamp switch 71-1
4 C205
57 20 BK
Daytime running lights 97-1
2 C233
57 20 BK
Electric horn switch 44-2
57 22 BK
2 C208
57 18 BK
One touch window down relay 100-2
R2.4
57 14 BK
Blower motor relay 53-1
R1.303
57 20 BK
18 C124
57J 18 BK
S214
Blower speed control switch 53-1
B C224
57 10 BK
57 14 BK
Cigar lighter 44-3
3 C226
57 14 BK
Power point 44-3
3 C232
57 14 BK
S216
57 14 BK
57 14 BK
G201