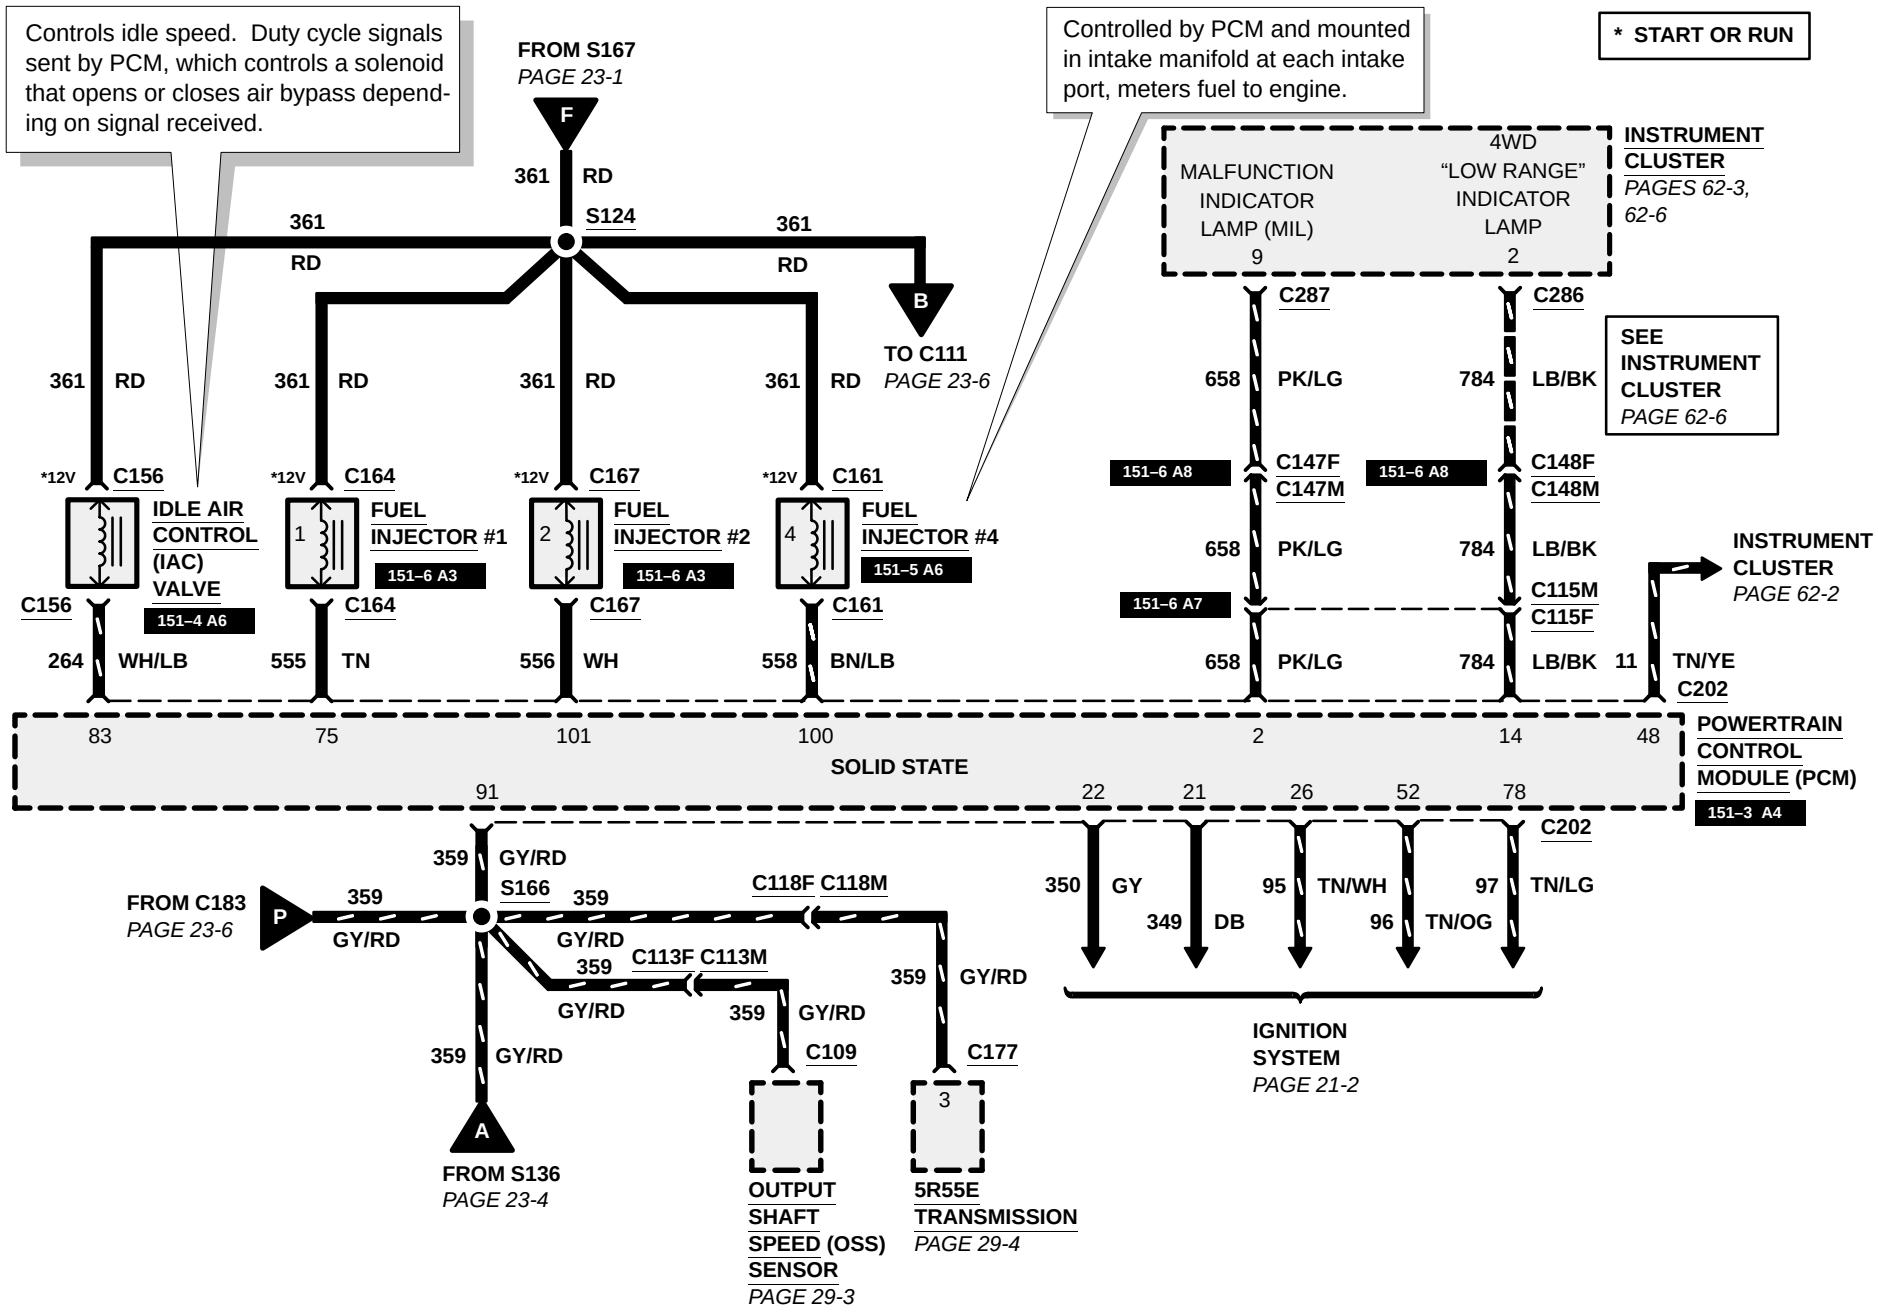
Controls idle speed. Duty cycle signals sent by PCM, which controls a solenoid that opens or closes air bypass depending on signal received.
Controlled by PCM and mounted in intake manifold at each intake port, meters fuel to engine.
* START OR RUN
FROM S167
PAGE 23-1
F
361 RD
S124
361 RD
361 RD
B
TO C111
PAGE 23-6
INSTRUMENT CLUSTER
PAGES 62-3, 62-6
MALFUNCTION INDICATOR LAMP (MIL)
9
4WD "LOW RANGE" INDICATOR LAMP
2
C287
C286
SEE INSTRUMENT CLUSTER
PAGE 62-6
658 PK/LG
784 LB/BK
*12V C156
*12V C164
*12V C167
*12V C161
151–6 A8
C147F
C147M
151–6 A8
C148F
C148M
IDLE AIR CONTROL (IAC) VALVE
151–4 A6
FUEL INJECTOR #1
151–6 A3
FUEL INJECTOR #2
151–6 A3
FUEL INJECTOR #4
151–5 A6
658 PK/LG
784 LB/BK
C115M
C115F
INSTRUMENT CLUSTER
PAGE 62-2
151–6 A7
C156
C164
C167
C161
264 WH/LB
555 TN
556 WH
558 BN/LB
658 PK/LG
784 LB/BK
11 TN/YE
C202
83
75
101
100
2
14
48
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–3 A4
91
22
21
26
52
78
C202
359 GY/RD
S166
359
C118F C118M
FROM C183
PAGE 23-6
P
359 GY/RD
359 GY/RD
C113F C113M
359 GY/RD
359 GY/RD
359 GY/RD
C109
C177
350 GY
349 DB
95 TN/WH
96 TN/OG
97 TN/LG
IGNITION SYSTEM
PAGE 21-2
A
FROM S136
PAGE 23-4
OUTPUT SHAFT SPEED (OSS) SENSOR
PAGE 29-3
3
5R55E TRANSMISSION
PAGE 29-4