C4069

14A005

Y217
Subwoofer, right

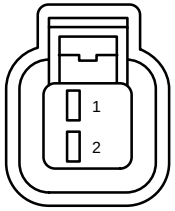

F02069

Pin	Circuit	Circuit Function
1	8-MD23 (WH/BK)	Subwoofer, left (+)
2	10-MD23 (GY/BK)	Subwoofer, left (–)

C4070a

14300

O1
Battery (10655)

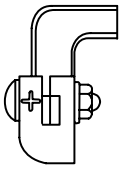

F01121

Pin	Circuit	Circuit Function
1	30-BA6 (RD)	Voltage supplied at all times (not overload protected)
	30-BB10 (RD)	Voltage supplied at all times (not overload protected)

C4070b

14301

O1
Battery (10655)

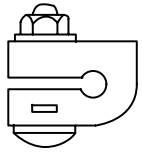

F01127

Pin	Circuit	Circuit Function
1	31-BB10 (BK)	Ground

C4071

14A005

A190
Remote keyless entry module (15K602)

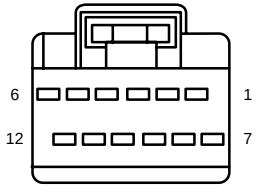

F12077

Pin	Circuit	Circuit Function
1	–	not used
2	–	not used
3	4-EG13 (GY/OG)	Data link, bus positive
4	5-EG13 (BU/BK)	Data link, bus negative
5	–	not used
6	–	not used
7	–	not used
8	31-AA17 (BK/WH)	Ground
9	–	not used
10	–	not used
11	29-AA17 (OG/WH)	Voltage supplied at all times (overload protected)
12	–	not used