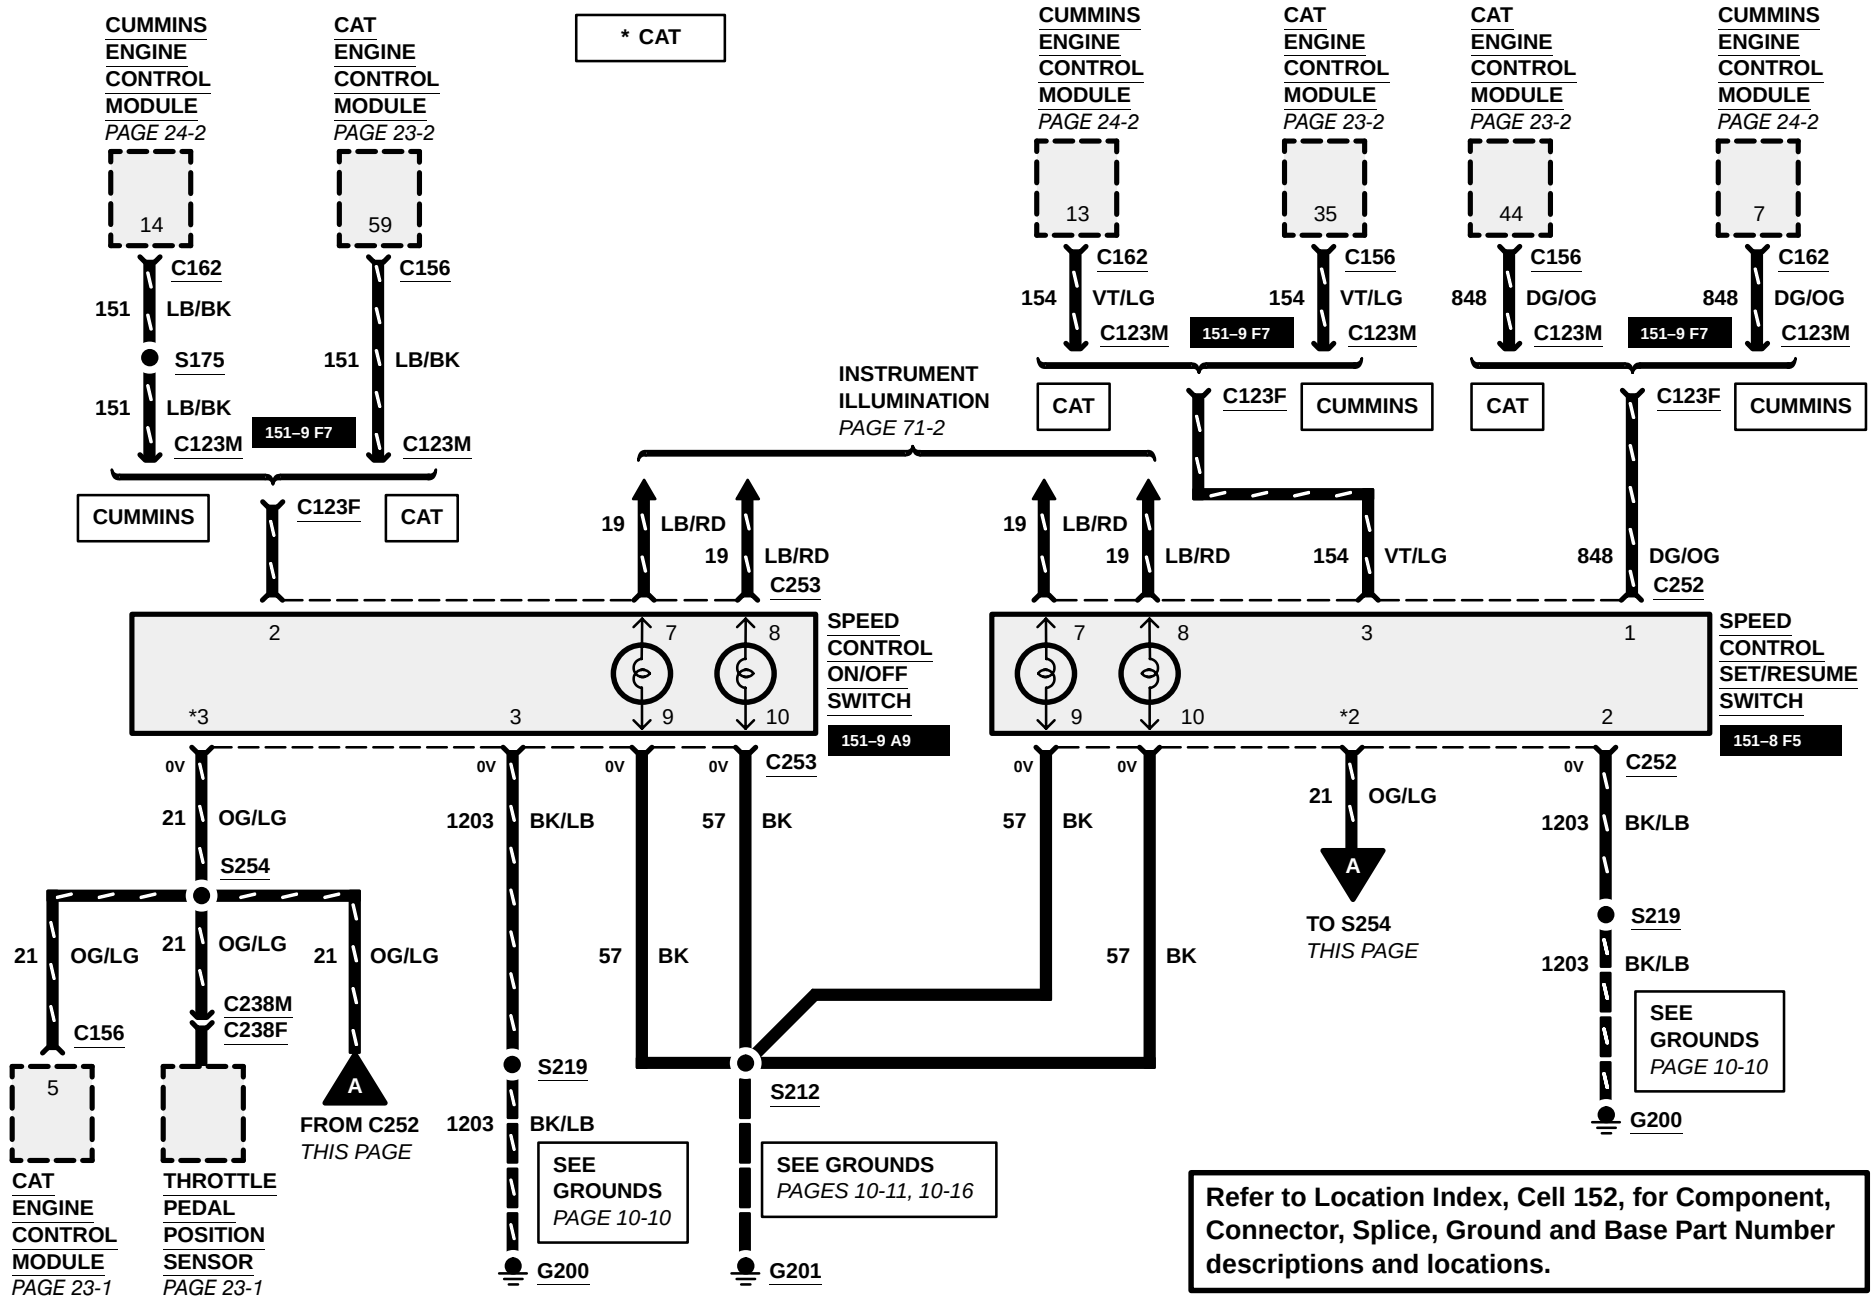
CUMMINS ENGINE CONTROL MODULE
PAGE 24-2
14
C162
151 LB/BK
S175
151 LB/BK
C123M
151–9 F7
CUMMINS
CAT ENGINE CONTROL MODULE
PAGE 23-2
59
C156
151 LB/BK
C123M
CAT
C123F
* CAT
CUMMINS ENGINE CONTROL MODULE
PAGE 24-2
13
C162
154 VT/LG
C123M
151–9 F7
CAT ENGINE CONTROL MODULE
PAGE 23-2
35
C156
154 VT/LG
C123M
CAT
C123F
CUMMINS
CAT ENGINE CONTROL MODULE
PAGE 23-2
44
C156
848 DG/OG
C123M
CAT
CUMMINS ENGINE CONTROL MODULE
PAGE 24-2
7
C162
848 DG/OG
C123M
151–9 F7
C123F
CUMMINS
INSTRUMENT ILLUMINATION
PAGE 71-2
19 LB/RD
19 LB/RD
C253
19 LB/RD
19 LB/RD
154 VT/LG
848 DG/OG
C252
SPEED CONTROL ON/OFF SWITCH
151–9 A9
SPEED CONTROL SET/RESUME SWITCH
151–8 F5
0V
21 OG/LG
S254
1203 BK/LB
57 BK
C253
C252
21 OG/LG
C156
21 OG/LG
C238M
C238F
21 OG/LG
57 BK
57 BK
A
FROM C252
THIS PAGE
TO S254
THIS PAGE
S219
1203 BK/LB
S212
S219
1203 BK/LB
G200
G201
G200
SEE GROUNDS
PAGE 10-10
SEE GROUNDS
PAGES 10-11, 10-16
SEE GROUNDS
PAGE 10-10
CAT ENGINE CONTROL MODULE
PAGE 23-1
THROTTLE PEDAL POSITION SENSOR
PAGE 23-1
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.