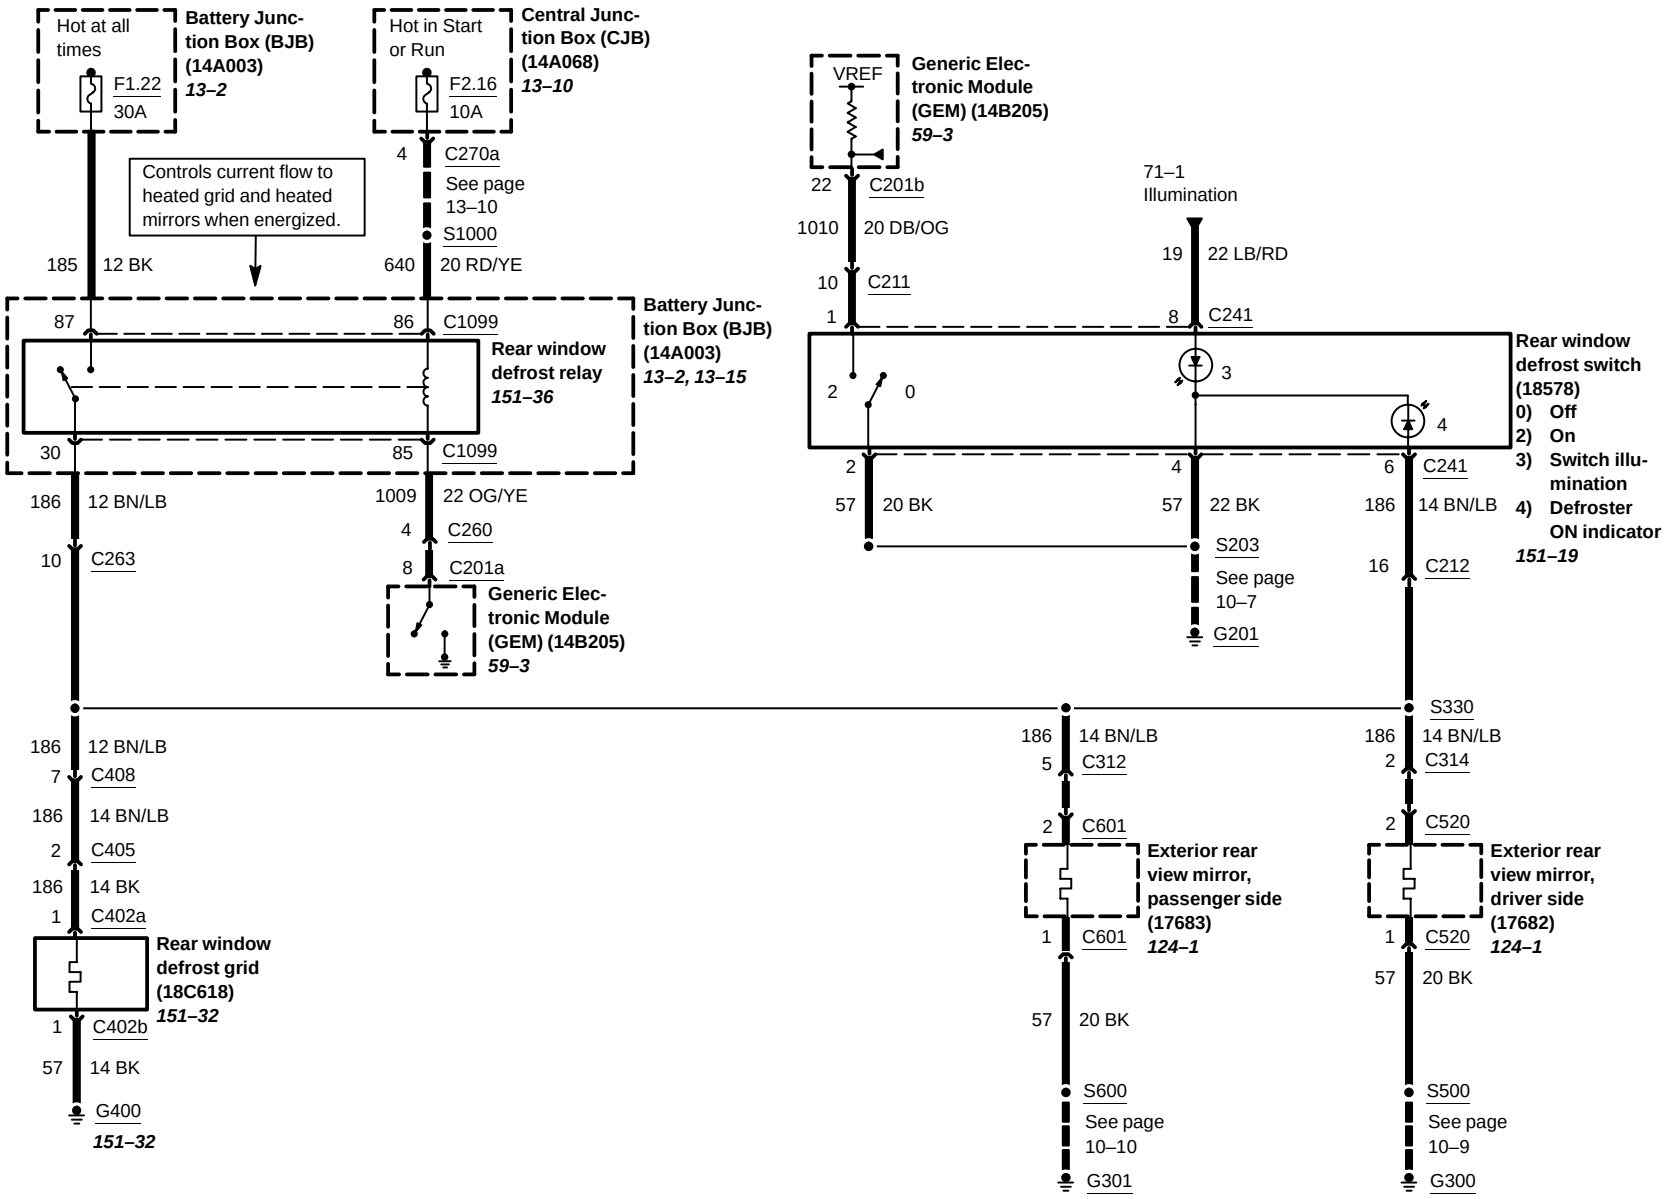
Hot at all times
F1.22
30A
Battery Junction Box (BJB) (14A003) 13–2
Hot in Start or Run
F2.16
10A
Central Junction Box (CJB) (14A068) 13–10
Controls current flow to heated grid and heated mirrors when energized.
185 12 BK
4 C270a
See page 13–10
S1000
640 20 RD/YE
87
86 C1099
Rear window defrost relay 151–36
Battery Junction Box (BJB) (14A003) 13–2, 13–15
30
85 C1099
186 12 BN/LB
10 C263
1009 22 OG/YE
4 C260
8 C201a
Generic Electronic Module (GEM) (14B205) 59–3
VREF
Generic Electronic Module (GEM) (14B205) 59–3
22 C201b
1010 20 DB/OG
10 C211
1
71–1 Illumination
19 22 LB/RD
8 C241
Rear window defrost switch (18578)
0) Off
2) On
3) Switch illumination
4) Defroster ON indicator 151–19
2
0
3
4
2 57 20 BK
4 57 22 BK
S203
See page 10–7
G201
6 C241
186 14 BN/LB
16 C212
S330
186 12 BN/LB
7 C408
186 14 BN/LB
2 C405
186 14 BK
1 C402a
Rear window defrost grid (18C618) 151–32
1 C402b
57 14 BK
G400
151–32
186 14 BN/LB
5 C312
2 C601
Exterior rear view mirror, passenger side (17683) 124–1
1 C601
57 20 BK
S600
See page 10–10
G301
186 14 BN/LB
2 C314
2 C520
Exterior rear view mirror, driver side (17682) 124–1
1 C520
57 20 BK
S500
See page 10–9
G300