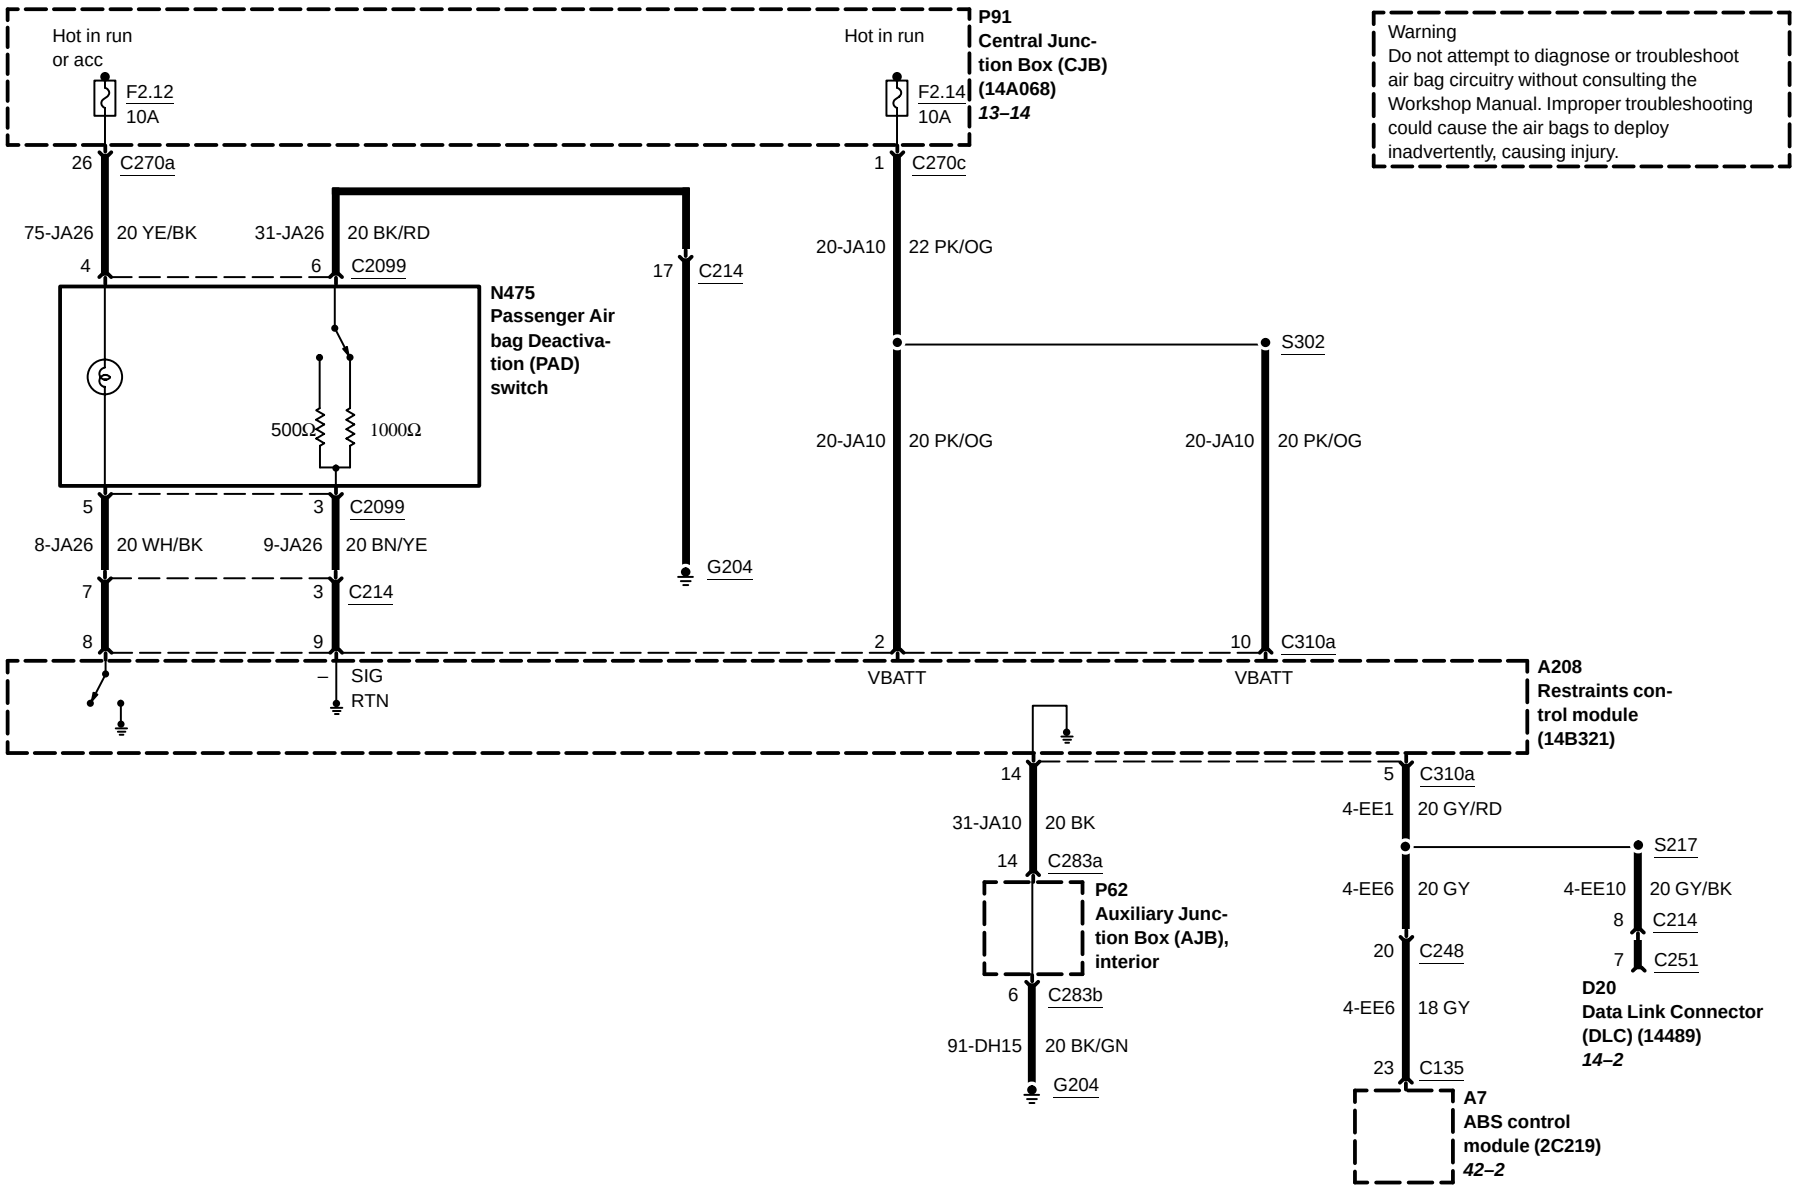
Hot in run or acc
F2.12 10A
Hot in run
F2.14 10A
P91 Central Junction Box (CJB) (14A068) 13–14
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
26 C270a
1 C270c
75-JA26 20 YE/BK
31-JA26 20 BK/RD
4
6 C2099
17 C214
20-JA10 22 PK/OG
S302
N475 Passenger Air bag Deactivation (PAD) switch
500Ω
1000Ω
20-JA10 20 PK/OG
20-JA10 20 PK/OG
5
3 C2099
8-JA26 20 WH/BK
9-JA26 20 BN/YE
7
3 C214
G204
8
9
2
10 C310a
– SIG
RTN
VBATT
VBATT
A208 Restraints control module (14B321)
14
31-JA10 20 BK
14 C283a
P62 Auxiliary Junction Box (AJB), interior
6 C283b
91-DH15 20 BK/GN
G204
5 C310a
4-EE1 20 GY/RD
S217
4-EE6 20 GY
4-EE10 20 GY/BK
8 C214
20 C248
7 C251
D20 Data Link Connector (DLC) (14489) 14–2
4-EE6 18 GY
23 C135
A7 ABS control module (2C219) 42–2