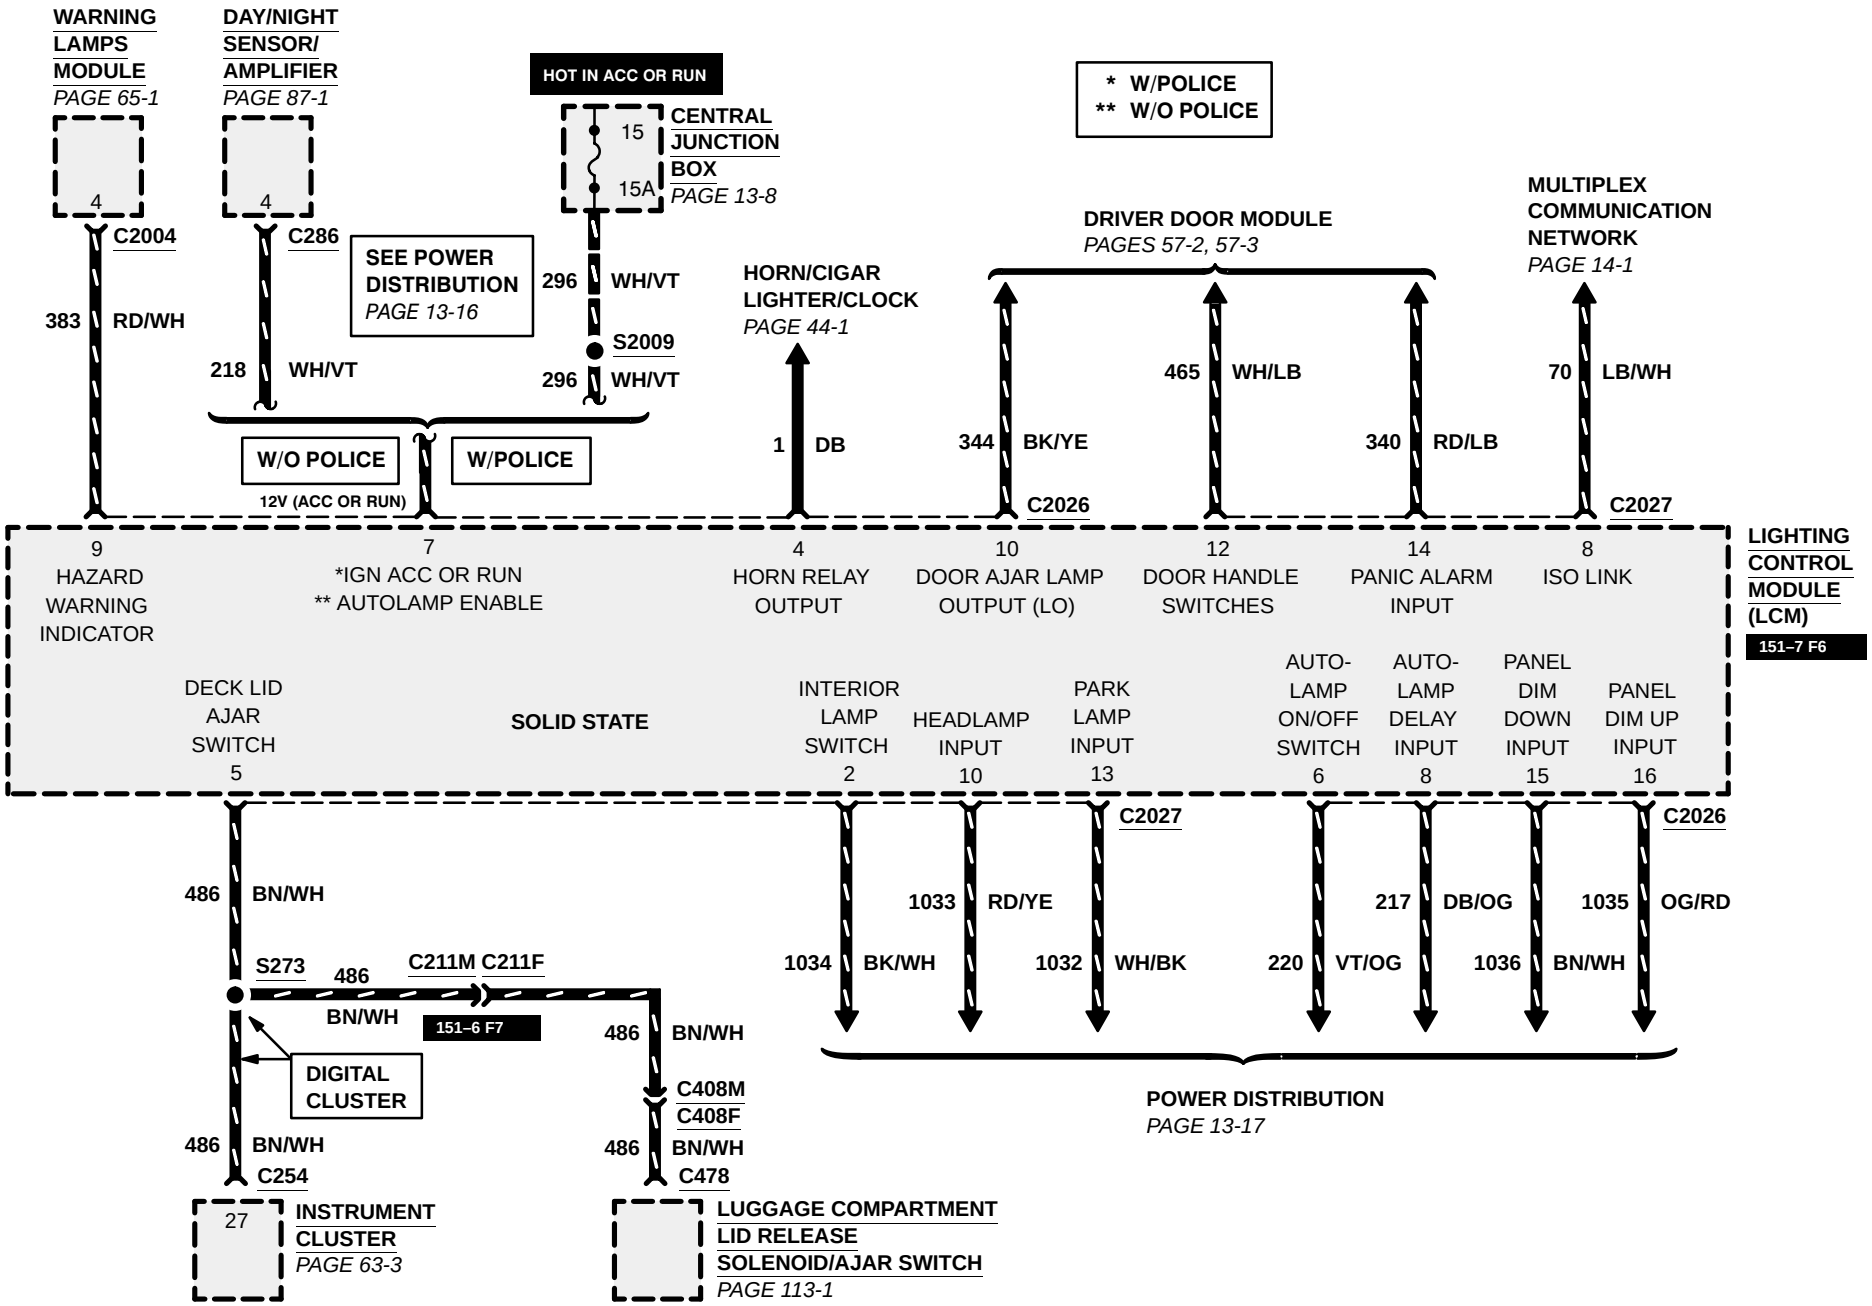
WARNING LAMPS MODULE
PAGE 65-1
4
C2004
383 RD/WH
DAY/NIGHT SENSOR/ AMPLIFIER
PAGE 87-1
4
C286
218 WH/VT
SEE POWER DISTRIBUTION
PAGE 13-16
HOT IN ACC OR RUN
15
15A
CENTRAL JUNCTION BOX
PAGE 13-8
296 WH/VT
S2009
296 WH/VT
W/O POLICE
W/POLICE
12V (ACC OR RUN)
* W/POLICE
** W/O POLICE
HORN/CIGAR LIGHTER/CLOCK
PAGE 44-1
1 DB
DRIVER DOOR MODULE
PAGES 57-2, 57-3
344 BK/YE
C2026
465 WH/LB
340 RD/LB
MULTIPLEX COMMUNICATION NETWORK
PAGE 14-1
70 LB/WH
C2027
LIGHTING CONTROL MODULE (LCM)
151–7 F6
9 HAZARD WARNING INDICATOR
7 *IGN ACC OR RUN ** AUTOLAMP ENABLE
4 HORN RELAY OUTPUT
10 DOOR AJAR LAMP OUTPUT (LO)
12 DOOR HANDLE SWITCHES
14 PANIC ALARM INPUT
8 ISO LINK
SOLID STATE
DECK LID AJAR SWITCH 5
INTERIOR LAMP SWITCH 2
HEADLAMP INPUT 10
PARK LAMP INPUT 13
AUTO-LAMP ON/OFF SWITCH 6
AUTO-LAMP DELAY INPUT 8
PANEL DIM DOWN INPUT 15
PANEL DIM UP INPUT 16
486 BN/WH
S273
486 BN/WH
C211M C211F
151–6 F7
DIGITAL CLUSTER
1033 RD/YE
1034 BK/WH
C2027
1032 WH/BK
217 DB/OG
220 VT/OG
1035 OG/RD
1036 BN/WH
C2026
POWER DISTRIBUTION
PAGE 13-17
486 BN/WH
C254
27
INSTRUMENT CLUSTER
PAGE 63-3
486 BN/WH
C408M
C408F
486 BN/WH
C478
LUGGAGE COMPARTMENT LID RELEASE SOLENOID/AJAR SWITCH
PAGE 113-1