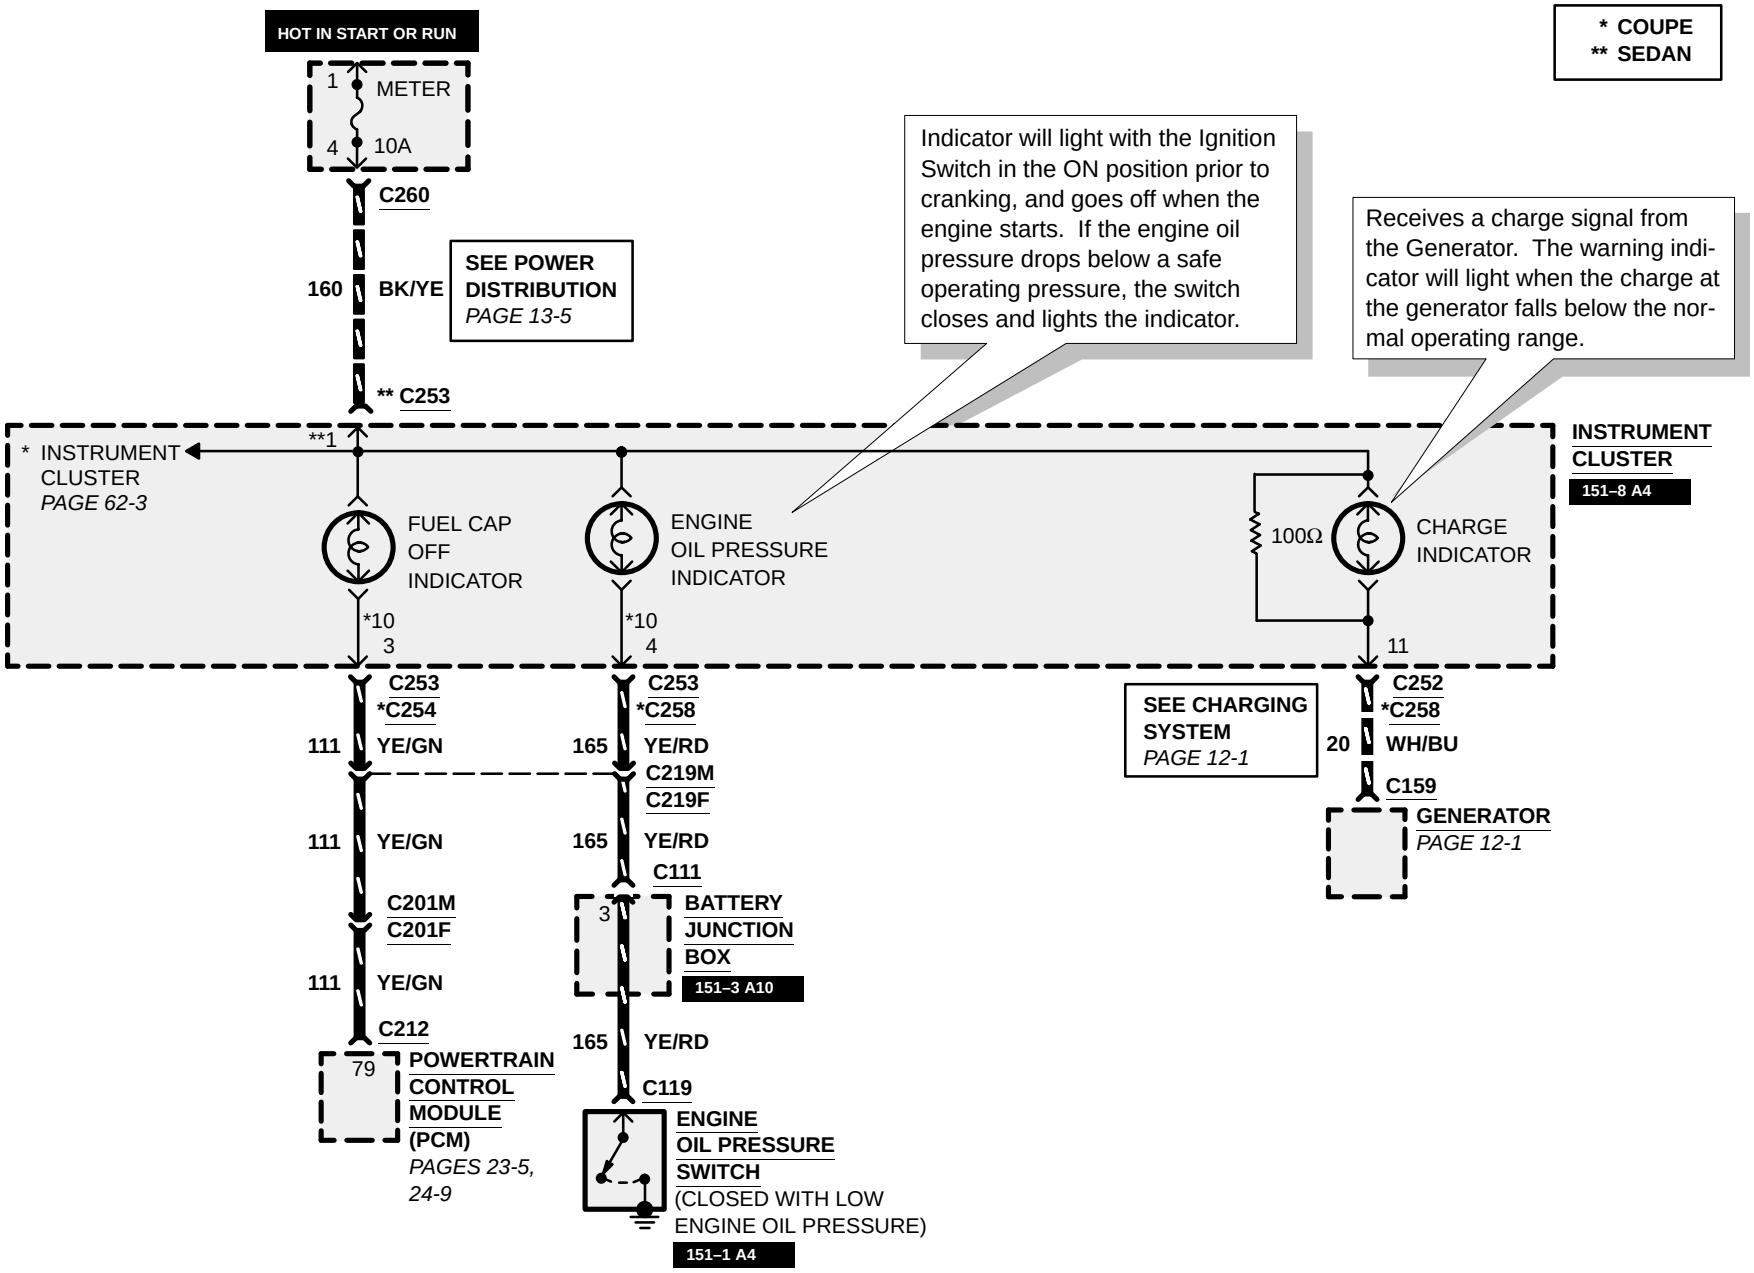
HOT IN START OR RUN
1
METER
4
10A
C260
160
BK/YE
SEE POWER DISTRIBUTION
PAGE 13-5
** C253
**1
* INSTRUMENT CLUSTER
PAGE 62-3
FUEL CAP OFF INDICATOR
ENGINE OIL PRESSURE INDICATOR
100Ω
CHARGE INDICATOR
*10
3
*10
4
11
INSTRUMENT CLUSTER
151–8 A4
Indicator will light with the Ignition Switch in the ON position prior to cranking, and goes off when the engine starts. If the engine oil pressure drops below a safe operating pressure, the switch closes and lights the indicator.
Receives a charge signal from the Generator. The warning indicator will light when the charge at the generator falls below the normal operating range.
* COUPE
** SEDAN
C253
*C254
111
YE/GN
C253
*C258
165
YE/RD
C219M
C219F
111
YE/GN
165
YE/RD
C111
C201M
C201F
3
BATTERY JUNCTION BOX
151–3 A10
111
YE/GN
C212
165
YE/RD
79
POWERTRAIN CONTROL MODULE (PCM)
PAGES 23-5, 24-9
C119
ENGINE OIL PRESSURE SWITCH
(CLOSED WITH LOW ENGINE OIL PRESSURE)
151–1 A4
SEE CHARGING SYSTEM
PAGE 12-1
C252
*C258
20
WH/BU
C159
GENERATOR
PAGE 12-1