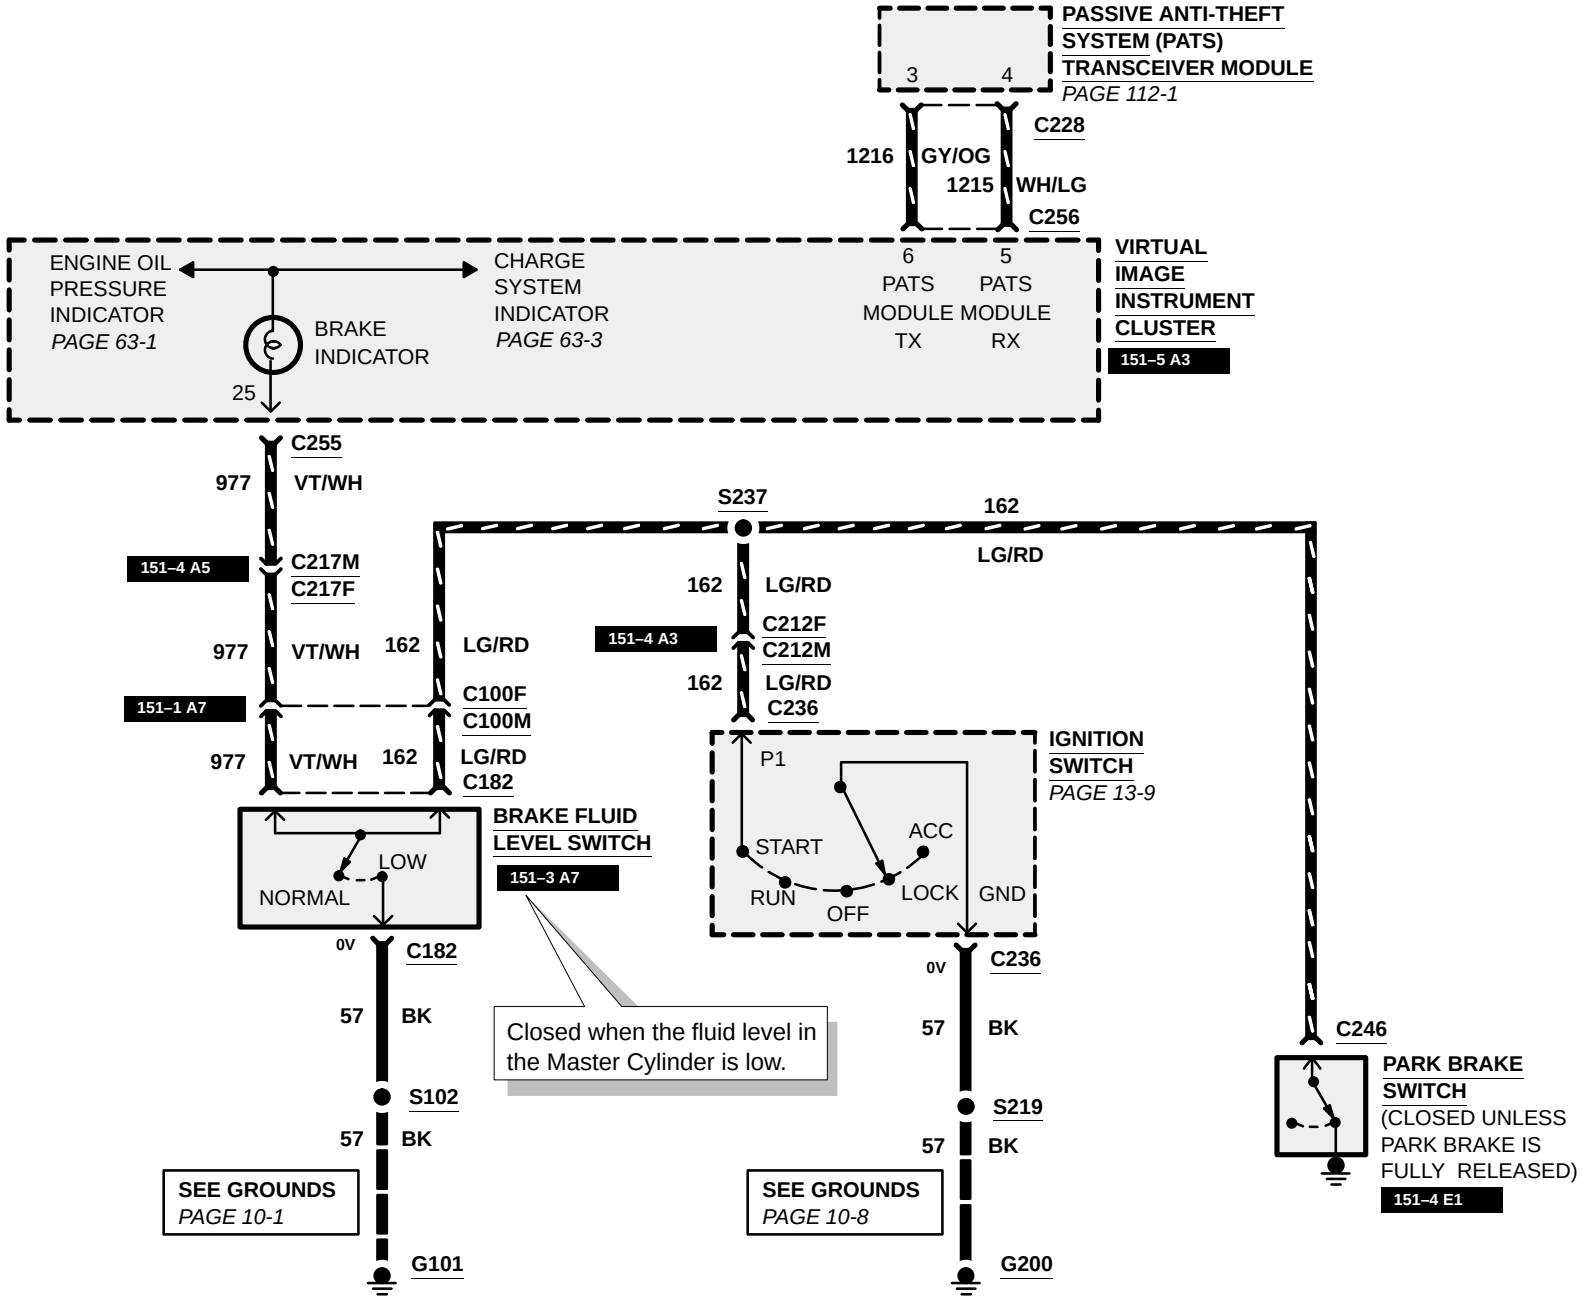
PASSIVE ANTI-THEFT SYSTEM (PATS) TRANSCEIVER MODULE
PAGE 112-1
3
4
C228
1216 GY/OG
1215 WH/LG
C256
ENGINE OIL PRESSURE INDICATOR
PAGE 63-1
BRAKE INDICATOR
25
CHARGE SYSTEM INDICATOR
PAGE 63-3
6 PATS MODULE TX
5 PATS MODULE RX
VIRTUAL IMAGE INSTRUMENT CLUSTER
151–5 A3
C255
977 VT/WH
151–4 A5
C217M
C217F
977 VT/WH
162 LG/RD
151–1 A7
C100F
C100M
977 VT/WH
162 LG/RD
C182
S237
162 LG/RD
162 LG/RD
151–4 A3
C212F
C212M
162 LG/RD
C236
IGNITION SWITCH
PAGE 13-9
P1
START
ACC
RUN
OFF
LOCK
GND
BRAKE FLUID LEVEL SWITCH
151–3 A7
NORMAL
LOW
0V
C182
57 BK
S102
57 BK
SEE GROUNDS
PAGE 10-1
G101
Closed when the fluid level in the Master Cylinder is low.
0V
C236
57 BK
S219
57 BK
SEE GROUNDS
PAGE 10-8
G200
C246
PARK BRAKE SWITCH
(CLOSED UNLESS PARK BRAKE IS FULLY RELEASED)
151–4 E1