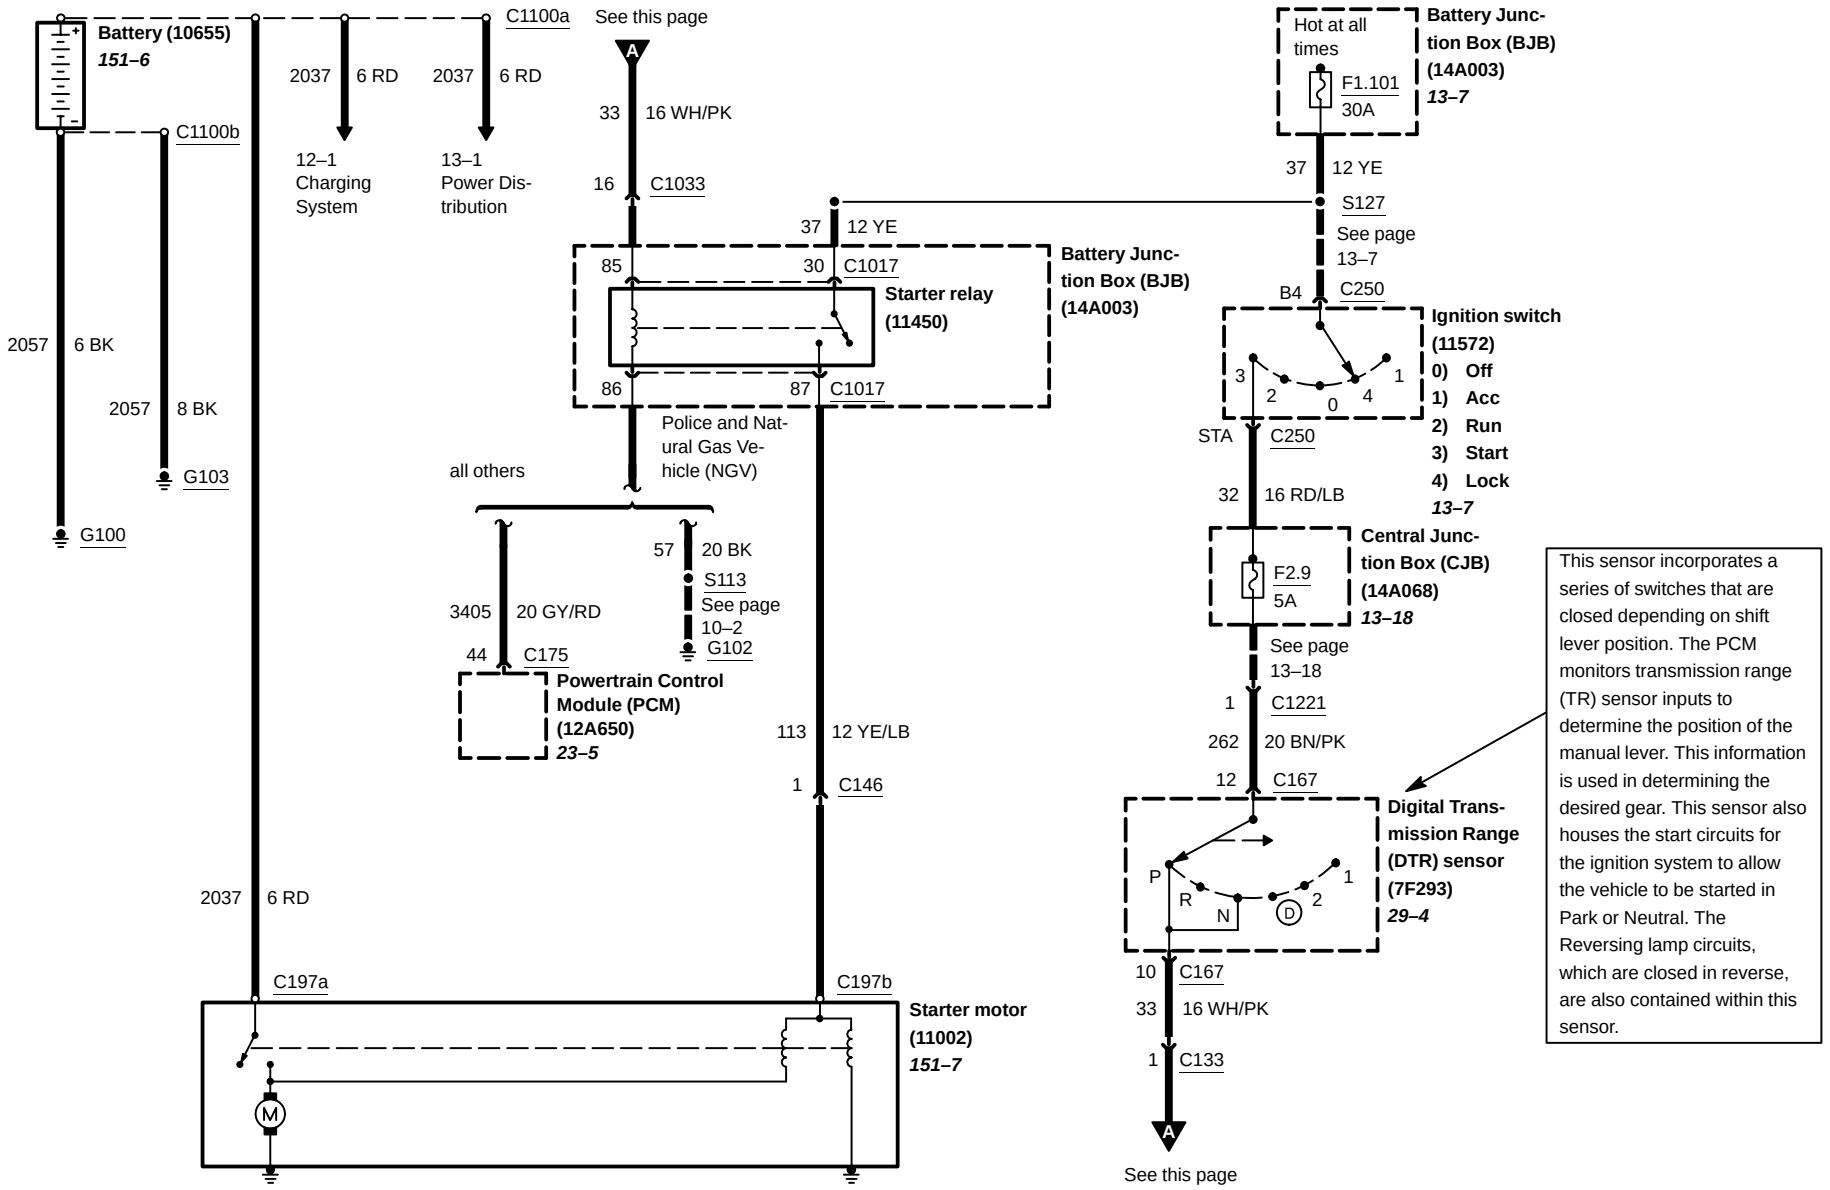
Battery (10655)
151–6
C1100b
2057 6 BK
G100
2057 8 BK
G103
2037 6 RD
12–1
Charging
System
2037 6 RD
13–1
Power Dis-
tribution
C1100a
See this page
A
33 16 WH/PK
16 C1033
37 12 YE
85
30 C1017
Starter relay
(11450)
Battery Junc-
tion Box (BJB)
(14A003)
86
87 C1017
Police and Nat-
ural Gas Ve-
hicle (NGV)
all others
57 20 BK
S113
See page
10–2
G102
3405 20 GY/RD
44 C175
Powertrain Control
Module (PCM)
(12A650)
23–5
113 12 YE/LB
1 C146
2037 6 RD
C197a
C197b
Starter motor
(11002)
151–7
M
Hot at all
times
F1.101
30A
Battery Junc-
tion Box (BJB)
(14A003)
13–7
37 12 YE
S127
See page
13–7
B4 C250
Ignition switch
(11572)
0) Off
1) Acc
2) Run
3) Start
4) Lock
13–7
3
2
0
4
1
STA C250
32 16 RD/LB
Central Junc-
tion Box (CJB)
(14A068)
13–18
F2.9
5A
See page
13–18
1 C1221
262 20 BN/PK
12 C167
Digital Trans-
mission Range
(DTR) sensor
(7F293)
29–4
P
R
N
D
1
2
10 C167
33 16 WH/PK
1 C133
A
See this page
This sensor incorporates a series of switches that are closed depending on shift lever position. The PCM monitors transmission range (TR) sensor inputs to determine the position of the manual lever. This information is used in determining the desired gear. This sensor also houses the start circuits for the ignition system to allow the vehicle to be started in Park or Neutral. The Reversing lamp circuits, which are closed in reverse, are also contained within this sensor.