C2018 (WH)

14N104

D20
Data Link Connector
(DLC) (14489)

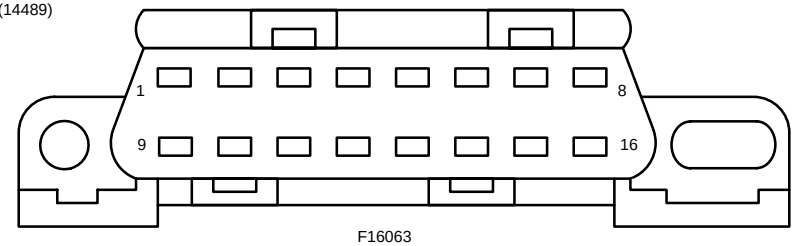

F16063

Pin	Circuit	Circuit function
1	AV23 (BU/WH)	Powertrain Control Module (PCM) (12A650)
2	AW01 (LG/BK)	EVAP canister vent control solenoid, input
3	–	not used
4	AVE3 (BK)	Ground
5	AV41 (BK/RD)	Ground
6	–	not used
7	AV42 (YE/GN)	ISO Bus
8	AV80 (BU)	Voltage supplied in Start and Run (overload protected)
9	BS30 (RD)	ABS control module (2C219)
10	–	not used
11	–	not used
12	AV15 (YE/BK)	Powertrain Control Module (PCM) (12A650)
13	AV07 (YE/RD)	Powertrain Control Module (PCM) (12A650)
14	AW02 (BU/YE)	Voltage supplied in Start and Run (overload protected)
15	–	not used
16	AV50 (RD)	Voltage supplied at all times (overload protected)

C2019 (BK)

19D887

B206
In–vehicle temperature sensor
(19C734)

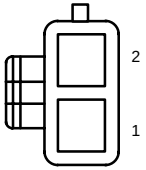

F02079

Pin	Circuit	Circuit function
1	HCE3 (BK)	Sensor signal return (reference/ground)
2	HC04 (GN/WH)	In–vehicle temperature sensor (19C734), input

C2020 (WH)

14N104

E111
Anti–theft ON indicator

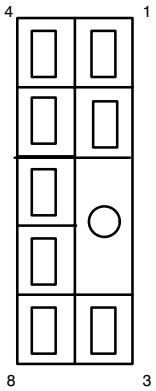

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	PS25 (GN/YE)	Voltage supplied at all times (overload protected)
4	–	not used
5	–	not used
6	–	not used
7	–	not used
8	PS95 (GY)	Anti–theft ON indicator, control