C732

14014

A31
Fuel tank unit
(9H307)

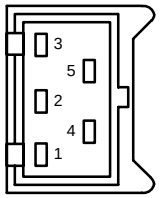

F05012

Pin	Circuit	Circuit function
1	9-RE31 (BN/YE)	Sensor signal return (reference/ground)
2	31-DA9 (BK)	Ground
3	8-RE31 (WH/BK)	Sensor signal
4	91-GA7 (BK/BU)	Ground
5	8-GA7 (WH/RD)	Sensor signal

C738

14A584

K50
One–touch window
relay

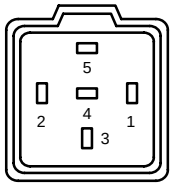

F05065

Pin	Circuit	Circuit function
1	31-AJ16 (BK)	Ground
2	15-AJ16 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)
3	33-AJ15 (YE/GN)	Switched between: Battery voltage, Ground or Open
4	–	not used
5	33-AJ6 (YE)	Switched between: Battery voltage, Ground or Open