C715

14A005

N237
Door ajar switch, driver side rear (14018)

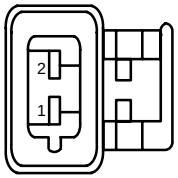

F02379

Pin	Circuit	Circuit function
1	346 (BK/WH)	switch sense, without remote keyless entry
1	759 (LG/YE)	switch sense, with remote keyless entry
2	57 (BK)	Ground

C801

14A005

N110
Window adjust switch, right rear (14A412)

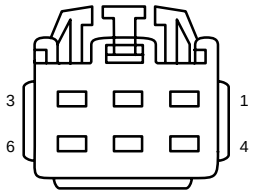

F06213

Pin	Circuit	Circuit function
1	319 (YE/BK)	Window switch, feed, right rear, Up
2	882 (BN/YE)	Window switch, to, Window motor, right rear
3	193 (YE/LG)	switched power
4	–	not used
5	881 (BN)	Window switch, to, Window motor, right rear
6	320 (RD/BK)	Window switch, feed, right rear, Down

C802

14A005

Y19
Speaker, right rear (18808)

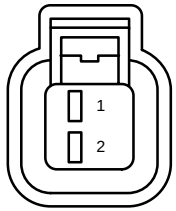

F02069

Pin	Circuit	Circuit function
1	802 (OG/RD)	Speaker, right rear (18808) +
2	803 (BN/PK)	Speaker, right rear (18808) –

C803

14A005

M117
Power window motor, right rear (23394)



F02457

Pin	Circuit	Circuit function
1	882 (BN/YE)	Window switch, to, Window motor, right rear
2	881 (BN)	Window switch, to, Window motor, right rear

C804

14A005

M65
Door lock actuator, right rear (218A42)

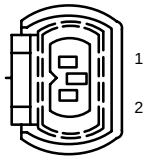

F02116

Pin	Circuit	Circuit function
1	117 (PK/BK)	Door lock, output
2	118 (PK/OG)	Door unlock, output