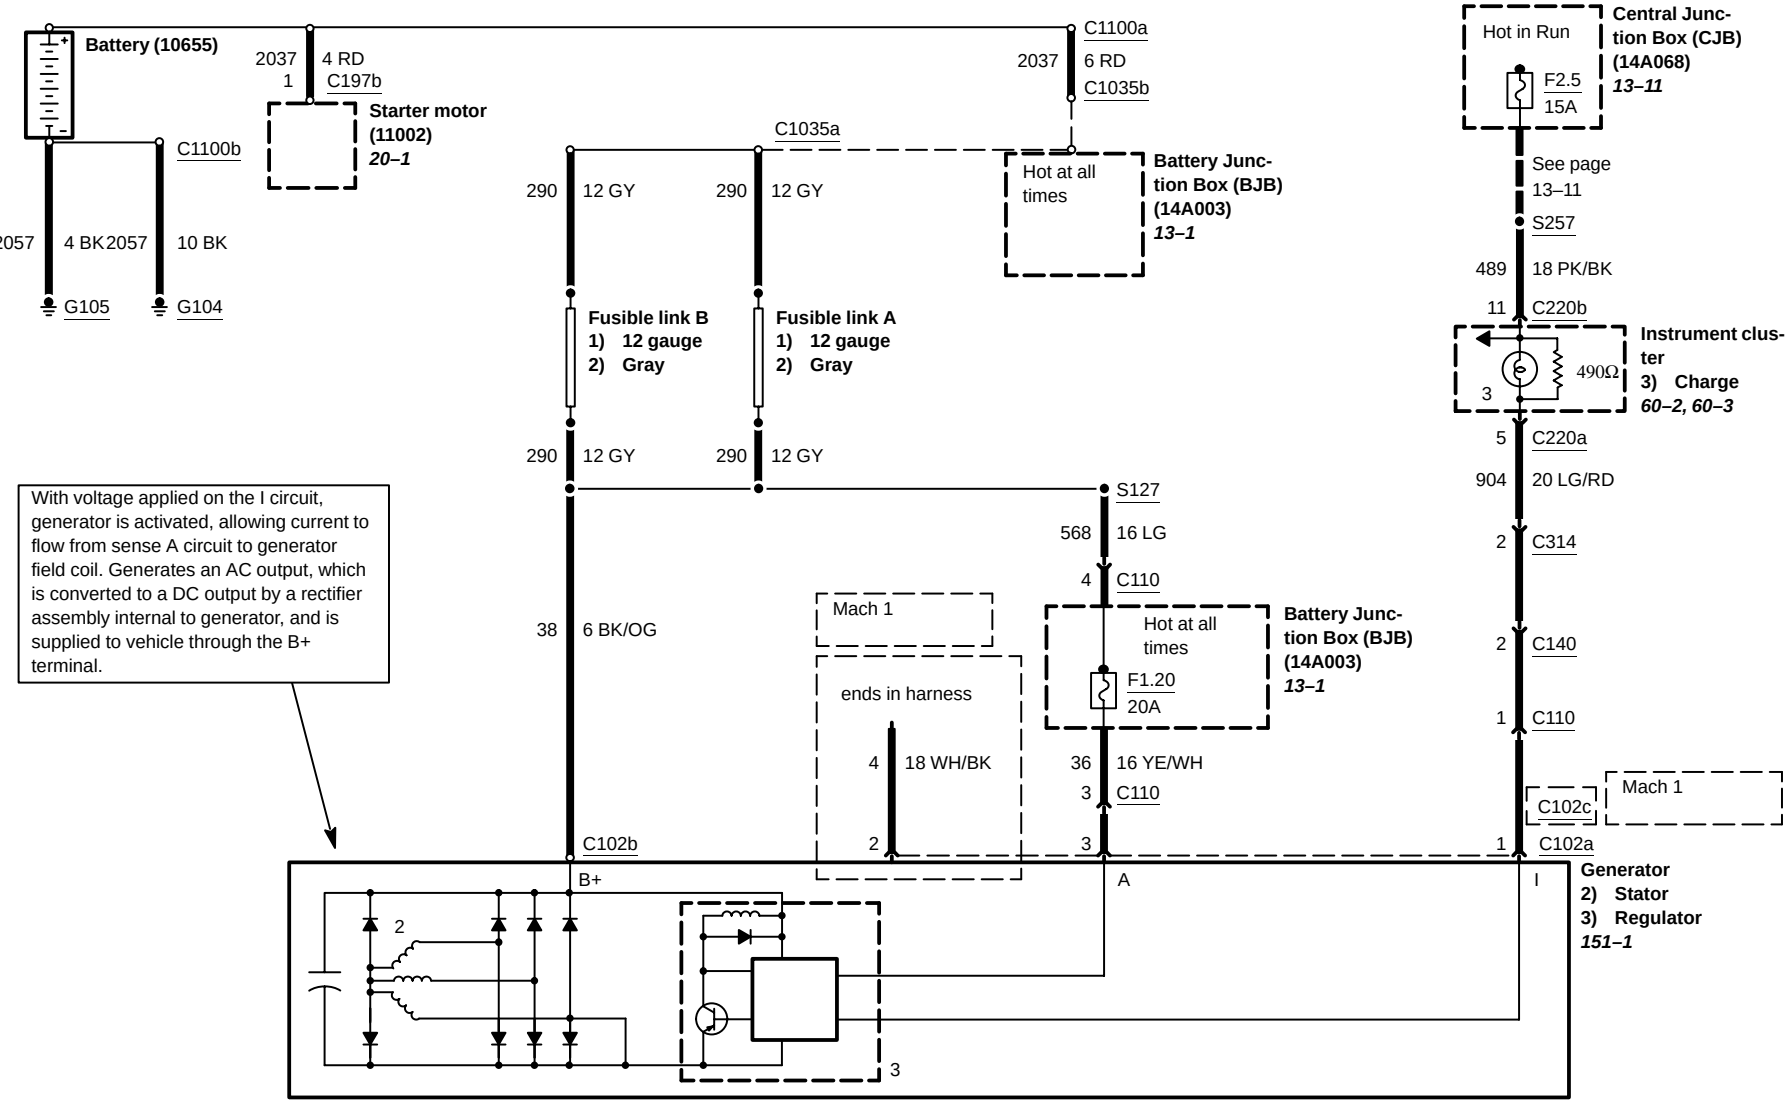
Battery (10655)
2037 1
4 RD
C197b
Starter motor (11002)
20–1
C1100b
2057
4 BK
G105
2057
10 BK
G104
C1100a
2037
6 RD
C1035b
C1035a
290
12 GY
290
12 GY
Hot at all times
Battery Junction Box (BJB) (14A003)
13–1
Fusible link B
1) 12 gauge
2) Gray
Fusible link A
1) 12 gauge
2) Gray
290
12 GY
290
12 GY
With voltage applied on the I circuit, generator is activated, allowing current to flow from sense A circuit to generator field coil. Generates an AC output, which is converted to a DC output by a rectifier assembly internal to generator, and is supplied to vehicle through the B+ terminal.
S127
568
16 LG
4
C110
38
6 BK/OG
Mach 1
ends in harness
4
18 WH/BK
2
Hot at all times
F1.20
20A
Battery Junction Box (BJB) (14A003)
13–1
36
16 YE/WH
3
C110
C102b
B+
A
C102a
I
Generator
2) Stator
3) Regulator
151–1
2
3
Hot in Run
F2.5
15A
Central Junction Box (CJB) (14A068)
13–11
See page 13–11
S257
489
18 PK/BK
11
C220b
Instrument cluster
3) Charge
60–2, 60–3
490Ω
3
5
C220a
904
20 LG/RD
2
C314
2
C140
1
C110
C102c
Mach 1