29-1 TRANSMISSION CONTROLS
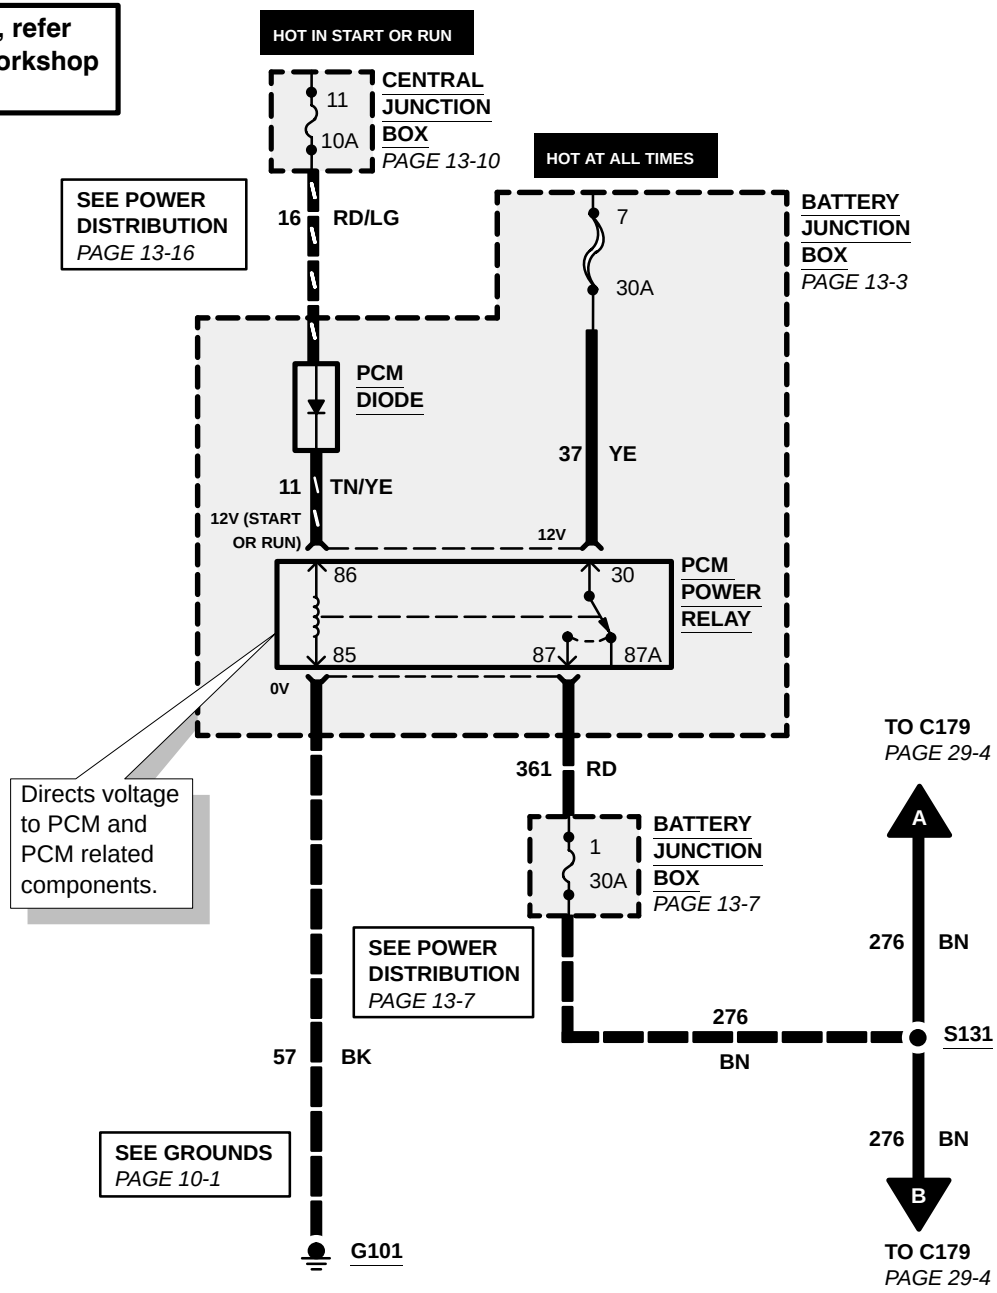
For diagnostic information, refer to Section 307-01 of the Workshop Manual.