C508 (WH)

14B188

N416
Master window/door lock/unlock switch

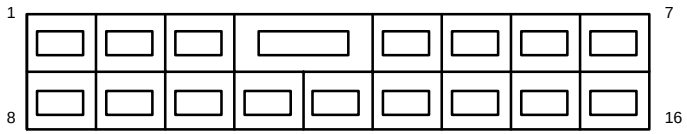

F16057

Pin	Circuit	Circuit function
1	RW03 (RD)	Window motor, feed, closed
2	RW02 (OG/BU)	Window motor, feed, Open
3	ID01 (PK/BK)	Illumination, Ground
4	PD17 (PK)	Illumination, feed
5	RW05 (RD/YE)	Window motor, feed, closed
6	PH19 (GN/OG)	Door unlock, switch sense
7	RW04 (RD/BK)	Window motor, feed, Open
8	PD15 (VT)	Master window adjust switch (14529), feed, Down
9	PD10 (OG)	Window switch, feed, right front, Up
10	PD11 (LG/BK)	Window switch, feed, right front, Down
11	–	not used
12	–	not used
13	PD03 (OG/BK)	Power window relay, switched output
14	PH10 (GN/WH)	Door lock, switch sense
15	PD14 (BU/RD)	Master window adjust switch (14529), feed, Up
16	PDE1 (BK)	Ground

C509 (WH)

14B188

N416
Master window/door lock/unlock switch



F12038

Pin	Circuit	Circuit function
1	PDE1 (BK)	Ground
2	PD15 (VT)	Master window adjust switch (14529), feed, Down
3	ID01 (PK/BK)	Illumination, Ground
4	PH19 (GN/OG)	Door unlock, switch sense
5	PH10 (GN/WH)	Door lock, switch sense
6	PD03 (OG/BK)	Power window relay, switched output
7	PD14 (BU/RD)	Master window adjust switch (14529), feed, Up
8	PD17 (PK)	Illumination, feed
9	–	not used
10	–	not used
11	PD11 (LG/BK)	Window switch, feed, right front, Down
12	PD10 (OG)	Window switch, feed, right front, Up

C510 (WH)

14B188

E122
Door entry lamp, driver side front



F02129

Pin	Circuit	Circuit function
1	LP02 (BN)	Voltage supplied at all times (overload protected)
2	LP92 (WH)	Illuminated entry, Ground