C384

14014

Sliding door contact switch, right



F04229

Pin	Circuit	Circuit function
1	802 (OG/RD)	Speaker, right rear (18808) +
2	117 (PK/BK)	Door lock, output
3	118 (PK/OG)	Door unlock, output
4	803 (BN/PK)	Speaker, right rear (18808) –

C398 (BK)

14014

Sliding door ajar switch, right



F03323

Pin	Circuit	Circuit function
1	54 (LG/YE)	Voltage supplied at all times (overload protected)
2	–	not used
3	53 (BK/LB)	Interior lamps, control

C405 (GY)

14405

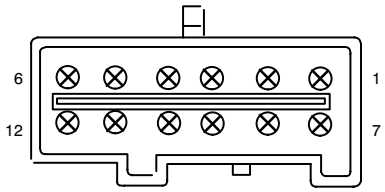

F12149

(1) 884 (YE/BK)
(2) –
(3) 757 (RD/WH)
(4) –
(5) 752 (YE/RD)
(6) 57 (BK)
(7) –
(8) –
(9) 751 (DB/WH)
(10) 753 (YE/RD)
(11) 755 (BN/WH)
(12) –

19949

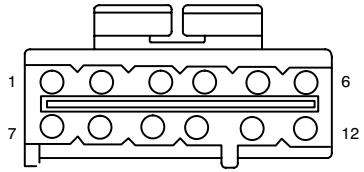

F12151

(1) 884 (YE/BK)
(2) –
(3) 757 (RD/WH)
(4) –
(5) 752 (YE/RD)
(6) 57 (BK)
(7) –
(8) –
(9) 751 (DB/WH)
(10) 753 (YE/RD)
(11) 755 (BN/WH)
(12) –