COMPONENT TESTING PROCEDURE

Connect Battery Positive and Negative to Terminals:	Check Continuity from Terminals:	Continuity Will Be:
85 and 86	30 to 87 and 30 to 87A	From 30 to 87 only
–	85 to All Others	To 86 only
–	30 to All Others	To 87A only

TERMINALS

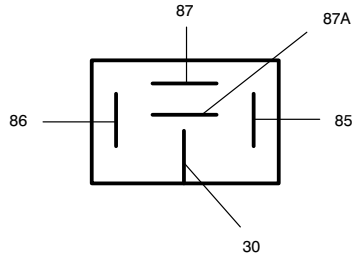

SCHEMATIC

RELAY
CONTACTS CHANGE POSITION WITH CURRENT THROUGH COIL