63-5 INSTRUMENT CLUSTER

2001 CONTINENTAL

The Message Center Switch contains switches that interact with Message Center functions. The Message Center is used for the following modes of display:

- Warning/Status Messages
- Trip Minder
- Autolamp Delay Time
- Cellular Phone
- Feature Menu
- Driver Number
- Vehicle Handling Personality
- System Check

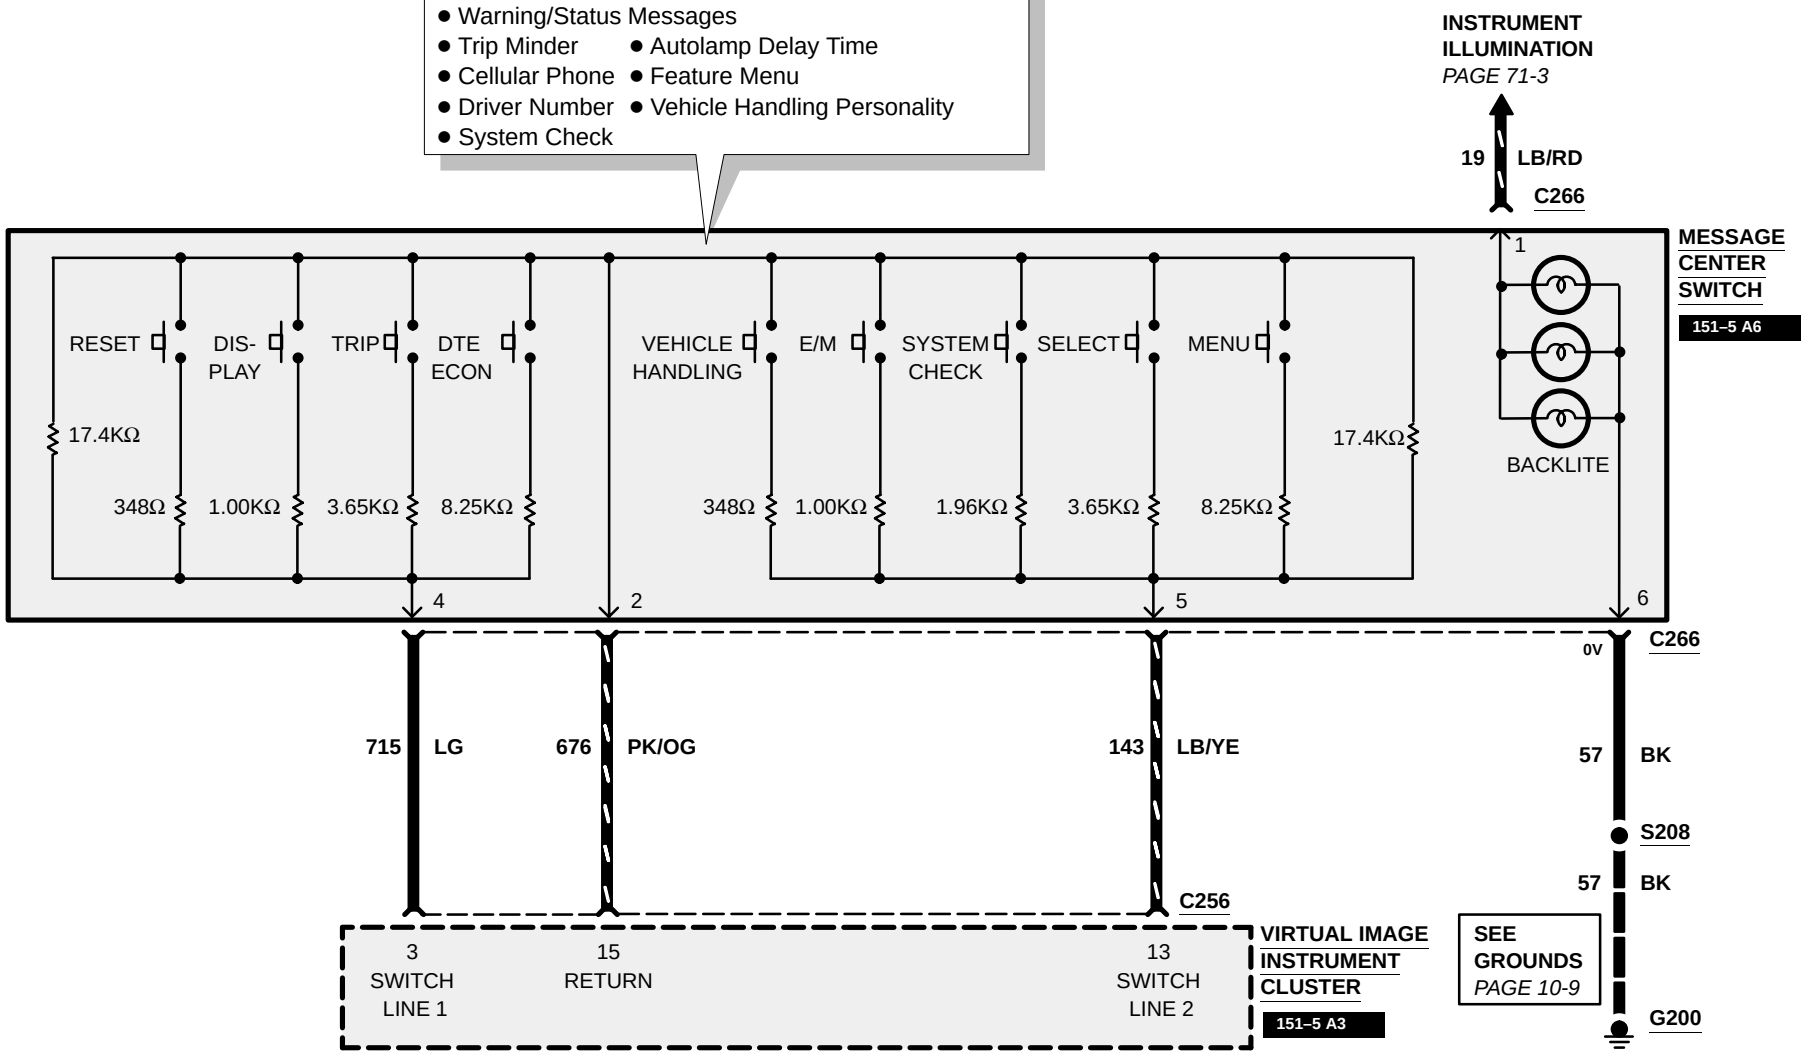

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.