C155

14290

A7
ABS control module

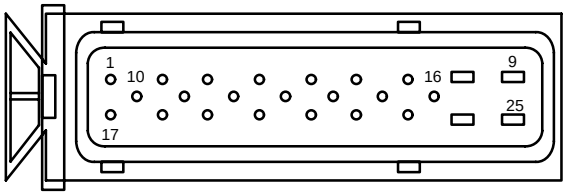

F25007

Pin	Circuit	Circuit Function
1	-	not used
2	511 (LG)	Brake pedal position switch, to stoplamps
3	516 (YE/BK)	Wheel speed sensor, right front -
4	514 (YE/RD)	Wheel speed sensor, right front +
5	-	not used
6	523 (RD/PK)	Wheel speed sensor, right rear +
7	524 (PK/BK)	Wheel speed sensor, right rear -
8	57 (BK)	Ground
9	534 (YE/LG)	Voltage supplied at all times (overload protected)
10	-	not used
11	-	not used
12	-	not used
13	-	not used
14	-	not used
15	603 (DG)	Anti–lock brake indicator, control
16	398 (BK/YE)	Anti–lock brake indicator, control
17	522 (TN/BK)	Wheel speed sensor, left front -
18	521 (TN/OG)	Wheel speed sensor, left front +
19	-	not used
20	677 (LB)	Voltage supplied in Start and Run (overload protected)
21	519 (LG/BK)	Wheel speed sensor, left rear -
22	518 (LG/RD)	Wheel speed sensor, left rear +
23	70 (LB/WH)	ISO Bus
24	57 (BK)	Ground
25	483 (RD)	Voltage supplied at all times (overload protected)

C160

14290

B14
Wheel speed sensor, right front

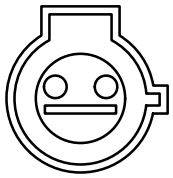

F02299

Pin	Circuit	Circuit Function
1	516 (YE/BK)	Wheel speed sensor, right front -
2	514 (YE/RD)	Wheel speed sensor, right front +

C162

14290

E42
Fog lamp, right front

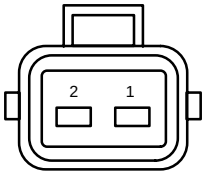

F02301

Pin	Circuit	Circuit Function
1	478 (TN/OG)	Fog lamp switch, to front fog lamp
2	57 (BK)	Ground

C167

12A522

B99
Transmission Range (TR) sensor

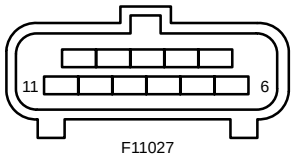

F11027

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	1167 (WH/BK)	Transmission Range (TR) sensor, signal, CC Drive sense
3	140 (BK/PK)	Voltage supplied in reverse
4	1093 (TN/RD)	Power, Hot in Start with Park or Neutral
5	89 (OG)	signal, return
6	1169 (WH/LB)	Transmission Range (TR) sensor, signal, EE Low sense
7	1168 (YE/BK)	Transmission Range (TR) sensor, signal, DD Second sense
8	1166 (YE/RD)	Transmission Range (TR) sensor, signal, BB Neutral sense
9	306 (TN/LB)	Voltage supplied in Start (overload protected)
10	199 (LB/YE)	Transmission Range (TR) sensor, to, Powertrain Control Module (PCM)
11	1165 (WH/RD)	Transmission Range (TR) sensor, signal, AA Park sense