C604 (BK)

14630

Window adjust switch, passenger side

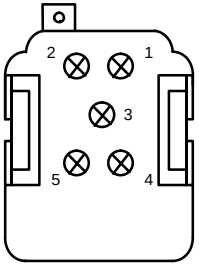

F05017

Pin	Circuit	Circuit function
1	333 (YE/RD)	Window motor, feed, Up
2	314 (TN/LB)	Window switch, feed, right front, Down
3	400 (LB/BK)	Accessory relay, switched power, output
4	313 (WH/YE)	Window switch, feed, right front, Up
5	334 (RD/YE)	Window motor, feed, Down

C605 (GY)

14630

Door lock switch, passenger side (14028)

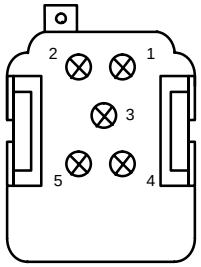

F05017

Pin	Circuit	Circuit function
1	120 (PK/LG)	Door unlock, control
2	–	not used
3	57 (BK)	Ground
4	–	not used
5	119 (PK/YE)	Door lock, control

C608 (GY)

14630

Power window motor, passenger side front (23394)



F02073

Pin	Circuit	Circuit function
1	333 (YE/RD)	Window motor, feed, Up
2	334 (RD/YE)	Window motor, feed, Down