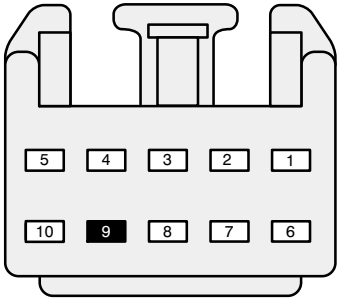

C318

DRIVER HEATED SEAT MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	1061 (BN/LB)	Seat Heating Sensor
2	1020 (DG/VT)	Switch to Module - Cushion Enable
3	1064 (YE/LB)	Seat Heating Element
4	1153 (RD/BK)	Power (Hot at All Times)
5	1067 (VT/LB)	Seat Back Heating Element
6	294 (WH/LB)	Power (Hot in Run)
7	1060 (BK/LB)	Seat Heating Sensor
8	57 (BK)	Ground
9	–	NOT USED
10	461 (OG)	Module to Switch

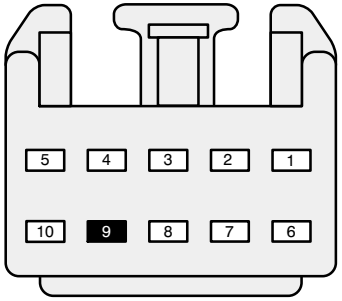

C328

PASSENGER HEATED SEAT MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	1061 (BN/LB)	Seat Heating Sensor
2	1020 (DG/VT)	Switch to Module - Cushion Enable
3	1064 (YE/LB)	Seat Heating Element
4	1153 (RD/BK)	Power (Hot at All Times)
5	1067 (VT/LB)	Seat Back Heating Element
6	294 (WH/LB)	Power (Hot in Run)
7	1060 (BK/LB)	Seat Heating Sensor
8	57 (BK)	Ground
9	–	NOT USED
10	461 (OG)	Module to Switch

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C243	13-22